 



Hardware included / Quincaillerie incluse / Herramientas incluidas



Tools needed / Tools needed / Tools needed



Phillips-head screwdriver / Phillips-head screwdriver / Phillips-head screwdriver

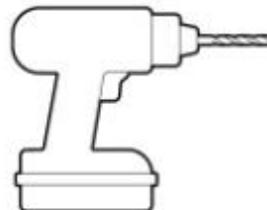


Drill with 1/4 in (6 mm) masonry bit (optional)
Drill with 1/4 in (6 mm) masonry bit (optional)
Drill with 1/4 in (6 mm) masonry bit (optional)

1. Remove the protective wrap. / Remove the protective wrap. / Remove the protective wrap.




2. Twist the battery cover counterclockwise to remove the battery and discard the orange battery insulator. / Twist the battery cover counterclockwise to remove the battery and discard the orange battery insulator. / Twist the battery cover counterclockwise to remove the battery and discard the orange battery insulator.

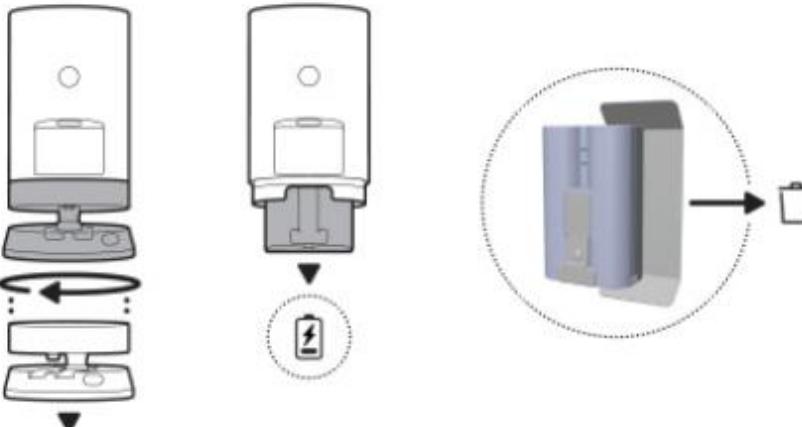


Ziflow®

3. Fully charge the battery. / Fully charge the battery. / Fully charge the battery.

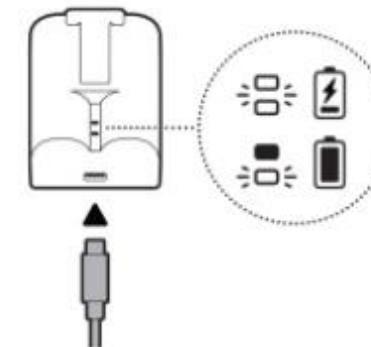


4. Insert the battery and twist to close the battery cover. / Insert the battery and twist to close the battery cover. / Insert the battery and twist to close the battery cover.

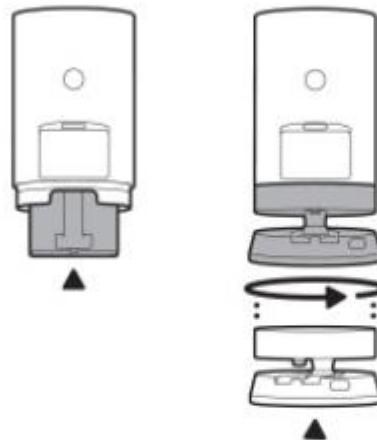


5. Download the Ring app. / Téléchargez l'application Ring. / Descarga la app de Ring.



6. Scan the QR code on your device. / Scan the QR code on your device. / Scan the QR code on your device.

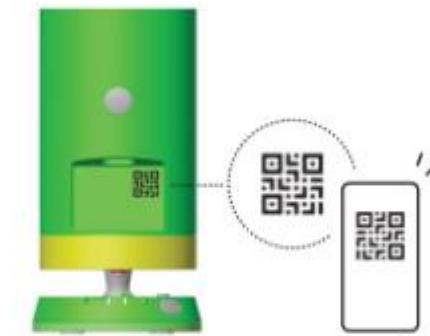

7. Choose a location. / Choose a location. / Choose a location.

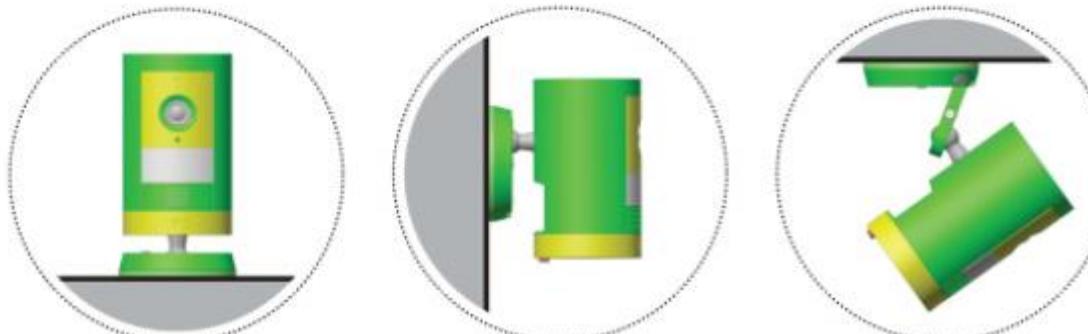

Flat installation / Flat installation / Flat installation


Place your camera on a level surface. / Place your camera on a level surface. / Place your camera on a level surface.



NOTE: For a downward angle, face the longer side of the base toward the front and tilt your camera down accordingly. /

NOTE: For a downward angle, face the longer side of the base toward the front and tilt your camera down accordingly. /

NOTE: For a downward angle, face the longer side of the base toward the front and tilt your camera down accordingly.

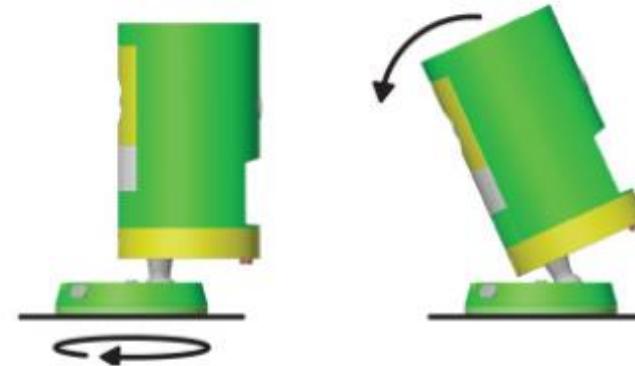


2. Unscrew the camera mount from the battery cover. / Unscrew the camera mount from the battery cover. / Unscrew the camera mount from the battery cover.




Wall installation / Wall installation / Wall installation


1. Unclasp the camera mount. / Unclasp the camera mount. / Unclasp the camera mount.

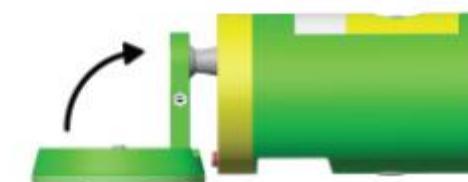



3. Slide to remove the mounting plate from the camera mount. / Slide to remove the mounting plate from the camera mount. / Slide to remove the mounting plate from the camera mount.

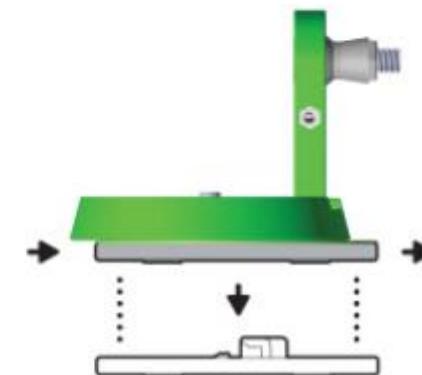


4. Use the mounting plate as a guide to mark screw holes on the wall. / Use the mounting plate as a guide to mark screw holes on the wall. / Use the mounting plate as a guide to mark screw holes on the wall.

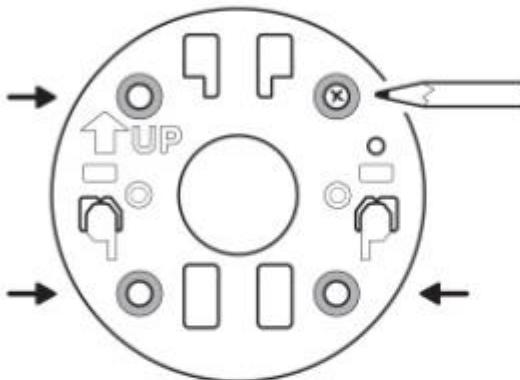

5. Install the mounting plate with the UP arrow pointing up. / Install the mounting plate with the UP arrow pointing up. / Install the mounting plate with the UP arrow pointing up.

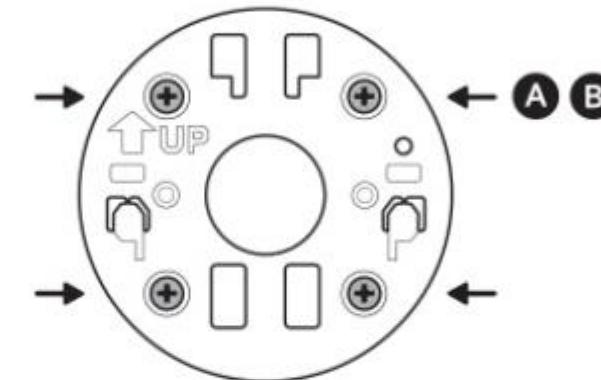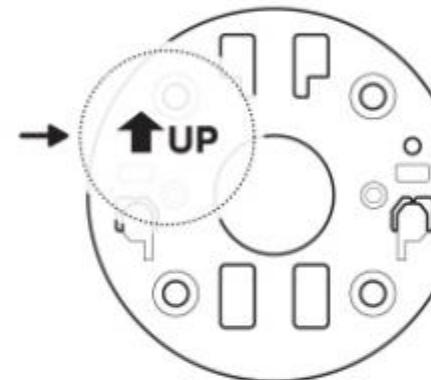


On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors. / On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors. / On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors.

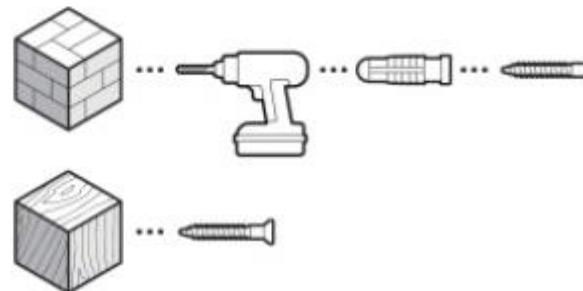


/ Ziflow®



6. Remove the rubber cap on the back of your camera and use it to plug the bottom. / Remove the rubber cap on the back of your camera and use it to plug the bottom. / Remove the rubber cap on the back of your camera and use it to plug the bottom.

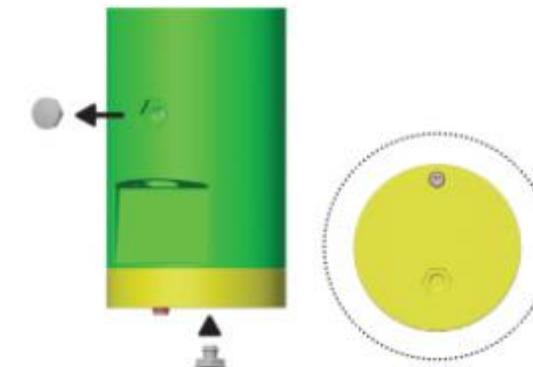



7. Attach the camera mount to the back of your camera with its screw. / Attach the camera mount to the back of your camera with its screw. / Attach the camera mount to the back of your camera with its screw.

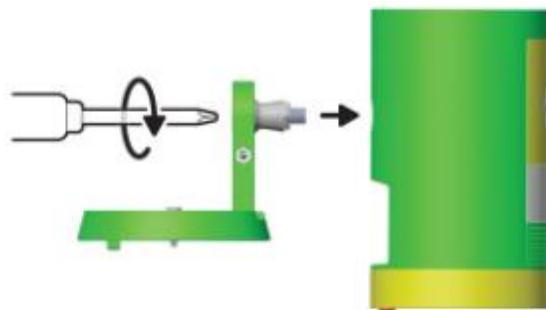


8. Clasp the camera mount and attach your camera to the mounting plate by sliding until you feel a click. / Clasp the camera mount and attach your camera to the mounting plate by sliding until you feel a click. / Clasp the camera mount and attach your camera to the mounting plate by sliding until you feel a click.

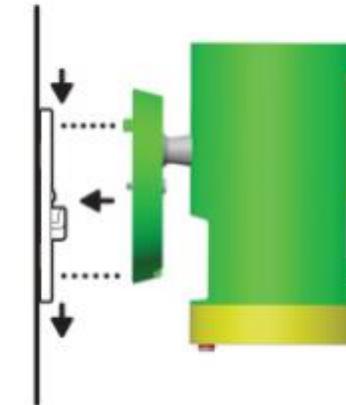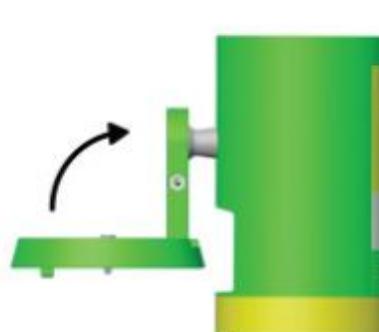


9. Unclasp the camera mount and tighten the security screw. / Unclasp the camera mount and tighten the security screw. / Unclasp the camera mount and tighten the security screw.

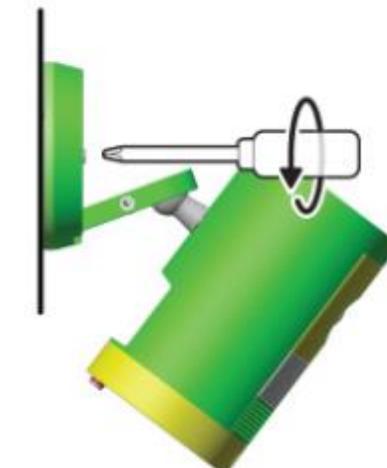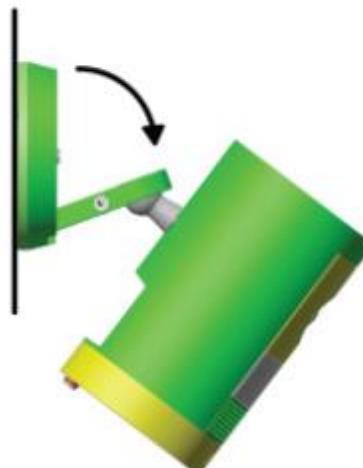



10. If installing outside, tighten the **1** security screw on the battery cover. / If installing outside, tighten the security screw on the battery cover. / If installing outside, tighten the security screw on the battery cover.

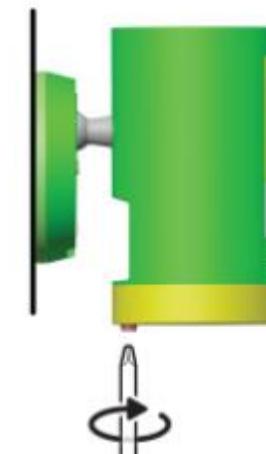

(Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap. / (Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap. / (Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap.

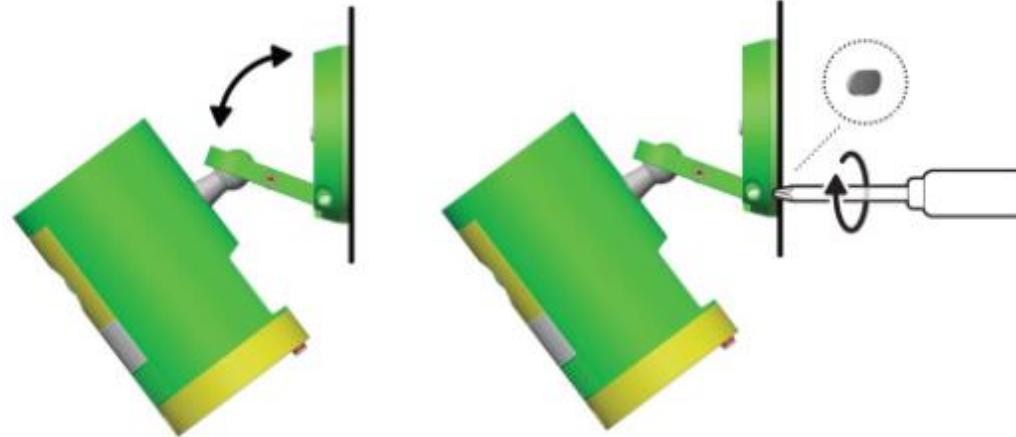


11. Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place. / Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place. / Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place.

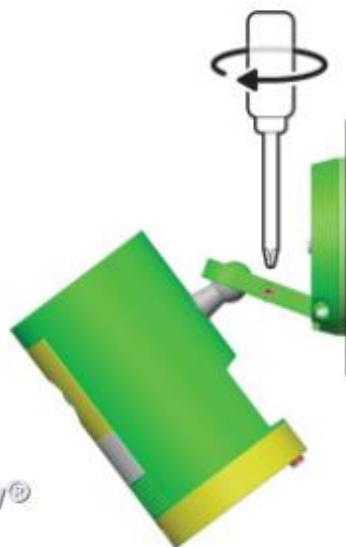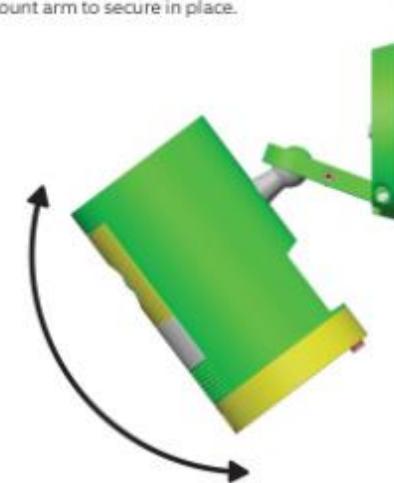


Ceiling installation / Installation au plafond / Installation au plafond


1. Undasp the camera mount. / Unclasp the camera mount. / Undasp the camera mount

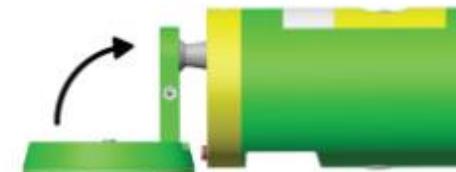


2. Unscrew to detach the camera mount from the battery cover. / Unscrew to detach the camera mount from the battery cover. / Unscrew to detach the camera mount from the battery cover.

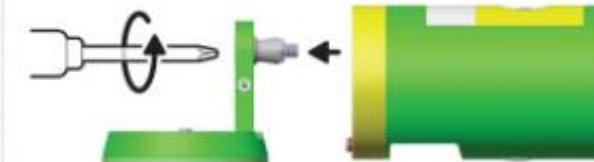

3. Slide to remove the mounting plate from the camera mount. / Slide to remove the mounting plate from the camera mount. / Slide to remove the mounting plate from the camera mount.


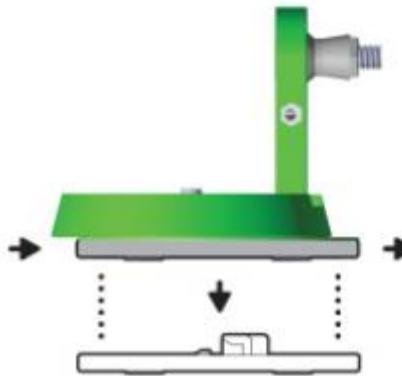


4. Use the mounting plate as a guide to mark screw holes on the wall. / Use the mounting plate as a guide to mark screw holes on the wall. / Use the mounting plate as a guide to mark screw holes on the wall.

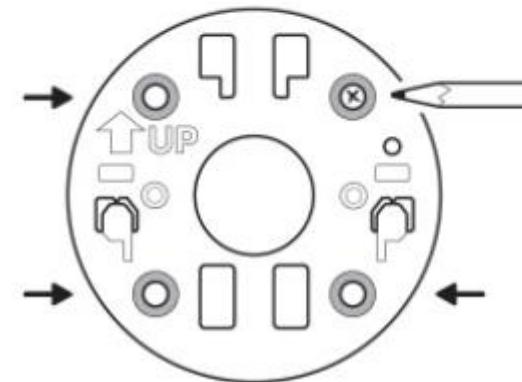


NOTE: For best results, avoid locations with nearby objects that can interfere with your camera's field of view. / **NOTE:** For best results, avoid locations with nearby objects that can interfere with your camera's field of view. **NOTE:** For best results, avoid locations with nearby objects that can interfere with your camera's field of view.


5. Install the mounting plate with the UP arrow pointing opposite of your desired viewing direction. / Install the mounting plate with the UP arrow pointing opposite of your desired viewing direction. / Install the mounting plate with the UP arrow pointing opposite of your desired viewing direction.

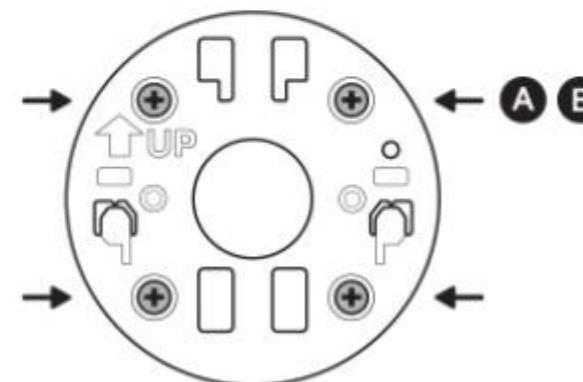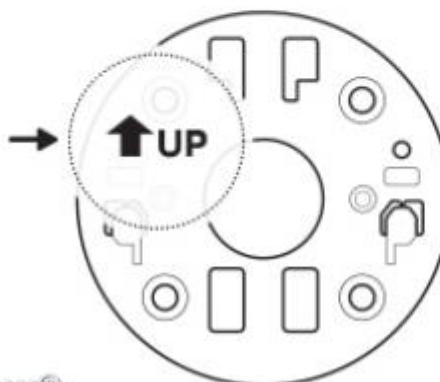


On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors. / On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors. / On stucco, brick, or concrete, use a 1/4 in (6 mm) masonry bit to drill holes for the included wall anchors.

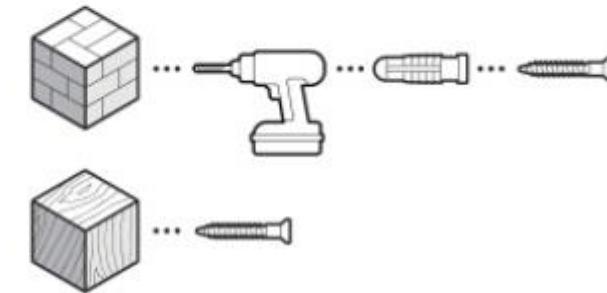

6. Remove the rubber cap on the back of your camera and use it to plug the bottom. / Remove the rubber cap on the back of your camera and use it to plug the bottom. / Remove the rubber cap on the back of your camera and use it to plug the bottom.

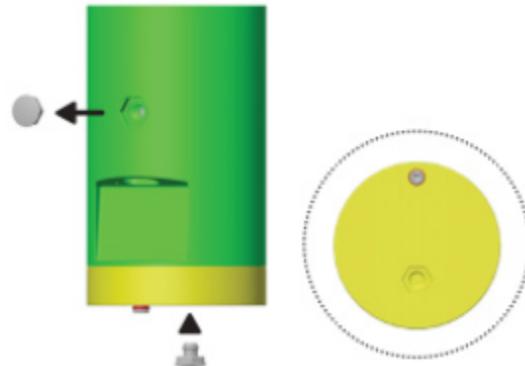


7. Attach the camera mount to the back of your camera with its screw. / Attach the camera mount to the back of your camera with its screw. / Attach the camera mount to the back of your camera with its screw.

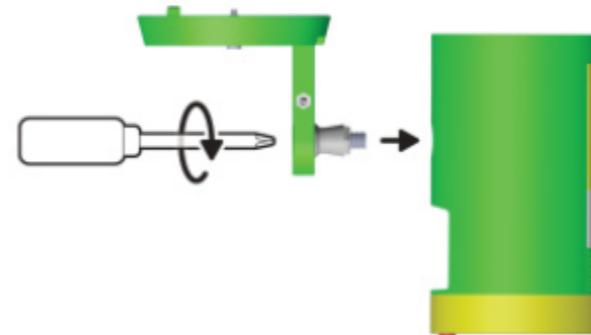


8. Secure your camera to the mounting plate by sliding until you feel a click. / Secure your camera to the mounting plate by sliding until you feel a click. / Secure your camera to the mounting plate by sliding until you feel a click.


NOTE: Your camera should be in an upright position. /
NOTE: Your camera should be in an upright position. /
NOTE: Your camera should be in an upright position.

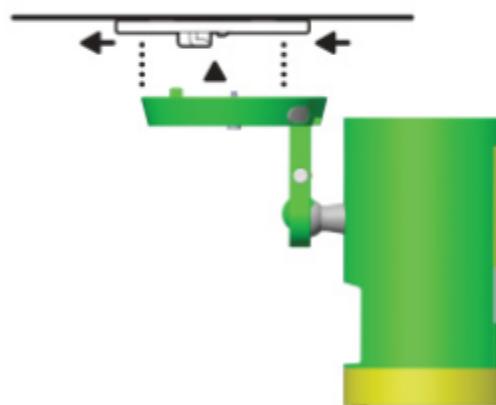



9. Tighten the security screw on the camera mount. / Tighten the security screw on the camera mount. / Tighten the security screw on the camera mount.

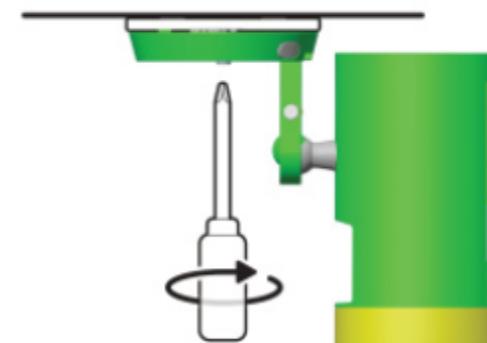


10. If installing outside, tighten the security screw on the battery cover. / If installing outside, tighten the security screw on the battery cover. / If installing outside, tighten the security screw on the battery cover.

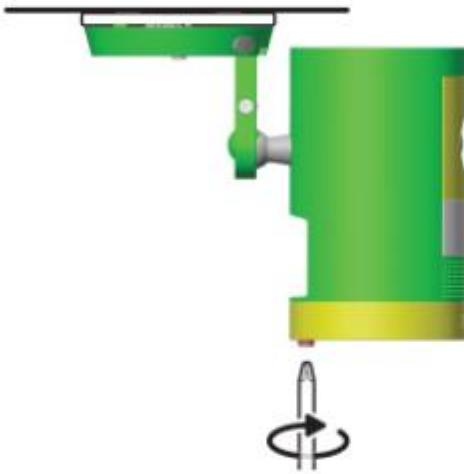

(Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap. / (Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap. / (Optional) Adjust your camera's position, then remove the rubber cap at the base of the camera mount and tighten the screw to secure in place. Replace the rubber cap.

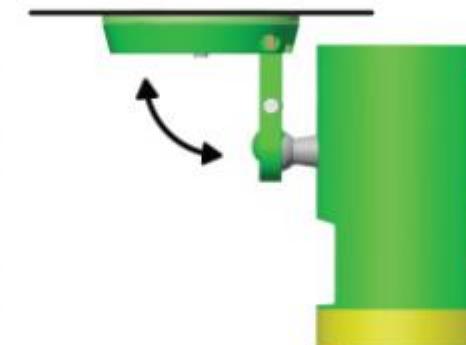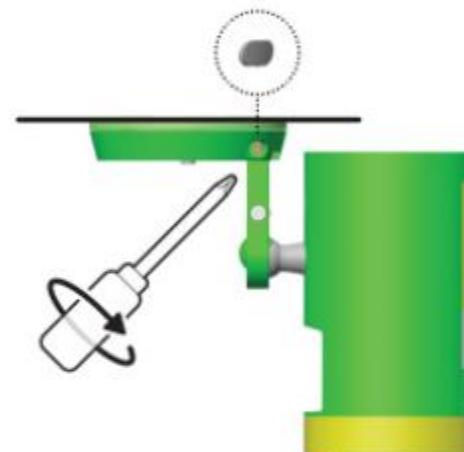

11. Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place. / Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place. / Adjust your camera's angle, then tighten the screw on the camera mount arm to secure in place.

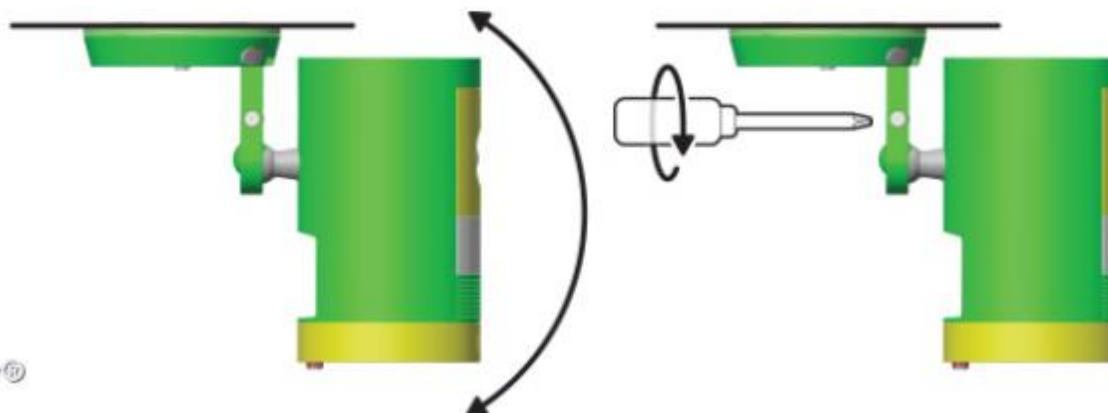

ring.com/callus



ring.com/help