

SHARPER IMAGE® TRAVEL KEYBOARD

CONGRATULATIONS ON YOUR NEW TRAVEL KEYBOARD.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

SAFETY WARNINGS

PLEASE READ BEFORE USE.

- Not a children's item. Keep out of the reach of children.
- Do not expose to water or extreme temperatures.
- Avoid sudden impacts to keyboard.
- Avoid placing heavy weights on keyboard. Do not bend or crush.
- Do not use near microwaves.
- Use this product only for its intended purpose. Do not use with attachments of any kind.
- This product has no user serviceable components. Do not disassemble.
- For household use only.
- Thoroughly inspect all parts of this product before every use. If any parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.

⚠ RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

MAINTAINING BATTERY HEALTH

- Your Travel Keyboard is designed with a lithium polymer battery (non-replaceable) for cordless convenience, increased operating duration per charge, and frequent use and recharging.
- To maintain charge capacity and prevent battery damage, all lithium polymer batteries must be regularly used and recharged.
- All batteries naturally lose charge when not in use. If you will not be using the Travel Keyboard for an extended period, check the Travel Keyboard at least every 30 days to ensure the battery is at approximately 50% state of charge. Recharge as needed to maintain a 50% state of charge.
- IMPORTANT: Do NOT store the battery for an extended period with above 66% or below 33% state of charge. An incorrect state of charge during storage could irreparably damage the battery and may result in reduced charge capacity, inability to maintain charge, failure to recharge, or complete inoperability of the Travel Keyboard.
- For the health of the battery, always store the Travel Keyboard in a cool, dry place. The storage location should have a consistent temperature between 40°F and 70°F (5°C and 20°C) as well as a relative humidity at 70% or lower.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WHAT YOU GET

- Travel Keyboard
- USB-C Charging Cable

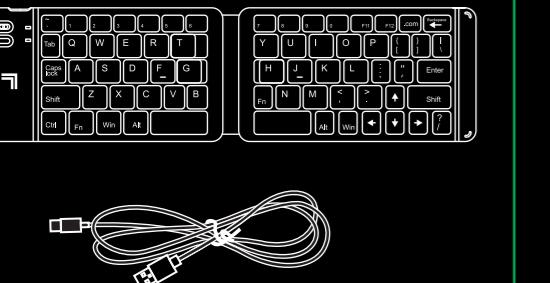

LAYOUT

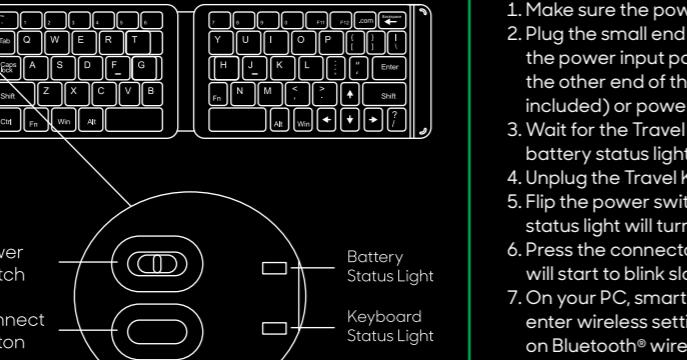


GETTING STARTED

1. Make sure the power switch is in the off position.
2. Plug the small end of the USB-C charging cable into the power input port on the Travel Keyboard and plug the other end of the cable into a power adapter (not included) or powered USB port.
3. Wait for the Travel Keyboard to fully charge. The battery status light will turn off.
4. Unplug the Travel Keyboard from the power source.
5. Flip the power switch to the on position. The keyboard status light will turn off in three seconds.
6. Press the connector button. The keyboard status light will start to blink slowly.
7. On your PC, smartphone, or tablet, enter the settings, enter wireless settings or connections, and then turn on Bluetooth® wireless.
8. Select "Bluetooth Keyboard" in the device menu. The keyboard status light will turn off when pairing is successful.

TIPS

- Compatible with Android 3.0, iOS 4.0, Windows XP, and newer versions of each.
- Computers, tablets, and smartphones must be equipped with Bluetooth wireless technology to connect to the Travel Keyboard. Uses Bluetooth 3.0 to connect wirelessly from a distance of up to 32 feet (10 meters).
- Fold the Travel Keyboard to pack easily for use on the go.
- Once paired with a device, the Travel Keyboard will automatically reconnect when powered on as long as Bluetooth is still enabled on the paired device.
- To wake the Travel Keyboard from sleep mode, press any key and wait 3 seconds. It will enter sleep mode to preserve battery life after 10 minutes of inactivity.

SHORTCUTS

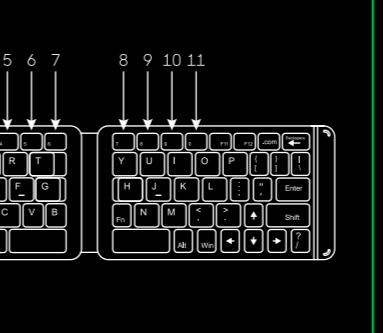

No.	Fn +	Android	Apple	Windows
1	Home	Return to home	Return to home	Previous page
2	Search	Open search	Open search	Open search
3	Ctrl + A	Select all	Select all	Select all
4	Ctrl + C	Copy	Copy	Copy
5	Ctrl + V	Paste	Paste	Paste
6	Ctrl + X	Cut	Cut	Cut
7	Back	Previous track	Previous track	Previous track
8	Forward	Play/pause	Play/pause	Play/pause
9	Next	Next track	Next track	Next track
10	Volume down	Volume down	Volume down	Volume down
11	Volume up	Volume up	Volume up	Volume up
12	Fn + F12	n/a	Virtual keyboard	n/a
13	Fn + F11	Previous page	n/a	n/a

BC

SHARPER IMAGE® NAME AND LOGO (INCLUDING THE 77 LOGO) ARE TRADEMARKS OR REGISTERED TRADEMARKS, DISTRIBUTED BY AND © 2023 MERC SOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL
1-800-374-2744.

MODEL NO.: 018529

Printed in China.