


billboard®

TRUE WIRELESS EARBUDS for use with Bluetooth® enabled devices

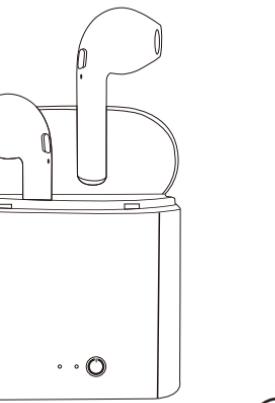

True Wireless Earbuds
USER MANUAL




Model:BB1834

Introduction


Thank you for purchasing the Billboard® True Wireless Earbuds. For best use of this device we recommend carefully reading this user manual and keeping it for your records.

Package Contents

- a. True Wireless Earbuds
- b. Micro USB charging cable
- c. Charging case
- d. Instruction manual

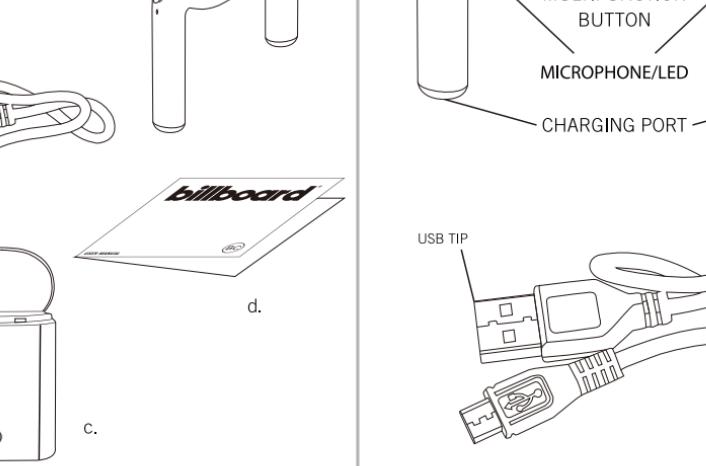

Device Guide

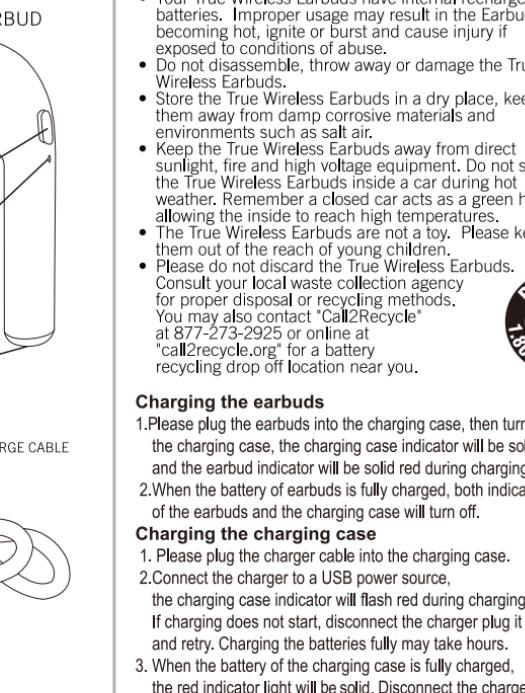

Device Safety

- Your True Wireless Earbuds have internal rechargeable batteries. Improper usage may result in the Earbuds becoming hot, ignite or burst and cause injury if exposed to conditions of abuse.
- Do not disassemble, throw away or damage the True Wireless Earbuds.

• Store the True Wireless Earbuds in a dry place, keeping them away from damp corrosive materials and environments such as salt air.

• Keep the True Wireless Earbuds away from direct sunlight, fire and high voltage equipment. Do not store the True Wireless Earbuds inside a car during hot weather. Remember a closed car acts as a green house allowing the inside to reach high temperatures.

-

The True Wireless Earbuds are not a toy. Please keep them out of the reach of young children.

• Please do not discard the True Wireless Earbuds.

Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.

- *

Once the Earbuds have been paired, they will automatically pair with each other and your device, when they are powered on and Bluetooth™ is already activated on your device.

Charging the earbuds

1. Please plug the earbuds into the charging case, then turn on the charging case, the charging case indicator will be solid blue and the earbud indicator will be solid red during charging.
2. When the battery of earbuds is fully charged, both indicators of the earbuds and the charging case will turn off.

Charging the charging case

1. Please plug the charger cable into the charging case.
2. Connect the charger to a USB power source, the charging case indicator will flash red during charging.

If charging does not start, disconnect the charger plug it in again, and retry. Charging the batteries fully may take hours.

3. When the battery of the charging case is fully charged, the red indicator light will be solid. Disconnect the charger from the USB power source and the charging case.

FCC Information

FCC ID: 2AEW6-TE1834

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV/technician for help.

Answering Calls

- Answer an incoming call by short pressing the Multifunction button on either side.
- Refuse an incoming call by press 2 seconds on the Multifunction button.

• Redial the last number used by the device by double-clicking the Multifunction button during earbuds paired with the device.

- When there is a phone call, you can just hear the ringing from the master of the earbuds, either side multifunction button can answer/ hang up/ change answer mode/reject the phone call.

Pairing One Earbud

1. Long press the multifunction button on either side until the LED flashes red.
2. Activate the Bluetooth™ feature on your phone, and set the phone to search for wireless devices. (See the User Manual for your device)
3. Tap the Earbuds on your device displayed as BB-BT-EB and the indicator turns off. (if pass code is requested enter 0000)

Pairing Two Earbuds

1. Long press 2-3 seconds the multifunction button on both of the earbuds to power on then two earbuds will paired automatically in 8-15 second. If two earbuds paired, LED indicator of the master will blink blue and red, LED indicator of the other one(slave)will turn off.
2. Activate the Bluetooth™ feature on your device, and set the device to discovery mode to search for wireless devices.
3. Tap the Earbuds on your device displayed as BB-BT-EB. then led indicator of the master will turn off, the earbuds are connected to your device successfully.
4. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Playing Music

 
1. Once the Earbuds are paired, press play on your device.
2. Short press the Multifunction button to pause music, and press again to play.

Technical Support

techsupport@esicellular.com or call (212) 883-8383

Warning:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.

Power Off

- Press the Multifunction button on either side until the LED flashes red.

If there is not paired, the earbuds will turn off automatically after 5 minutes.

Battery Information

Your earbuds are powered by a rechargeable battery.

The full performance of new batteries is achieved only after two to three complete charge and discharge cycles. The batteries can be charged and discharged hundreds of times, but it will eventually wear out.

- Do not leave a fully charged earbuds connected to a charger, overcharging may shorten their lifetime. If left unused, fully charged earbud batteries will lose their charge over time.

2. Activate the Bluetooth™ feature on your device, and set the device to discovery mode to search for wireless devices.

- 3. Tap the Earbuds on your device displayed as BB-BT-EB. then led indicator of the master will turn off, the earbuds are connected to your device successfully.

4. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Technical Support

techsupport@esicellular.com or call (212) 883-8383

Limited Warranty

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container, to the original purchaser, will free from defects in workmanship and materials for one year and agrees that it will, at its option, repair or replace the defective product or part thereof free of charge to the purchaser for parts or labor for the time period described.

This warranty does not apply to any appearance items of the product, to the additional excluded items set forth above to any product the exterior of which has been damaged or defaced, which has been subjected to misuse, abnormal service or handling, or which has been altered or modified in design or construction. The limited warranty described herein is in addition to any applicable law.

ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales person, nor any other person is authorized to make any warranties other than those described herein to extend the duration of any warranties beyond the time period described herein on behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser. Corrections of defects, if any, made during the period of time described herein, shall not constitute complete fulfillment of all implied and/or responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall not constitute full satisfaction of any claim, whether based on contract, negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Send device with the product to:

ESI Cases and Accessories

4, East 32nd Street, 6th floor

New York, New York 10016

* Enclose proof of purchase and \$1.95 for shipping and handling.

