

460x130 mm

正面

SOUNDLOGIC XT

NCE-12/2390

ANC & ENC BLUETOOTH TWS STEREO EARBUDS WITH LED DISPLAY



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting Started

- Remove the product from the packaging.
- Please retain all packaging after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Active Noise Cancellation & ENC Bluetooth TWS Stereo Earbuds
- Charging Case
- USB Charging Cable
- 2 extra pairs of silicone tips
- Instruction Manual


Features

- Active Noise Cancellation & ENC Bluetooth TWS Stereo Earbuds with LED Display
- LED display - shows remaining battery capacity on Charging Case
- ANC - noise cancellation of 18dB of ambient noise
- Supports 3 modes - normal, transparency & ANC mode
- Supports Android or iOS
- Built-in 4 Microphones provide clear call-quality
- Optimized for Google Assistant and Siri
- Built-in long lasting 30mAh on each Earbud and 300mAh for Charging Case
- Charging time less than 2 hours, play time with ANC up to 4 hours for each full charge; without ANC up to 5 hours; standby time up to 100 hours
- Type-C charging port, Type-C charging cable included

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids. Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it has been dropped or damaged in any way. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Do not use the unit with wet hands. Do not put objects into any of the openings. Keep the unit free from dust, lint etc. Do not use this unit for anything other than its intended use. Keep the unit out of reach of children. This product is not a toy. Do not use the headset at excessive volume levels, as damage to hearing may occur.

Description of Parts:

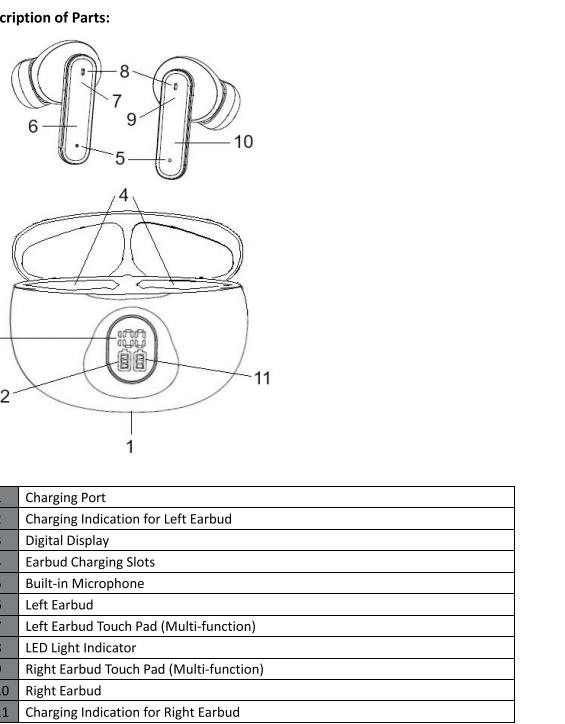

INSTRUCTIONS FOR USE

Charging Instructions

The Charging Case and Bluetooth Earbuds come with built-in rechargeable battery. Before using it for the first time you're recommended to charge the battery fully. Please recharge the battery by following either one of the methods below, every time they need to be recharged.

To charge the Charging Case (without Bluetooth Earbuds)

Plug the Type-C end of the included USB charging cable into the charging port of the

steps.

- Once you have paired the Bluetooth Earbud with a mobile device, the Earbud will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
- The Bluetooth Earbud will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Touch Pad to answer an incoming call.
Reject incoming Call	Incoming Call	Long press the Touch Pad
End call	Incoming Call	After your phone conversation, short press the Touch Pad

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Volume increase	Playing music	Short press the Touch Pad three times
Pause	Playing music	Short press the Touch Pad will pause the music
Play	Pausing	Short press the Touch Pad will resume the music
Next track	Playing music	Short press the Touch Pad of Earbud twice

Note: An indication tone will alert you when the volume is set to maximum level. Other functions including volume decrease and previous track will need to adjust on your device.

Active Noise Cancelling (ANC) mode:

The noise cancel is disabled by default.

- Press and hold the touch pad of the Earbud for 1 second and release, it will enable the Transparency mode. This allows you to attend to your environment without turning off the music or removing the Earbuds.
- Press and hold the touch pad of the Earbud again for 1 second and release, it will activate the ANC (Active Noise Cancelling) mode, this will filter out the background noise to allow you to enjoy your music even more.
- Press and hold the touch pad of the Earbud the third time for 1 second and release, it will disable the ANC mode.

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Don't expose the device to extremely high or low temperature as this will shorten the life

of electronic devices, destroy the battery or distort certain plastic parts.

- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer's warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: The warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There will be no claim for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's/Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned, comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

反面

6

7

8

9

call

Reject Incoming Call

End call

Earbud to answer an incoming call.

Long press the Touch Pad of one Earbud for

After your phone conversation, short press the Touch Pad of one Earbud

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function

Operation

Button

Function	Operation	Button
Volume increase	Playing music	Short press the Touch Pad of left Earbud three times
Volume decrease	Playing music	Short press the Touch Pad of right Earbud three times
Pause	Playing music	Short press the Touch Pad of one Earbud will pause the music
Play	Pausing	Short press the Touch Pad of one Earbud will resume the music
Next track	Playing music	Short press the Touch Pad of left Earbud twice
Previous track	Playing music	Short press the Touch Pad of right Earbud twice

Note: An indication tone will alert you when the volume is set to maximum level.

Pairing both Bluetooth Earbuds with Bluetooth devices (phone or tablet that support call-answering)

- Remove one of the Earbuds from the Charging Case, it will turn on automatically and the LED flashes blue and white alternatively (Or, if both Earbuds are not stored inside the Charging Case, long press the touch pad of the Earbud to turn ON. An indication tone will be heard and the LED flashes blue and white alternatively).
- After few seconds, you would hear another indication tone when both Earbuds are connected together. The LED light indicator on one Earbud will flash blue and white, and the LED light indicator on the other Earbud will turn off.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the "SL ANC TWS Earbuds" from the list of available Bluetooth devices.
- You might be prompted with "Pair with SL ANC TWS Earbuds?" message on your source device, with "Cancel" and "OK" options. Please select "OK".
- Once paired successfully, an indication tone will be heard and the LED on both units will turn off.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
Answer incoming	Incoming Call	Short press the Touch Pad of one

5

6