

G5500 Smartphone



Contents

General Safety Instructions	3
General Safety Instructions (Cont.)	4
Product Overview	5
Product Overview (Cont.)	6
Getting Started	
• Before first use, Micro SD Card, SIM Card, Inserting the SIM card(s) and battery	7
• Charging, Power Button, Volume, Linking with your Google account	8
• SIM management	9
Operation	
• Entering your PIN, Screen operation	11
• Phone calls	13
• Contacts	18
• Messaging	19
• Applications and widgets, Add and manage desktop icons	20
• Changing the wallpaper	22
• Connect with computer	23
• Browsing the internet	24
• Download and install applications from Play Store, Uninstall applications	25
Settings	
• Wireless and networks	26
• <i>Bluetooth</i> Wireless Technology	28
• Device	29
• Personalisation	30
• System, Camera, Downloaded files management	34
Specifications	35
Repair and Refurbished Goods or Parts Notice	36

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Handling and maintenance

- **Water:** Ensure that this product does not get wet, protect it from water splashes, rain, excessive humidity and sweat. Contact with water will cause the phone to short-circuit, corrode or cause electric shock. Do not use it where it can fall into water (such as near a pool, pond, bath etc.). Do not use it with wet hands. Do not immerse it in water. Do not turn it on if it is wet. Do not try to dry it in a microwave oven.
- **Handling:** To avoid damaging the phone, battery or charger, do not drop it or shake it vigorously as this may cause device or battery failure, fire or explosion.
- **Repair:** This device is a high precision electronic product. It contains no user-serviceable parts inside. Do not try to dismantle, modify or repair the device or charger yourself. Any modifications could void your warranty.

Usage environment

- **Environment:** Do not use this product where it is excessively hot, cold, dusty or humid, or where it is exposed to strong magnetic fields or long periods of sunshine. Exposure to very low or very high temperatures may cause device or battery failure, fire or explosion.
- **Heat sources:** Do not leave the product near any heat sources, stoves, ovens or other appliances (including amplifiers) that produce heat.
- **Interference:** Do not use the phone near other electronic devices that use radio frequency signals. Avoid using it within a 15cm range of a pacemaker (if you have a pacemaker, do not carry the phone in a breast pocket).

Safety

- **Road safety:** Obey all local laws and regulations on the use of mobile devices in the area where you drive. Give full attention to driving and the road. Keep your hands free to operate the vehicle at all times; use hands-free operation or an earpiece if phone usage is required.
- **Health facilities:** Observe relevant rules or regulations regarding mobile phone use in health facilities. Turn off the phone in the vicinity of medical devices and wherever directed to do so by posted signs. Mobile phone radiation may interfere with pacemakers, hearing aids and other medical equipment.
- **Aircraft:** Turn off the smartphone when boarding an airplane in order to avoid interference with aircraft radio signals.
- **Magnetic equipment:** Stay away from magnetic equipment to avoid the risk of interfering with or erasing the information stored on the device.
- **Volume:** Always select the appropriate volume when using the music or video function. The volume should not be too loud when using earphones.
- **Explosive environments:** Turn off the phone in blasting areas and in any potentially explosive environment (such as at a petrol station or other refuelling points).
- **Back-up:** To avoid loss of data, we recommend always backing up any important information, especially before upgrading the hardware. We assume no liability for any damage and/or data loss due to lack of back-up.
- **Flashlight:** Do not use the flashlight close to the eyes of people or pets.

Accessories

- **Accessories:** Only use the device with the Micro USB cable and battery charger supplied. Use of other accessories not recommended in this manual may cause damage to the unit and void your warranty.
- **Battery charger:** Only use the charger provided. Do not use the phone while it is charging. Do not drop or cause an impact to the charger.
- **Battery handling:** Do not expose the battery to high temperatures. Take care when handling a charged battery, particularly when placing it inside your pocket, purse or other container with metal objects.
- **Power cord:** Do not bend or damage the cable of the battery charger.

General Safety Instructions (Cont.)

- **Damage:** Do not use the charger if the cable or plug are damaged. In case of damage, contact the after sales support line for advice.
- **Disconnect:** Grip the plug when disconnecting the charger; do not pull on the cord.
- **Memory card:** Always handle the phone's memory card(s) with care. Protect the card(s) from static electricity and strong shocks.

Usage conditions and restrictions

- **Packaging:** Plastic packaging materials can present a suffocation hazard for young children and babies. Keep all packaging materials out of children's reach to ensure they do not play with these.
- **Personal usage:** Do not use this product for anything other than its intended purpose, and only use it as described in this manual.
- **Restricted usage:** The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety.
- **Children:** This phone is not a toy. Keep the phone, battery and charger away from young children. Supervise young children when the phone is going to be used by or near young children.
- **Cleaning:** Clean the housing of the device lightly with a dry cotton cloth. Do not use alcohol, thinners, benzene or any other chemical cleaning solutions.
- **Lost phone:** We recommend you inform your telecommunications service provider to block your SIM card(s) when your phone is lost. You may also want to ask them to block the phone's IMEI number(s), these are printed on a label inside the phone underneath the battery. Please note down these numbers so you have them handy in case your phone is lost.
- **Disposal:** When discarding this device, observe local regulations and dispose of it appropriately for recycling. Never dispose of the battery in a fire. Contact your local authorities for advice on facilities.
- **Noncompliance:** We accept no liability for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

Product Overview



Product Overview (Cont.)



- | | |
|----|--------------------|
| 14 | Rear Camera |
| 15 | Camera Flash |
| 16 | SIM Card Slot 1 |
| 17 | Micro SD Card Slot |
| 18 | SIM Card Slot 2 |
| 19 | Battery Bay |
| 20 | Speaker |

Getting Started


Before first use

- Unpack the product but keep all packaging materials until you have made sure your new Dual SIM Smartphone is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Unwind the USB cable and battery charging adaptor and inspect them for damage. Do not use the cables or the charger if any part is damaged. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Read this manual to familiarise yourself with all the features and operating principles of your new 3G Smartphone. Pay particular attention to the safety instructions on the previous pages.

Micro SD Card

- Place your finger in the small recess in the corner of the mobile phone and with your fingernail, carefully prise it open and lift off the back cover.
- Your Bauhn 5.5" Smartphone is compatible with Class 10 Micro SD cards, up to 32GB in capacity.
- Power off your phone, then insert your Micro SD card into the SD slot on the rear of the Phone, making sure the gold contacts are facing to the front of the Phone.
- To remove the SD card, power off the Phone and remove the battery, then gently pull the SD card out.

SIM Card (2G/3G)

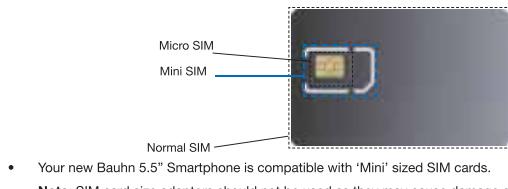

- Your new Bauhn 5.5" Smartphone is compatible with 'Mini' sized SIM cards.

Note: SIM card size adaptors should not be used as they may cause damage or become stuck.

Inserting the SIM card(s) and battery

- If the battery is in place, remove it.
- Insert your SIM card(s) into the dedicated bays. Bay number (1) supports Mini SIM Cards for 3G and 2G; bay number (2) supports Mini SIM Cards for 2G only. If required, insert a micro SD card into its dedicated space.
- Once the SIM and SD cards are securely in place, insert the battery (supplied) into the phone, making sure to align the pins with the contacts.
- Reinstall the back cover. It will lock into place.

NOTE: Some SIM cards require a PIN number to be entered before use. This PIN may be printed on the SIM card packaging, or you may have to contact your service provider for the number.

Getting Started (Cont.)

Charging

The battery has been partially charged at the factory. To perform all functions, we recommend you fully recharge it as follows:

- **To charge the device with the battery charger**, plug the large end of the USB cable into the charging adaptor and the smaller end into the micro USB port on the 3G Smartphone. Plug the charger into your mains power supply.
- **To charge the device using the USB cable and computer**, plug the large end of the USB cable into a USB port on your computer and the smaller end into the micro USB port on the 3G Smartphone. Ensure your computer is turned on.
- When the phone indicates a full charge (the battery status icon is located in the top right corner of the display), disconnect the charger or USB cable. Alternatively, the notification light will turn green.
- Follow one of these charging procedures whenever your 3G Smartphone indicates a low battery charge.

Power button

Switching on/off

- In power-off state, press and hold the power button for 2-3 seconds and the device will start up.
- In power-on state, long press to display the power off menu. Then choose to switch off the device.

NOTE: If phone becomes unresponsive, remove and reinsert the battery.

Turning the screen on/off

- In power-on state, press the power button to turn the screen on or off.
- After a period of inactivity the screen will automatically turn off to save battery power. This can be set using the "Sleep" setting from the display menu in the device settings menu.
- If after a long time in sleep state the screen does not turn on, remove then reinsert the battery. Then press the power button to turn on again.

Volume

- To adjust the ringer volume, press the Volume Up or Volume Down buttons on the right side of the 3G Smartphone to the desired level. While adjusting the ringer volume, a window will appear on the screen displaying the volume levels.

Linking with your Google account

When you turn on the phone for the first time, you can sign in to your Google account so you can synchronise Gmail, Calendar and Contacts between your phone and your Google account. A Google account is also required to use Play Store.

- On your phone go to "Settings" and tap 'Add Account' > 'Google' > 'Existing'.
- Tap "Sign in", enter your user name and password and then tap "Sign in". After signing in, all emails, contacts, and calendar events on your Google account will automatically synchronise with your phone.

NOTE: Tap "Create" if you do not have a Google account yet.

Google account password

If you cannot remember your Google account password, follow the steps below to retrieve it:

- On your computer, open your browser and go to <http://google.com/accounts>.
- On the right side of the page, tap "I cannot access my account".
- In the "Please select your issue" section, select "I forgot my password".
- Tap "Reset your password now", and then follow the procedure on how to recover your password.

Getting Started (Cont.)

SIM management

This 3G Smartphone can be used with two SIM cards. When you have two SIM cards inserted, you can choose to use either SIM1 or SIM2, or both of them. Unless you have determined use of one particular SIM card as your default card in the settings, you will be prompted to choose an appropriate SIM card every time you want to make a call or send a message.

NOTE: Only SIM card bay number 1 supports 3G data connection.

SIM Information


Tap the check box to choose enable or disable a SIM card, or tap a SIM card to change its information.

Default SIM

Here you can choose the default SIM card for your voice calls, video calls, messages or connection.

General settings

Here you can change roaming settings or associate contacts with a specific SIM.

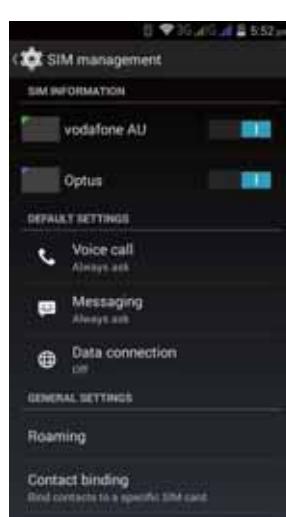

Operation

Entering your PIN


If you want to use a SIM card that is preset with a PIN (personal identification number), you will have to enter the PIN to proceed. Just follow the prompts to enter the SIM PIN and then tap "OK".

Screen operation

Click / Short Press	When using the on-screen keyboard, click or short press to open applications or select items.
Long Press	Press and hold for several seconds on an item (such as a text box or web page link) to display the action or submenu for an item, if available.
Slide or Rapid Slide	Sliding or fast sliding means vertical or horizontal drag action.
Drag	When dragging, you must hold the icon with your finger and keep pressure until it reaches destination.
Display Rotation	For most of the screens, the content will change between landscape and portrait mode, according to the device orientation.

Unlocking the main screen

- Drag the lock to the right side to unlock the screen.
- After unlocking the screen, you will see the last item you had open or the main screen, which has five windows or pages. You can view the pages by dragging your finger left and right across the screen.
- To return quickly to the main screen, press the Home button.

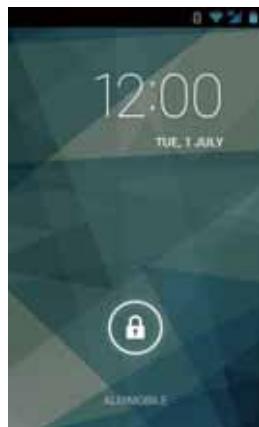

Operation (Cont.)



Operation (Cont.)

Notifications

The notifications bar shows you at a quick glance the status of your phone. It can be expanded to show more information and quick access to settings.

Notification icons inform you of the receipt of new messages, calendar events, set alarms and ongoing settings for things such as active call forwarding or the current call status. Below is a description of their meanings.

Expanding and closing the notifications panel

- To expand the notifications bar to see all the options, place your finger on the notifications bar, then swipe/drag in a downward motion.
- To hide the notifications bar, press the back button.

	File being downloaded		No SD card
	App installed from Play Store		Common notification
	Connected with PC		Micro SD space not enough
	Alarm clock on		To-do events
	Download finished		Data synchronisation

Operation (Cont.)

Phone calls

Making a call

You can make a phone call a number of different ways.

Calling using the dialler



- Tap (call/phone) at the bottom of the screen to enter the dialler screen.
- In dialler mode, when you input a number, you have two options to make a call.
 1. Directly tap "Call" on the keyboard and then choose which SIM card you want to use (if you have two SIM cards inserted).
 2. Slide to the right to choose the number in your call history.

NOTE: If you have only one SIM card inserted, you cannot use another SIM card to make a call. When one SIM card is used for a call, the other is temporarily unavailable.

Calling a phone number in a text message

While viewing a text message, you can place a call to a number that is in the body of the message.

- Tap the message with the phone number.
- Tap on call icon on top right corner of the received message menu.
- To place the call, tap "Call" (and select the SIM card you want to use, if appropriate).

Calling a phone number in contacts

- To call a number from your contacts, enter the contacts list and select the contact, then tap the number you want to call.

Making an emergency call

- Dial the appropriate emergency number (000 or 112 in Australia), and then tap "Call".
- If your phone is locked with a pass code, you may still be able to make an emergency call. On the "Enter pass code" screen, tap "Emergency call", then enter the emergency number and tap the call button.

Incoming phone calls

- **Receiving a phone call from a contact:** When you receive a phone call from a contact, the incoming call screen appears displaying the caller ID icon, name and phone number of the calling party.
- **When you receive a phone call from someone else** (whose contact details are not stored in your contacts), only the default caller ID icon and phone number will appear on the incoming call screen.

Answering a call

Slide the "Call" icon across the screen to answer an incoming call.

Rejecting a call

Slide to the "End call" icon to reject.

Operation (Cont.)


Muting the ring sound

To mute the ring sound without rejecting the call, press the Volume Down button or Power button.

In-call options

When a call is in progress, you can still operate key options. Tap the available buttons to put a call on hold, dial another contact for a phone conference, mute the phone microphone, and more.

NOTE: When the phone is dialling, only the "End call" and "Speaker on" icons are available.

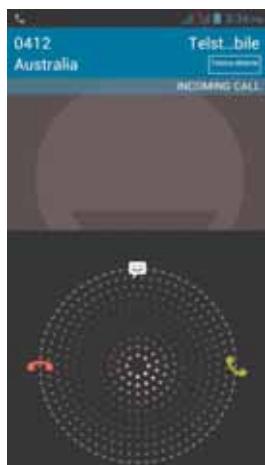

Operation (Cont.)

Muting the microphone

- Tap "Mute" to turn the microphone on or off. When the microphone is turned off,



the "Mute" button will change to

Putting a call on hold

- Tap "Hold" to put the call on hold. When you put a call on hold, the "Hold call"



button will change and call counter will change to . Tap "Unhold" to resume the call.

Turning the speakerphone on/off

- When you are on a call, tap "Speaker" to toggle between turning the speakerphone




on or off. The "Speakerphone" button will change to when the speakerphone is on.

WARNING! Protect your hearing! Do not hold the phone against your ear when the loudspeaker is turned on.

Ending a call

You have two options to end a call:

- Tap "End call".
- If you are using a wired headset, press and hold the button to end the call.

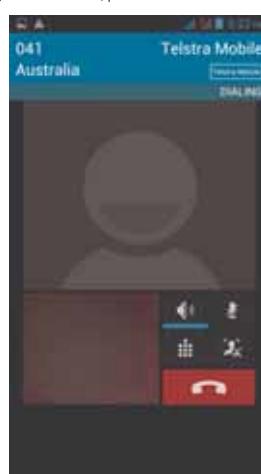

Video calls

Use this function when you want to see as well as hear the person you are phoning, if that person's mobile phone supports this function.

NOTE: Not all mobile phones and networks support video calling. Contact your service provider for details. Video calling may incur extra charges.

Operation (Cont.)

Call log tab

Enter the dial number and slide to the right to the call log. Then select to:

- Tap the name or number in the list to open more detail menu.
- Tap on call icon to call same number.



Call settings

You can adjust the call settings of your phone such as your voice mail number, or enable additional call services from your network service provider.

To open the Call menu (Icon), tap on the Options menu key and select Setting.

Voice call

Select this option to change settings for your voice mail service and number, voice call forwarding, voice call barring, phone number and call waiting settings.

Options	Description
Voice mail	Specify another voice mail number aside from the voice mail number on your SIM card.
Call forwarding	Select how you want your phone to handle calls when busy, unanswered and unreachable. You can also set call forwarding options for all incoming calls.
Call barring	Select to bar outgoing or incoming calls. Contact your network service provider(s) to activate this function.
Additional call settings	Enable or disable operator services such as caller ID and call waiting.

Operation (Cont.)

Video call

Select this option to change your video call settings such as set a picture to display when the camera not in use, size of peer video and local video, etc.

Other settings

Select this option to manage fixed dialling numbers, quick responses, TTY mode, international dialing assist.

- Fixed dialling numbers: restricted outgoing calls to a fixed set of numbers. To enable this feature you must know your SIM card's PIN 2 code.

Airplane mode

To enable/disable airplane mode, choose one of the following options:

- Tap on "App Drawer", then tap "Settings" > "More".
- Press and hold the Power button and then tap "Airplane mode".
- Alternatively, in the notification bar, tap the "Airplane mode" shortcut to turn airplane mode on or off.

NOTE: When you disable airplane mode, the phone function is turned back on and the previous Wi-Fi and Bluetooth Wireless Technology states are restored.

Operation (Cont.)

Contacts

The contacts application lets you manage your phone, messaging and email communications with the contacts in your contacts list. If you are synchronising contacts with your Google account, any contacts stored in those accounts will be displayed.

Contacts list

Adding a new contact



- On the Contacts list screen, press the button, then tap "Create contact".
- Enter the contact information in the fields provided.
- Tap "DONE" to save your new contact.

Searching for a contact



- To enter the search menu, press the button: a search bar will appear at the top of the Contacts list screen.
- Enter the first few letters of the first or last name of the contact you are searching: matching contacts will be displayed.

NOTE: If the list of matching contacts is long, tap to hide the on-screen keyboard to view more results.


Deleting a contact

- On the Contacts list screen, press "Options Menu" key and then tap "Delete contact".
- On the Delete screen, you can select "Multiple choice", or "Select All".

WARNING: This operation will delete the contact. Take care when using it.

Display options

Choose this setting to customise your display options, including default and Gmail account display options. To open the menu tap "Options Menu" key and select "Contacts to display" and select "All contacts" in Contacts to display options to display the contacts in the list.

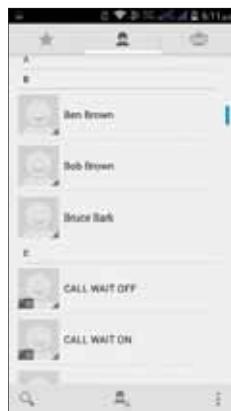

Operation (Cont.)

Messaging

Messaging lets you compose and send text (SMS) and multimedia messages (MMS) to other mobile phones.



Creating and sending SMS and MMS messages

- Any text (SMS) messages you compose that contain up to 160 characters will be delivered as one message. If your message contains more than 160 characters, it will still be delivered as one but it will count as more than one message. Your service provider may charge you extra for such linked (concatenated) messages.
- Multimedia (MMS) messages can contain text and a picture, a recorded voice, an audio or video file or a picture slide show.
- To create and send a text message, tap  "Create" on the All messages screen and enter the phone number or name of the message recipient in the To field on the Compose screen. Any matching contacts will appear on the screen. Tap a recipient or continue entering the recipient's phone number. Tap the text box that contains the text "Type text", and then start composing your message. When done, tap "Send" to send the message.

NOTE: As you compose the message, a counter in the top right corner of the text box will keep track of the number of characters. Once you go over 160 characters, a new message is created but automatically linked into one when received.

NOTE: To receive delivery reports and notifications when a text message is received, press "Option Menu" and then tap "Settings" on the All threads screen. In the SMS settings section, select the "Request Delivery reports" check menu.

Operation (Cont.)

Applications and widgets

Enter applications



Click  to open App Drawer and see list of all installed application.

- This window will display a list of the applications.
- As you install more applications, the first page will fill up and the application icons will automatically spread onto other pages.
- Swipe left and right to see the other pages.

Add and manage desktop icons

Adding desktop icons

At the App Drawer, long press any application or widget and the device will shift into desktop, then drag the icon to any place on the desktop.



Operation (Cont.)

Managing icon folders

To create a folder on the main screens, just drag and overlay any icon onto another icon, then release. A new folder will be created containing the two applications. It will appear as a circle with small icons of your Apps on top.

Then you can view the folder contents by clicking on the folder icon and it will display as pictured below.




Operation (Cont.)

You can change the icon positions inside the folder by long pressing them, then dragging to the new position.


If you want to remove an icon from the folder, long press the icon and drag to outside the folder.

To change the folder name, click on the folder, then tap "Unnamed folder". A keyboard will appear. Type the new name, then tap "Done" to apply it.

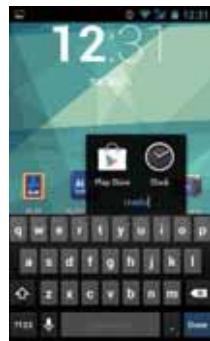

Changing the wallpaper

Touch and hold on the empty space in the home screen. The option is displayed to choose a wall paper

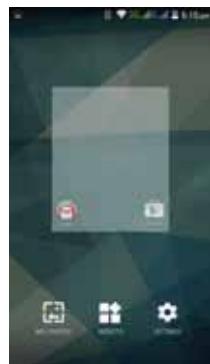

Operation (Cont.)

Connect with computer

Connect the device to a computer with a USB cable. When connected with a computer, a message will appear in the notifications bar informing you about the current USB mode.

There are 2 options available to choose from.

- Media Device (MTP) --- (this is the default option)
- Camera (PTP)


If the message does not appear when you connect the phone to your computer with a USB cable, or if the device does not appear on your computer, try the following:

- Check and ensure that you have turned the phone on. Check and ensure that your computer is turned on.
- Unplug the USB cable, then reconnect it to the same USB port.
- If your computer has USB ports on the rear, try connecting to one.
- Try a different USB cable.

Operation (Cont.)

Browsing the internet

Tap  to open the browser.

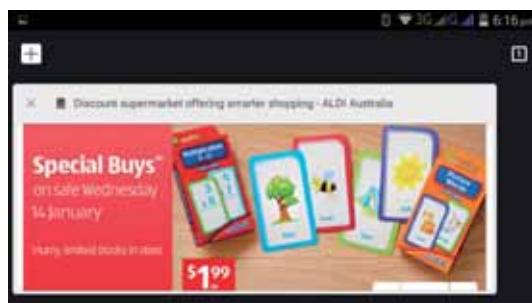

 Tap current tab  to minimise the window and then tap  to open a new browser window.

Tap and hold on the window that you want to close, then drag it to left or right to close the selected window.

When the internet signal is poor and the web page does not load, tap "Refresh" in the menu to try loading the web page again. There are many useful advanced options in "Settings".

Screen compatibility

When the device is installed with programs designed for small screen and cannot show in full screen, a screen zoom menu will pop up. You must confirm it to open those programs.

Background applications


Tap and hold "Home" key to show all programs running in the background. Tap an item to re-open it.

Drag the items to the left or right to close and remove the application from the list.

Operations (Cont.)

Download and install applications from Play Store

Download applications software using "Play Store". Below are photos showing the process of downloading "Angry birds" from "Play Store".

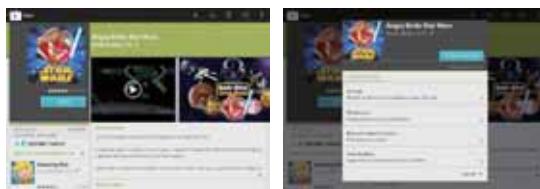

After downloading, the application will automatically install the software.

NOTE: Some applications may not be compatible due to hardware requirements or geographic location limitations of the application.

Uninstall applications



- Open the App drawer, then tap on "Apps" from the Device menu.
- Use the tabs at the top and scroll up and down through the list of applications until you find the application you wish to uninstall.
- Click on the application, then an App info page will appear.
- Click on the Uninstall button and the application will be removed. Alternatively tap and hold on the app icon that you want to uninstall from App Drawer and drag it into the Bin


Settings

The setting function on this 3G Smartphone is like that on a computer control panel. You can access the settings page from the notifications bar or "Setting" icon in the App drawer .



Wireless and networks


The "Mobile Networks" section is located under the "More" option.

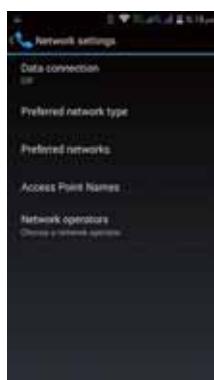

- To activate data using your SIM card select "Data connection".
- The remaining settings should be left with default values unless your local service provider advises you otherwise.

Settings (Cont.)

- Tap "Wi-Fi" to open the Wi-Fi function.
- To the right of the "Wi-Fi" label is the button to enable and disable Wi-Fi.
- Press the On/Off button to turn the Wi-Fi function on or off
- Click on the network you wish to connect to.

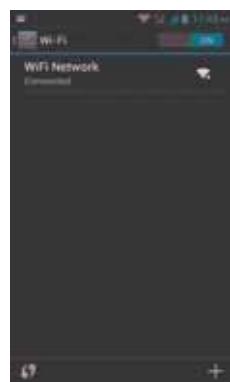


Connecting Wi-Fi

When the Wi-Fi network is not protected, it will connect with the device automatically. For information security reasons, be careful using unprotected Wi-Fi sources. When you click on a protected Wi-Fi, a window will pop up to input a password.



Settings (Cont.)

There are more useful advanced Wi-Fi settings when you choose to "Show advanced options".

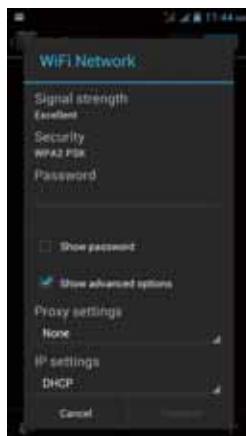

Bluetooth® Wireless Technology

Enable or disable Bluetooth® Wireless Technology



1. Tap "Settings" at the APP Drawer.
2. In the "Wireless & networks" menu, tap "Bluetooth".
3. Tap the On/Off button in the menu on the left to turn the *Bluetooth* wireless technology on or off.

Change *Bluetooth* enabled device name

By default, the *Bluetooth* enabled device will have a name. To make your devices more easily identifiable, you can rename it as follows.

1. Go to "Settings" > "Wireless & networks" and make sure *Bluetooth* is on.
2. Tap on "Options Menu" key and select Rename phone.
3. Input the new name and tap rename.

Pair with another *Bluetooth* enabled device

1. Tap "Search for devices", the device will scan for all available *Bluetooth* enabled devices. If it cannot find the one you want, check if the other device's *Bluetooth* setting is switched on and visible to discover.
2. Tap a *Bluetooth* ID to pair. If it is password protected, input the password at both devices.


* The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Settings (Cont.)

Audio profiles


You can set and customise your default audio profile for different environments. All sound options can be configured in each profile.

Click on (Icon) to customize each profile. Tap "Volumes" to change the volume levels for multimedia players and applications, and also for notifications and alarms.

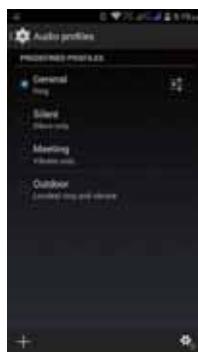

Display

You can set brightness, wallpaper, auto-rotate and font size options and sleep timer from this menu.

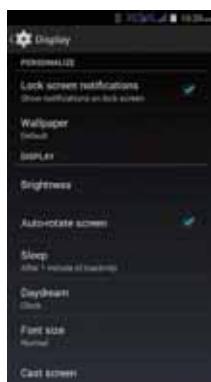


Settings (Cont.)

Storage

Internal storage: space for installation of applications (APK software)
External SD: storage space on the removable SD card (if inserted)

Battery

Shows battery balance and consumption.

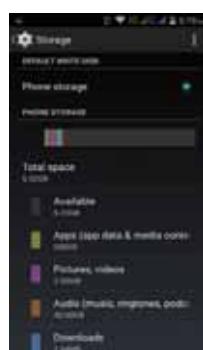


Applications

Here you can manage applications, such as uninstall them or clear default app for different file formats.

Personalisation

Location access

Allows you to enable or disable the various location services such as GPS.

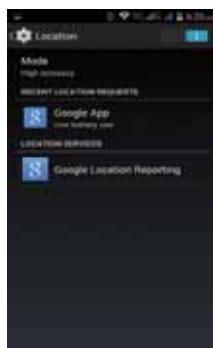


Settings (Cont.)

Security

The security menu contains many useful options for securing your Dual SIM Smartphone and data.

Screen lock: Change or set a protection method for locking your phone after some time of inactivity.

Owner info: Enter text that will be displayed on the lock screen. This is a message that others can see without having to unlock the phone.

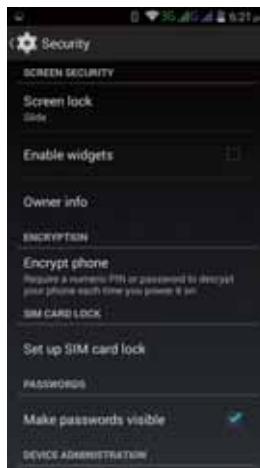

Encrypt phone:

Apply encryption to all data on the 3G Smartphone. Also requires you to enter a PIN or password to use your phone each time you turn it on.

WARNING: Data cannot be recovered if you forget the PIN or password you set!


Unknown sources: Enable this if you wish to install applications (APK files) that are not from the "Play Store".

NOTE: If you forget the screen lock password, PIN or pattern, you must perform a Factory reset on the device. Passwords cannot be recovered.

Settings (Cont.)

Language and input

In this area you can change the system language and change settings for the keyboard.

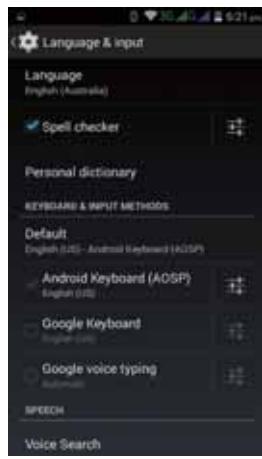

Keyboard

Some applications can open the keyboard automatically; others require you to click in an input field/area first.

You can hide the keyboard by tapping the Back key.

Settings (Cont.)

Text selection - Copy, Share, Find

- Press and hold on one of the words you wish to select. The word will highlight in blue and a blue tab will appear at both ends.
- Press and drag the blue tabs to highlight the text you wish to select.
- Choose the task you wish to perform from the menu that appears at the top of the screen.

Text selection - Paste

- Once you have used the above method to copy text to the clipboard, press and hold on a field in an application or area of a document where you wish to input the copied text.
- A blue tab will appear, drag it to the position you want the text inserted, then click 'Paste'.

Other operations

To input capital letters:

- Press the Shift  button or keep pressing on Shift  while inputting letters.
- To switch to capital letters:
 - Press and hold the shift  button while in lower case mode, the icon will change into . Press again to switch back to lower case mode.

Figures and numbers:

- Press the "?123" button. You can then press the "= \<" button for more choices.

Frequently used symbols:

- Press and hold a symbol button to enter the alternate symbol displayed in grey above it.

Settings (Cont.)

Backup and reset

Reset to factory settings: When some applications or the phone itself do not work properly, you can use this function to return the 3G Smartphone to factory default settings.

NOTE: You will lose all user installed applications and data. It is therefore important that you back up important data first.

System

Date and time

Contains options for setting the time zone, date and time.

Accessibility

Contains settings for easy use of applications and services (if installed).

About

Displays some information about the device.

Camera

The camera has photo-taking and video-recording functions. There are two cameras on the phone.

You can find your camera photos and video footage at > Applications > Gallery.

Click  to take photos or record videos.

- The first time you open the Camera application a short animation will play showing you how to use the camera options.

Downloaded files management

When downloading files, you can check download status, view, reopen or delete them using "Download management".

Manage downloaded files

- App Drawer > Downloaded files
- Tap any one to open it.



- Tap and hold any file you want to share with others, then tap "Sharing" then choose an option to share.



- Tap and hold any file you want to delete and select
- Click "By size" or "By date" to array the files.



Specifications

CPU	MT6582M Quad Core 1.3GHz
OS	Android 4.4
Display	5.5" IPS LCD
Resolution	540 x 960 qHD
Internal memory	8GB
RAM	1GB
Touchscreen	Capacitive screen (5 points)
Battery	3000mAh Battery
WiFi	IEEE 802.11 b/g/n
Bluetooth	Yes
SIM	Dual SIM
2G / 3G module	2G: GPRS/EDGE, 3G: WCDMA/HSPA
Frequency	GSM 850/900/1800/1900 MHz UTMS 850/1900 MHz
GPS	Built-in GPS module with A-GPS
G sensor	Screen Rotation sensor (Accelerometer)
Cameras	Front: 2.0MP Fixed Focus, rear: 8.0MP Auto Focus
Micro SD	Supports up to 32GB
I/O Ports	1 x 3.5mm Hands-free socket 1 x Micro USB 1 x Micro SD Card 2 x SIM Card

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Repair and Refurbished

Goods or Parts Notice

G5500 Smartphone

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The highest reported SAR values for head and body are below:
Head: 0.668W/kg(1g); Body:0.785W/kg(1g) respectively.

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 86-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.0cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.