

成品尺寸:70mm×115mm

材质:105g哑粉纸

印刷颜色:四色印刷

装订方式:风琴四折页+对折

**W5 PRO WIRELESS PORTABLE CHARGER**

**User Manual**

**Package Contents**

- A Wireless Portable Charger x1
- B A-to-C Charging Cable x1
- C User Manual x1

**Product Overview**

- 1 Power Button
- 2 USB C Input/Output Port
- 3 USB A Output Port
- 4 Battery Level Indicator Light (Blue)
- 5 Magnetic Charging Indicator Light (Green)
- 6 Wireless Charging Surface

**Charging Method**

**Wireless Charging Mode**

The wireless charging does not compatible with the non-magnetic phone case.

Magnetic Cases      Non-magnetic

1. Place devices that support magnetic connection technology on the portable charger. To keep the device firmly attached to the portable charger, make sure it is located in the center of the circular icon on the portable charger.
2. Magnetic portable charger will automatically charge the device, magnetic charging indicator (green) light up and the battery level indicator light (blue) will show the current battery level of the portable charger.
3. When the electronic device is fully charged or uninstalled, the indicator light will turn off after about 30 seconds, and the portable charger will turn off.

\* During charging, double-click the power button to turn off the output, and click it again to continue the output.

**Note:**

- \* Magnetic suction function is compatible with iPhone 12 and above.
- \* When using wireless charging for Android devices such as Google and Samsung, please use a phone case with a wireless magnetic ring to better align with the wireless charging area.
- \* Not compatible with non-magnetic or thicker phone cases.

**Wired Charging Mode**

Display real-time battery level

Type-C Output

USB-A Output

1. Use the charging cable to connect the corresponding port to the device you need to charge. Plug the other end of the charging cable into the USB A or Type-C output port of the portable charger.
2. Automatically charge the device after a successful connection, the battery level indicator light (blue) is always on and indicates the current power level of the portable charger.
3. When the electronic device is fully charged or the charging cable is removed, the indicator light will turn off after about 30 seconds, and the portable charger will turn off.

\* When charging with the C-C charging cable, double-click the power button will turn off the output. If you want to continue charging, please disconnect and reconnect the cable.

**Wired & Wireless Charging**

Simultaneously charge three devices

- + Wireless Charging
- + Type-C Output
- + USB-A Output

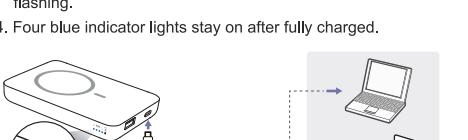
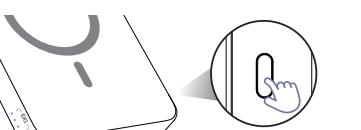
Place your compatible mobile device onto the portable charger's wireless charging area and use the charging cables to connect two other electronic devices to the corresponding USB-A/Type-C output ports.

\* This product supports up to three devices charging at the same time (USB-A/Type-C/Wireless charging).

- 01 -

- 02 -

- 03 -

Low Current Mode												
	Description	LED Light										
Low current mode <b>ON</b>	When portable charger is powered on, press and hold the power button for 3 seconds to activate low current mode	 Flash in sequence every five seconds										
Low current mode <b>OFF</b>	Press and hold the power button again for 3 seconds to exit low current mode											
<b>Note:</b> To protect the battery life of devices with low charging current, such as watches and headphones. Please use low current mode for charging.												
Charge the Portable Charger												
1.	Insert the Type-C port of included charging cable into the Type-C input port of the portable charger.											
2.	Plug the other end (the USB port) of the charging cable into AC adapter or into the computer USB port.											
*The AC adapter is not included in the package.												
3.	When the portable charger starts charging, the indicator lights (blue) flash in sequence first and then an indicator flashing.											
4.	Four blue indicator lights stay on after fully charged.											
Button Operation and LED Display												
 <b>Power Button</b>  <b>LED Light( ON OFF )</b> <table border="1"> <tr><td>○ ○ ○ ○ ○</td><td>0%~25%</td></tr> <tr><td>○ ○ ○ ○ ○</td><td>25%~50%</td></tr> <tr><td>○ ○ ○ ○ ○</td><td>50%~75%</td></tr> <tr><td>○ ○ ○ ○ ○</td><td>75%~100%</td></tr> <tr><td>○ ○ ○ ○ ○</td><td>Wireless Charging Mode</td></tr> </table>			○ ○ ○ ○ ○	0%~25%	○ ○ ○ ○ ○	25%~50%	○ ○ ○ ○ ○	50%~75%	○ ○ ○ ○ ○	75%~100%	○ ○ ○ ○ ○	Wireless Charging Mode
○ ○ ○ ○ ○	0%~25%											
○ ○ ○ ○ ○	25%~50%											
○ ○ ○ ○ ○	50%~75%											
○ ○ ○ ○ ○	75%~100%											
○ ○ ○ ○ ○	Wireless Charging Mode											
Standby state												
Press once	Turn on	Green light flashes one second, blue lights display remaining battery.										
Press twice	Turn off	Green and blue lights gose off.										
Charging the device												
Press once	Continue output	LED lights on										
Press twice	Stop output	LED lights goes out										
<b>Note:</b>												
When charging with the C-C charging cable, double-click the power button will turn off the output. If you want to continue charging, please disconnect and reconnect the cable.												
Specification												
Model	W5 Pro											
FCC ID	2AEZ4-W5PRO											
Capacity	10000mAh											
Power	38.5Wh/3.85V											
USB C Input	5V3A, 9V2A, 12V1.5A											
USB C Output	5V3A, 9V2.22A, 12V1.67A											
USB A Output	5V3A, 9V2A, 12V1.5A											
Total Output	5V3A											
Wireless Output	15W (Max)											
⚠️ Notice												
<ul style="list-style-type: none"> <li>Do not pierce or strike the product with sharp objects.</li> <li>Do not dispose of this product in the fire to avoid an explosion.</li> <li>Do not disassemble or modify the external structure of the product. Incorrect reassembly may result in a risk of fire or personal injury.</li> <li>Do not clean the product with harmful chemicals or detergents.</li> <li>Do not immerse the product in liquids and avoid contact with corrosive substances.</li> <li>Do not charge the portable charger for more than 10 hours, and disconnect the power supply timely after charging is completed.</li> <li>If you use a non-standard charger, or modify the charger parameters, it may cause the battery to overheat, burn, and explode.</li> <li>If the battery expands, weeps, or is abnormal, please discontinue use immediately.</li> <li>Please store the product in a clean and dry place with an ambient temperature of 0°C~35°C and the humidity is between 20~80%.</li> <li>We are not liable for the damage caused by people or improper operation.</li> <li>If the product is not being used for a long time, please charge it every 2 months to preserve its lifespan.</li> </ul>												
Warning												
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.												
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.												
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:												
<ul style="list-style-type: none"> <li>-- Reorient or relocate the receiving antenna.</li> <li>-- Increase the separation between the equipment and receiver.</li> <li>-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>-- Consult the dealer or an experienced radio/TV technician for help.</li> </ul>												
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.												