

GL5510 User manual

Thank you for using our digital bluetooth players produced products, in order to allow you to easily experience the product, we were equipped with a detailed manual, which you can use to acquire knowledge presentation and other aspects related to the product. Please read carefully before you start using the machine manual, so that you can correctly use the machine and hope the majority of user understanding. if any typographical errors or translation errors involved in the content subject changes without notice.

Product Overview

This machine is a beautifully designed, portable Bluetooth stereo speakers. High-performance explosion-proof sound amplification chip, ultra-low power consumption, super low-frequency dynamics, bass-rich, flexible, achieve a more shocking extremely overweight bass effect. Can be inserted TF card to play music, audio input interface can be directly connected with a PC laptop, MP3 / MP4, mobile phones and other use, Super Bluetooth receiver functions, it is best for Bluetooth mobile phones and other Bluetooth-enabled products.

Features

- 1 Bluetooth functionality
- 2 Memory function, Resume Playback
- 3 Built-in lithium battery, environmentally friendly and practical
- 4 Using high-fidelity speakers, make sound more natural and delicate
- 5 Audio input interface, a standard 3.5mm headphone jack, can be used for computer speakers using speaker phone and so on.
- 6 Built-in microphone, can be achieved mobile voice speakerphone.
- 7 Support MP3 music format decoding

Key basic definitions



- 1 "[Power/Play/Pause]" On / off, play / pause.
- 2 "[Previous]" Switch the previous song, Volume reduction.
- 3 "[Next]" Switch the next song, Volume increases.
- 4 "[M]" Mode switch/Answer the phone/Hang up the phone



Key basic operations

Boot up: Long press "[Power/Play/Pause]" for three seconds and release the button, then after a second or the indicator light to lights up to express boot up.



Shutdown: Long press "[Power/Play/Pause]" for three seconds and release the button, then after a second or the indicator light to lights off to express shutdown.

Short press "[Power/Play/Pause]" You can play and pause.

During playback, short press " "key can select the previous song, short press " "key can select the next song.

During playback, long press " "key, the system can increase the volume, long press " "key, the system can decrease the volume.

Mode switch: short press " "key, mode switching can be carried out (Bluetooth/TF/USB/FM RADIO) .

Answer /Hang up the phone: When an incoming call, long press " " Can answer the call, then, long press " ", you can hang up the call.

Tip lights: In Bluetooth mode it flashing blue lights, Read TF card flashing green lights, Audio input modes, the green lights long bright. After the machine boot up (TF card is not inserted) defaults to Bluetooth mode state, insert TF card, the system will switch to TF card status automatically.

Charging to use:

1. The machine built-in charge protection circuit, can be connected to computer or charger prolonged and fully charged about four hours.
2. Each time the life time of the battery will be different because of the volume size when playing.

Technical Specifications:

Bluetooth Standard: 2.1 + EDR

Transmission distance: 10 meters

Audio output power: 3W+3W

Audio frequency effect: 100Hz-18kHz

machine speaker (ϕ 40mm 4 Ω 3W)

Input Power: Direct-current DC5V 500-1500mA

Maximum current consumption: 400mA

Audio signal input interface: standard ϕ 3.5mm headphone jack (stereo)

Packing Accessories:

- | | |
|--------------------------|-------------|
| 1. Host | One Article |
| 2. Manual | One Set |
| 3. Audio/USB Power cable | One Article |
| 4. Charging cable | One Article |

Troubleshooting:

1. Automatically shut down, low battery, please charge three hours after use.
2. Play automatic shut down, low battery, please charge three hours after use.
3. Can not play music, The storage of MP3 music files can not be identified by the player, please store your file in the root directory of the removable device.
4. The speaker no sound: Check the volume is turned
5. Connected to the computer no voice: PC interface connection error, please select the correct audio output interface of PC.
6. Button no function or functions wrong: try again after shutdown.

Tips:

1. If you want to use Bluetooth function, you need to connect first. Turn on the speaker power, and the default mode is Bluetooth to enter pairing status, if you use mobile phone, you can find Bluetooth settings interface and select to open the Bluetooth setting, search for Bluetooth devices and you will find "B26" then select it to connect (the machine has no need password paired), return to the menu interface, and then you would enjoy the music.
2. It is suitable for all kinds of mobile phones, Bluetooth adapter or Bluetooth player with Bluetooth function.

The indicator light will flash fast then the machine's low battery

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by NINGBO JIANGBEI GREEN LAKE IMPORT AND EXPORT CO.,LTD may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.