

INSTRUCTIONS FOR REMOTE CONTROL



The remote is designed to work up to 40 yds away in a straight line of sight from your Wingman decoy

Your remote features four buttons that give you control of your Cabela's Instinct™ Wingman Decoy. To get maximum distance for your remote, make sure the black wire antenna in the battery compartment is hanging outside of the decoy body.

- 1x** - Flaps the wings in one three-second cycle.
- I** - Controls intermittent wing movement. The wings will flap for six seconds and then be still for six seconds. This action will repeat till you press the OFF button on the remote.
- C** - Flaps the decoy wings in continuous movement. This action will be constant till you press the OFF button on the remote.
- X** - This is the OFF button. It stops intermittent and continuous wing movements. The remote is guaranteed to work up to 40 yds. from your decoy as long as there is an open field of view.

12-VOLT CHARGER AND AUXILIARY PLUG

The 12 volt charger fits into the port on your Cabela's Instinct™ Wingman Decoy. The port on the Mallard and Canada Goose Decoy is located at the midway point on the belly. An LED light is right behind the port. It will blink between green and red while the battery is charging. The light will be solid green when the battery is fully charged. The 12-volt charger features a 70" cord. Also supplied is an 18" auxiliary power cord to attach to an external power source, for the hunter who wants to set up using a 12-volt marine battery.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.