

BESMA

EX PRO




Installation Instruction

1. Buttons



2. In the box

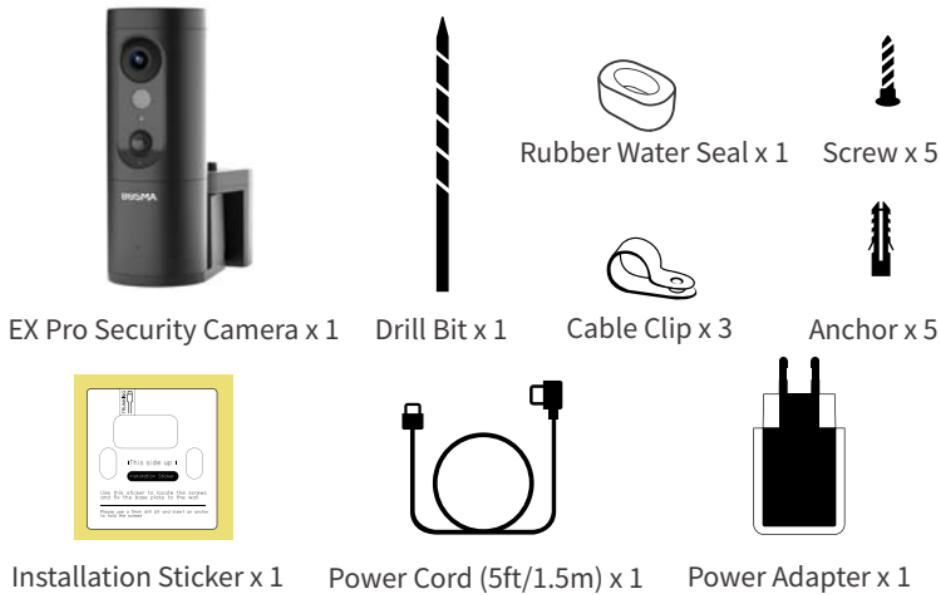

If you need a longer power cable, you may purchase a 25ft/7.5m cable on our website: <https://www.bosmasmarthome.com/>, or use another 3rd-party cable. Please use a high-quality cable to avoid excessive voltage loss, which may cause the camera to not power up. Please also attach the provided rubber water seal to the cable before installation.

3. Tools you may need



Drill

(Use a high-power impact driver for
brick or concrete walls)



Pencil



Screwdriver

4. Installation - EX PRO

Requirements:

Power Source: AC 100-240V, 50/60Hz

Note: While the EX Pro has a backup battery that can power the camera for a short period of time after it is unplugged, the EX Pro is NOT a battery operated camera, and it needs to be wired to a power outlet.

Helpful Resources:

1. For a video installation guide, and other resources, please visit EX Pro's support page: <https://www.bosmasmarthome.com/support/ex/>
2. For more troubleshooting steps and general questions, please visit EX Pro's FAQ page: <https://www.bosmasmarthome.com/faqs/ex/>

4.1 In-app Setup

It is highly recommended to add the camera in the Bosma app prior to installation. Please follow the steps below to set up the camera in the app.

1. Download "BOSMA" from Google Play or App Store.



2. Move your EX Pro close to the router, and connect it to power. Wait for about 30s until it says "waiting for connection".

- If you did not hear the voice prompt, please reset the camera. To reset, quickly press the SYNC button at the bottom of the camera 5 times. You should hear the camera say "system reset".

3. Log in to BOSMA or create a new account.

4. Tap the "+" button at the top right corner of the screen.

5. Select "EX Pro" and follow the instructions on screen to complete the setup.

4.2 Installation Steps

Please make sure that the Wi-Fi signal is strong at the camera's installation location. You can check the Wi-Fi signal strength in the app after you have added EX Pro in the app.

1. Peel off the installation sticker. Stick the Installation Sticker on the wall. If you are routing the power cable through the wall to an indoor outlet, make sure that the cable hole is within the rectangular hole on the sticker.



2. Use the 5mm drill bit to drill 2 holes at the marked spots on the sticker.



3. Insert the plastic anchors into the 2 holes. If necessary, use a hammer to gently tap them in until they're flush with the wall.



4. Press down the clip at the bottom and slide down to remove the mounting plate.



(1) Installation Option 1: If you are routing the power cable to an outdoor power outlet, follow steps 5-9 below.

1. Remove the backing of the adhesive at the bottom of the mounting plate.



2. Place the mounting plate on the wall. Use the screws to secure the mounting plate on the wall.



3. Mount the camera over the mounting plate, and slide down to lock it into the mounting plate.




4. Plug the power cable into the camera. It is recommended to plan the route of the cable from the power outlet to the camera so that it leaves some slack at both ends.



5. Make sure that the adapter and the dongle are properly covered to avoid water damage.



6. Use the cable clips to secure the cable to the wall. To install a cable clip, use the provided drill bit to drill a hole, insert a plastic anchor, wrap the cable clip around the cable, and use a screw to secure the clip.

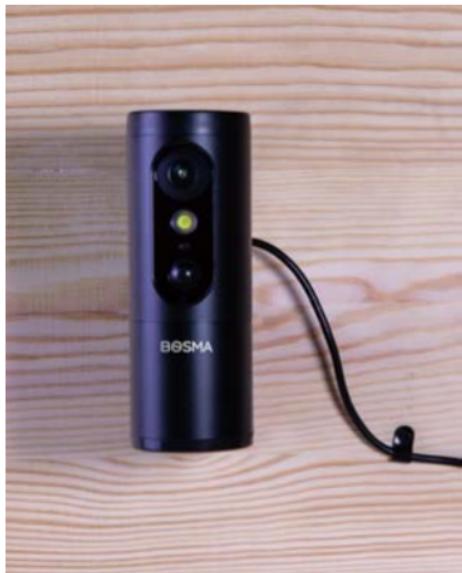

(2) Installation Option 2: If you are routing the power cable through the wall to an indoor power outlet, follow steps 10-15 below.

1. If you are routing the power cable through the wall, before installing the mounting plate, make sure to leave a segment of the cable long enough to connect to the camera on the exterior side of the wall.



2. Remove the backing of the adhesive at the bottom of the mounting plate.



3. Place the mounting plate against the wall. Make sure the cable fits in the groove on the mounting plate.



4. Make sure the direction of the cable groove matches that on the sticker. Use the screws to secure the mounting plate on the wall.



5. Mount the camera over the mounting plate, and slide down to lock it into the mounting plate.



6. Finally, plug the cable into the camera.




Warning: Make sure that the camera is installed upright. If installed upside down or horizontally, the camera may fail to be weatherproof and certain features may not work properly.

Correct

Incorrect

Incorrect

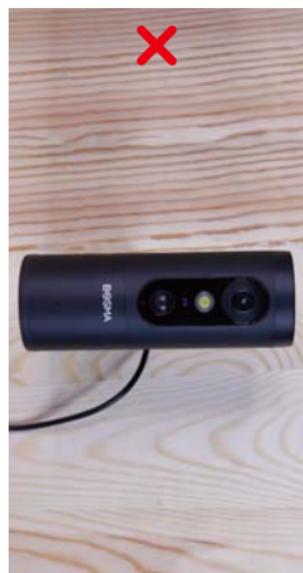

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



Customer Service

✉ support@bosmasmarthome.com

📞 1(800)-976-0881

🌐 www.bosmasmarthome.com

* The Installation Instruction is subject to change without notice, please find the latest version on www.bosmasmarthome.com