


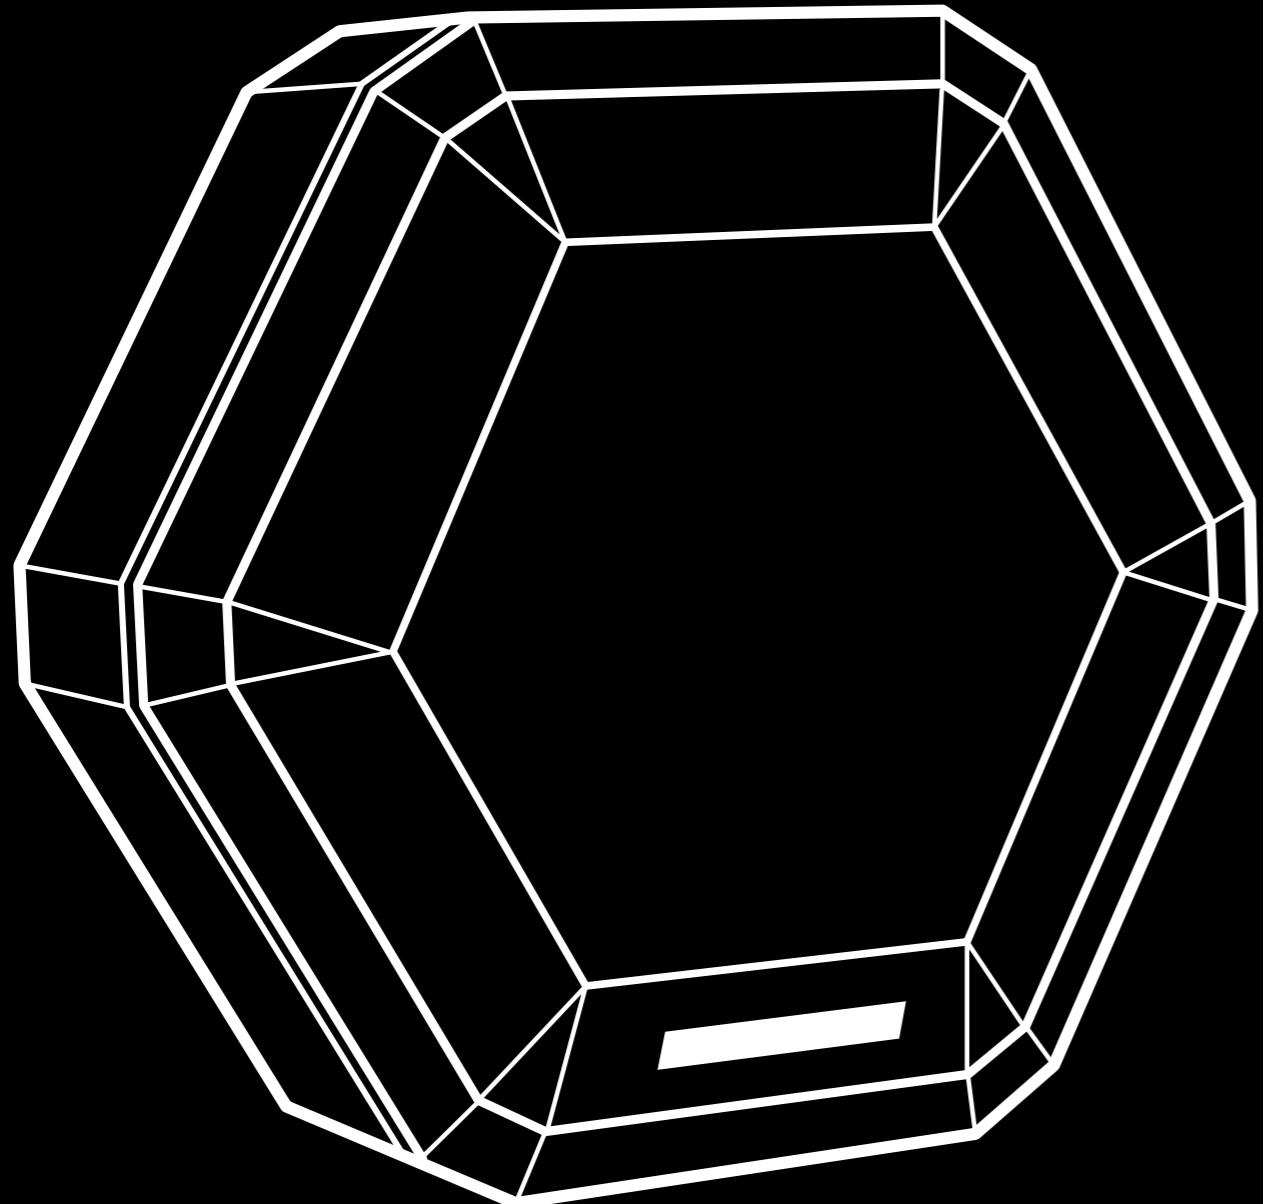


USER GUIDE

# CONTENTS




1. BOOMBOT ANATOMY
2. GETTING STARTED
3. BLUETOOTH PAIRING
4. AUDIO CONTROLS
5. SPEAKERPHONE
6. FLASH MEMORY
7. SPECIFICATIONS
8. TROUBLESHOOTING
9. WARRANTY

# BOOMBOT ANATOMY

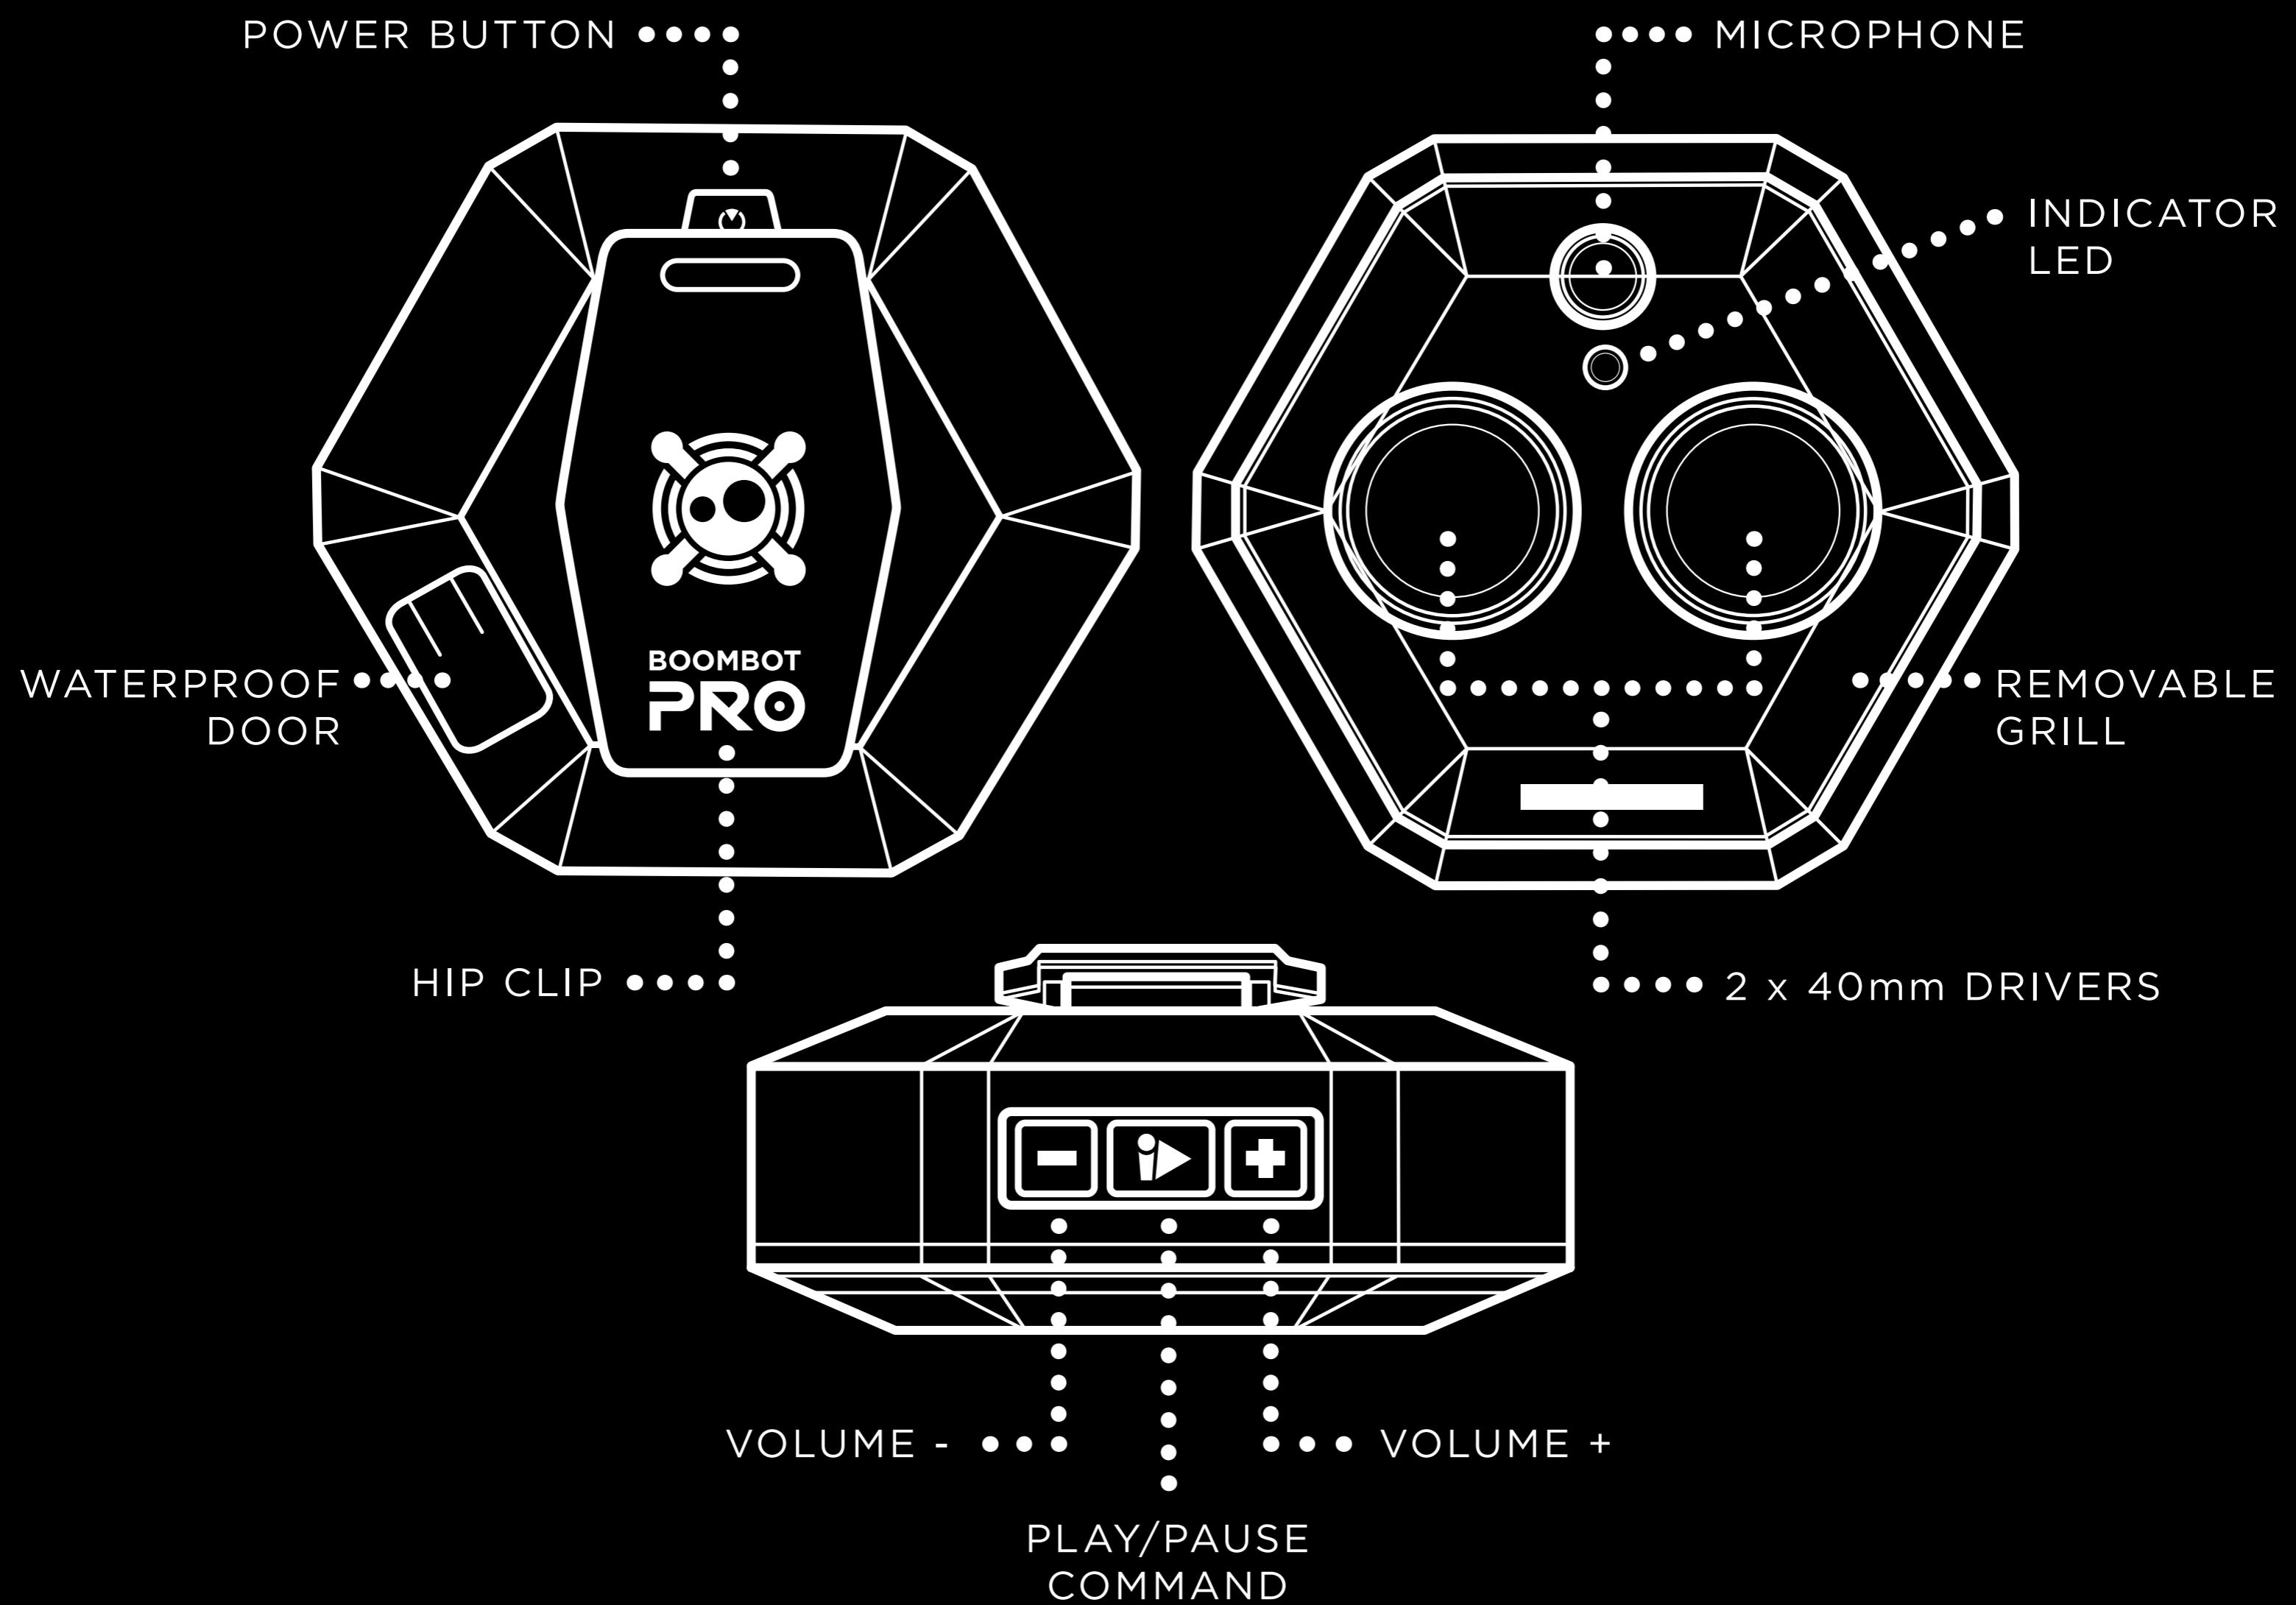


**BOOMBOT PRO**

# GETTING STARTED

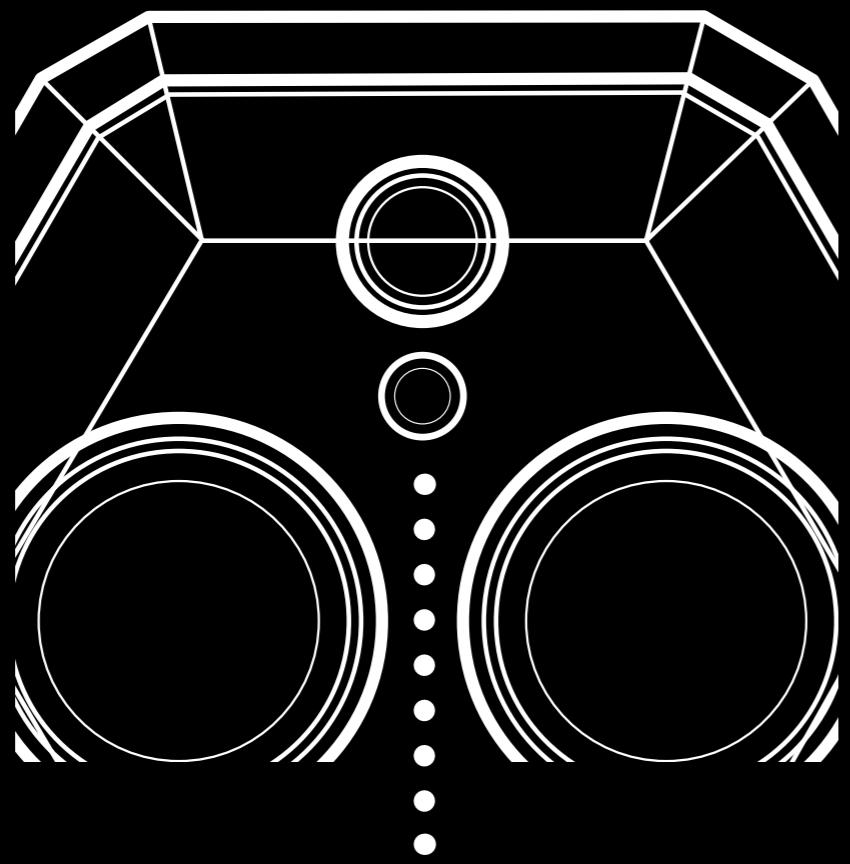

INDICATOR LED

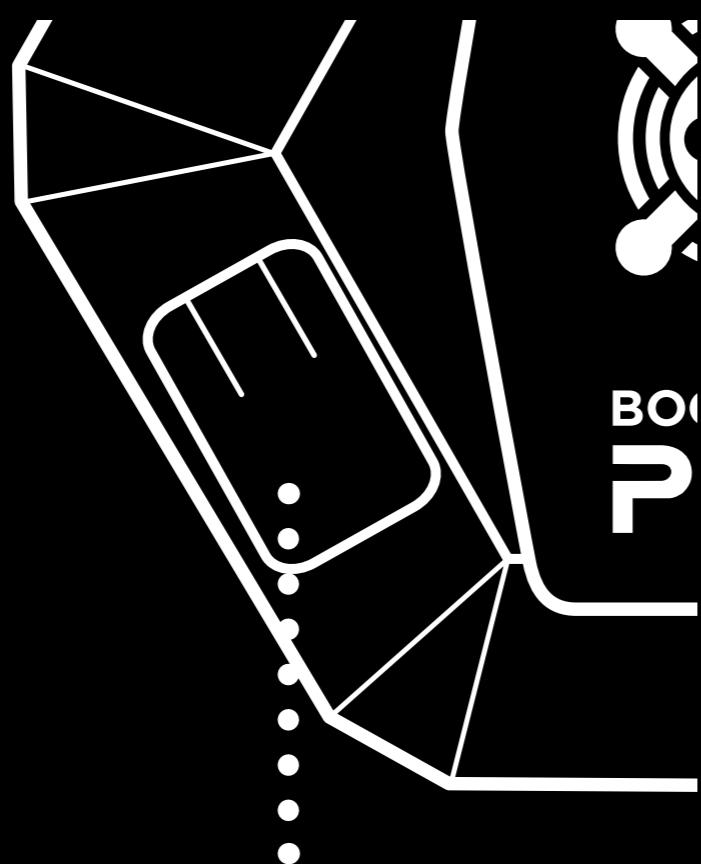

CHARGING PORT

FULLY CHARGE YOUR BOOMBOT PRO BEFORE USE WITH INCLUDED MICRO USB CABLE

FULL CHARGE IS REACHED IN 1.5 - 3 HOURS

**PULSING ORANGE** - CHARGING



**SOLID ORANGE** - FULLY CHARGED



**BLINKING RED** - LOW BATTERY




BATTERY LIFE TYPICALLY RANGES FROM 2.5 - 16 HOURS, 8 HOURS OF PLAYBACK AT 70% VOLUME


YOUR BOOMBOT PRO IS NOT WATERPROOF WHILE CHARGING, IT IS ONLY WATERPROOF WITH THE REAR DOOR CLOSED

BOOMBOT PRO

# BLUETOOTH PAIRING

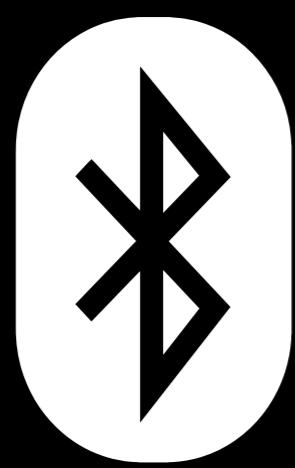

HOLD (2 SECONDS)

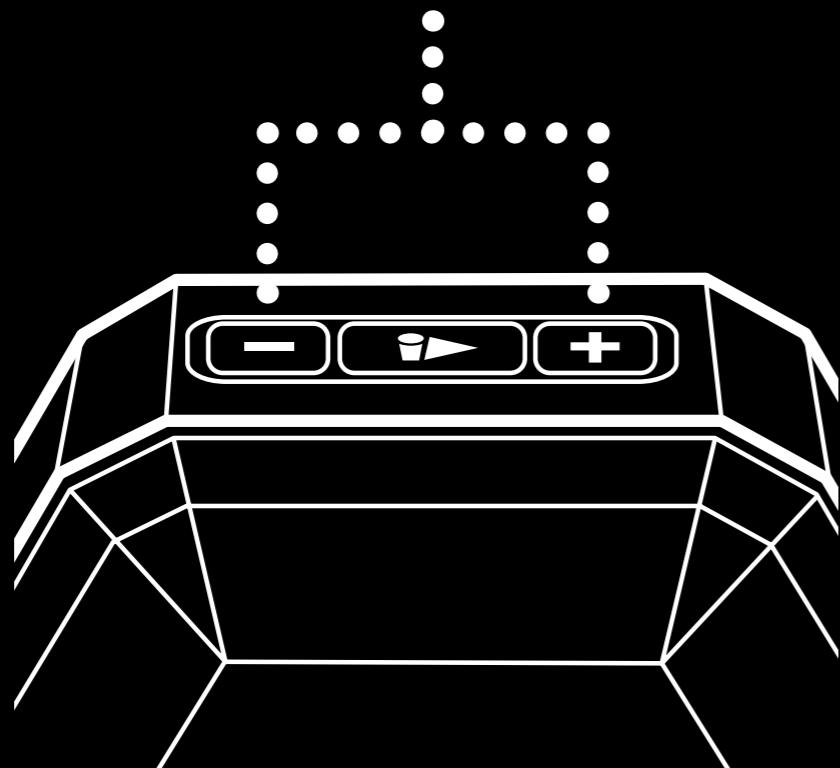

YOUR BOOMBOT PRO CONNECTS EASILY WITH YOUR BLUETOOTH DEVICE

1. POWER ON BOOMBOT PRO INDICATED BY A BLINKING BLUE LED



2. SELECT BOOMBOT PRO ON YOUR BLUETOOTH DEVICE'S DISCOVERABLE DEVICE LIST

3. BOOMBOT PRO WILL CHIME WITH A PAIRING ALERT AND A SOLID BLUE LED



YOUR BOOMBOT PRO WILL AUTOMATICALLY BE PAIRED TO THE MOST RECENTLY CONNECTED DEVICE

TO DISCONNECT YOUR BOOMBOT PRO, HOLD BOTH VOLUME BUTTONS (+ AND -) SIMULTANEOUSLY FOR 2 SECONDS




TO RESET BLUETOOTH CONNECTION, HOLD BOTH VOLUME BUTTONS (+ AND -) SIMULTANEOUSLY FOR 2 SECONDS



**BOOMBOT PRO**

# AUDIO CONTROLS

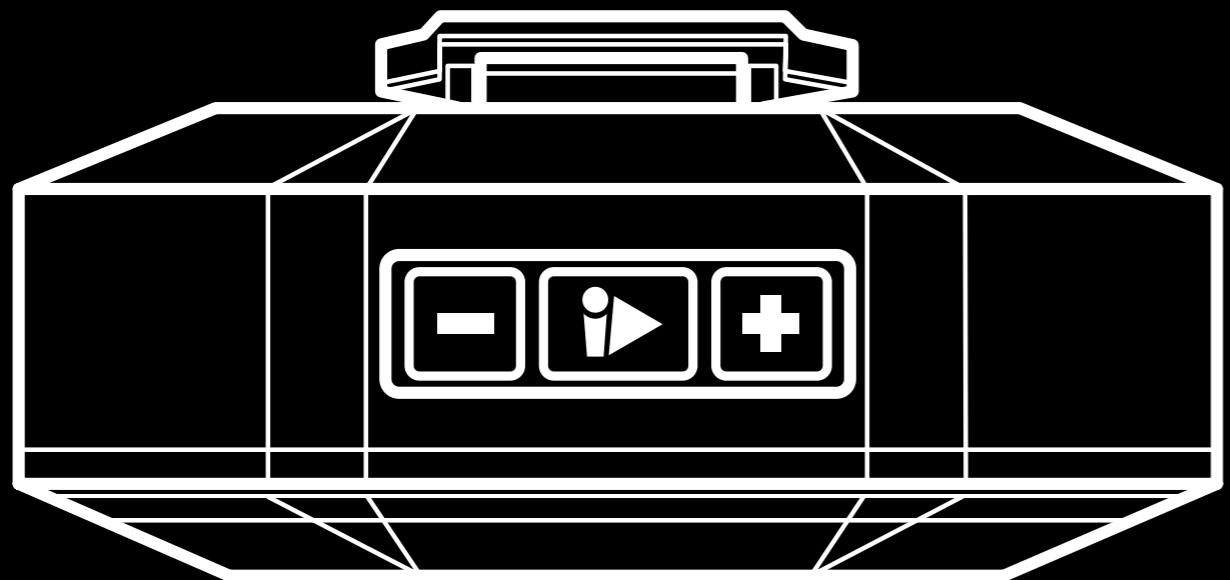

• YOUR BOOMBOT PRO IS BUILT FOR  
• OPTIMAL AUDIO QUALITY WITH  
• THE SPEAKER CLIPPED ON OR SEATED  
• WITH BUTTONS FACING UPWARD

• **PLAY** - PRESS COMMAND



• **PAUSE** - PRESS COMMAND



• **NEXT TRACK** - PRESS COMMAND X 2



• **PREVIOUS TRACK** - PRESS COMMAND X 3



• **VOLUME UP** - PRESS VOLUME UP



• **VOLUME DOWN** - PRESS VOLUME DOWN




• VOLUME CONTROLS RAMP IN SPEED  
• WHEN HELD DOWN

• **+** HOLD -OR- **-** HOLD

BOOMBOT **PRO**

# SPEAKERPHONE

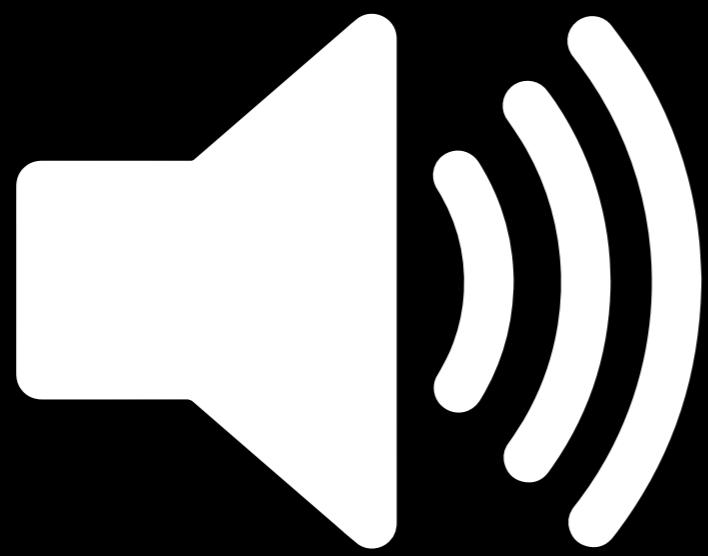

- THE BUILT IN MICROPHONE TURNS YOUR BOOMBOT PRO INTO A WIRELESS SPEAKERPHONE
- FOR BEST RESULTS, SPEAK WITHIN 3 FEET OF THE FRONT OF THE SPEAKER
- SPEAKERPHONE CONTROLS ARE ENABLED WHEN RECEIVING A CALL

**ANSWER CALL** - PRESS COMMAND



**END CALL** - HOLD COMMAND



**IGNORE CALL** - PRESS A VOLUME BUTTON



**SIRI / GOOGLE VOICE**

- YOUR BOOMBOT PRO CAN UTILIZE SIRI OR GOOGLE VOICE ASSISTANT WHILE CONNECTED TO A BLUETOOTH DEVICE OR SMARTPHONE


**OPEN ASSISTANT** - HOLD COMMAND



**CLOSE ASSISTANT** - HOLD COMMAND



# FLASH MEMORY

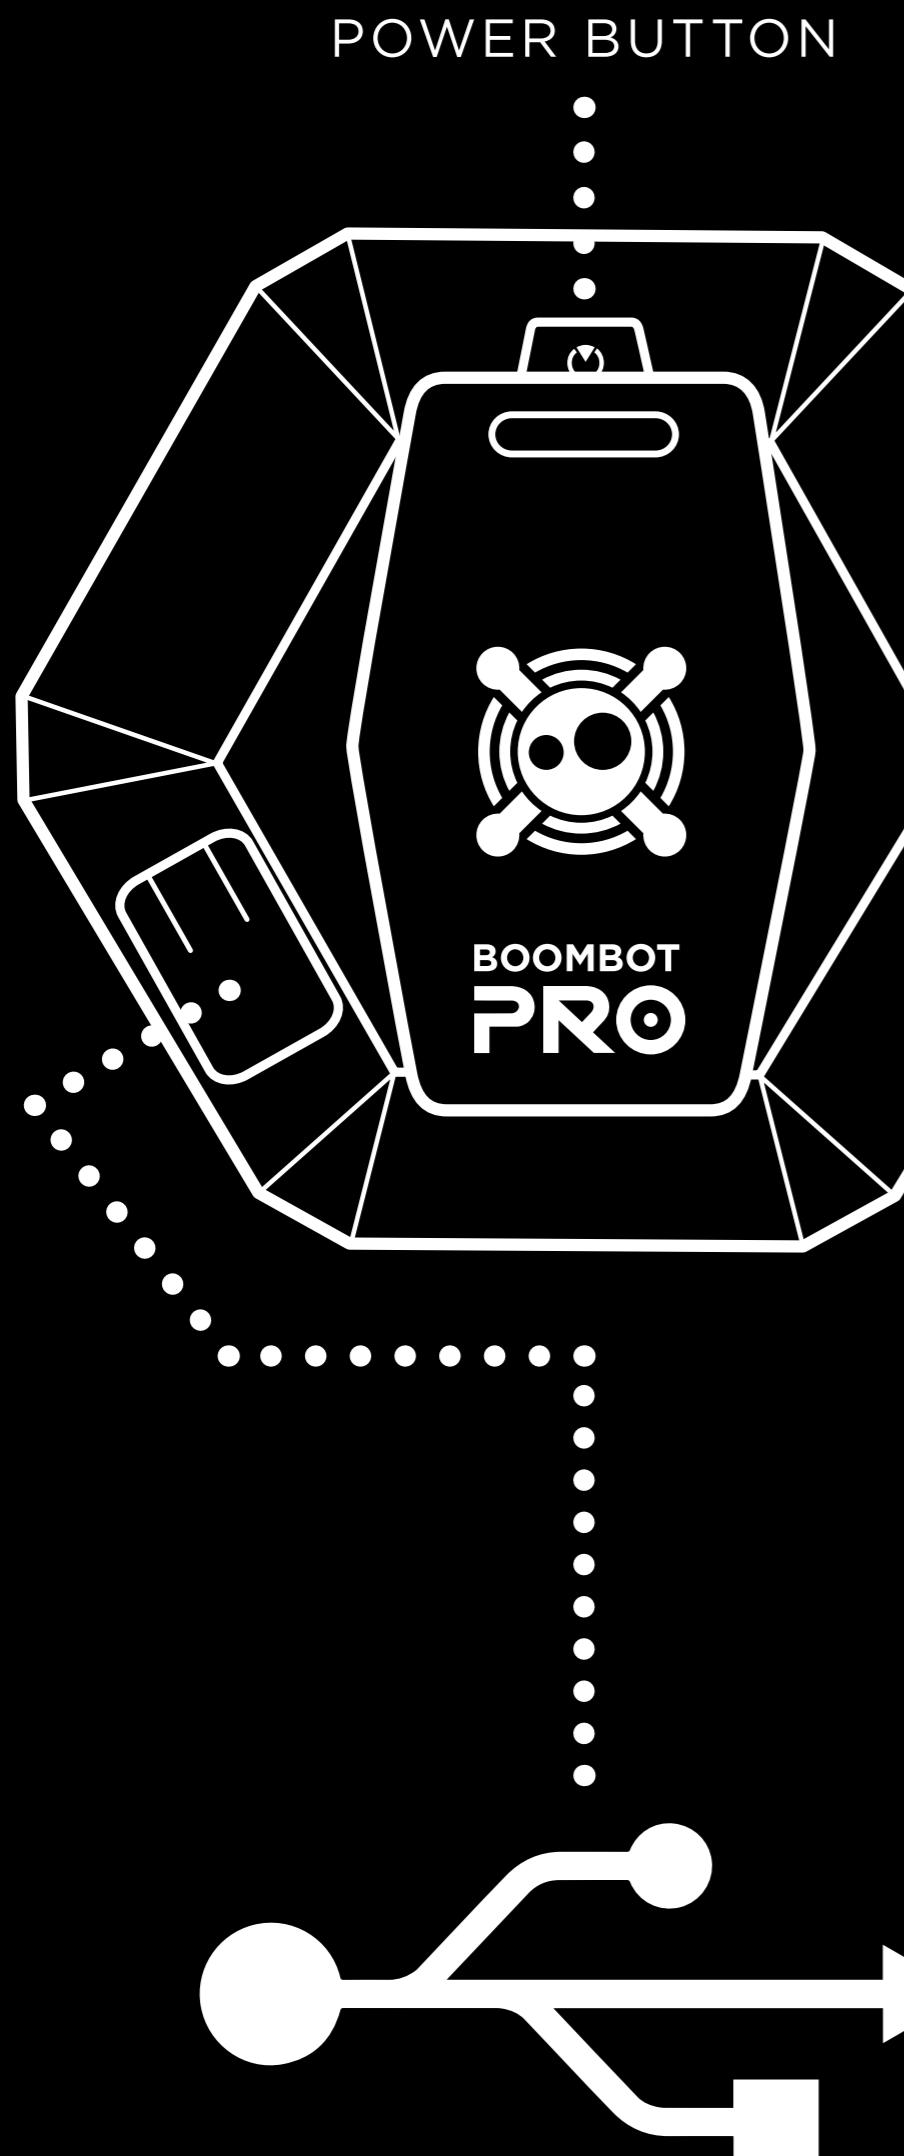

- YOUR BOOMBOT PRO INCLUDES AN ON-BOARD, 2GB OF FLASH MEMORY, CAPABLE OF STORING UP TO 250 TRACKS

- FOR FLASH MEMORY PLAYBACK, DOUBLE TAP POWER BUTTON WHEN DEVICE IS IN STANDARD BLUETOOTH MODE - THIS WILL BE INDICATED BY A SOLID PURPLE LED



- ONCE IN FLASH MEMORY PLAYBACK MODE, REFER TO AUDIO CONTROLS FOR PLAYBACK


- FOR FLASH MEMORY SHUFFLE PLAYBACK, SINGLE TAP POWER BUTTON WHILE IN FLASH MEMORY MODE - THIS WILL BE INDICATED BY A SOLID GREEN LED



## MODIFY FLASH MEMORY

 - TO CHANGE CONTENT STORED ON YOUR BOOMBOT PRO, CONNECT TO A LAPTOP OR COMPUTER WITH INCLUDED USB CABLE

1. POWER ON BOOMBOT PRO, THEN DOUBLE TAP POWER BUTTON



2. BOOMBOT PRO WILL MOUNT AS A DRIVE, INDICATED BY A SOLID WHITE LED



3. DRAG AND DROP MP3 OR MP4 AUDIO FILES ON TO BOOMBOT DRIVE

- NOTE: ON MAC OSX, AFTER REMOVING THE CONTENT FROM THE BOOMBOT DRIVE IT IS NECESSARY TO EMPTY TRASH TO REMOVE THE FILES

# SPECIFICATIONS

<b>AUDIO</b>	PRO-TUNED 40mm 4W DUAL COIL ACOUSTIC DRIVERS WITH PROGRESSIVE DSP TUNING
<b>FLASH DRIVE</b>	2GB (UP TO 250 TRACKS), STANDARD PLAYBACK OR SHUFFLE
<b>PLAY TIME</b>	8 HOURS OF CONTINUOUS PLAY
<b>STANDBY TIME</b>	UP TO 14 DAYS
<b>WEIGHT</b>	232g/ 8.2oz
<b>DIMENSIONS</b>	105mm L x 49mm W x 95mm H
<b>STEREO INFORMATION</b>	INPUT: BLUETOOTH WIRELESS OUTPUT: N/A
<b>DEVICE COMPATIBILITY</b>	BLUETOOTH-ENABLED DEVICES INCLUDING iPHONE, iPAD, iPOD TOUCH, ANDROID SMARTPHONES AND TABLETS, AND MOST MAC OR PC COMPUTERS
<b>INGRESS PROTECTION</b>	IPX7 WATER RESISTANT TO 3 METERS SUBMERSION
<b>MULTI-POINT TECHNOLOGY</b>	ACCEPT CALLS WHILE IN PLAY MODE
<b>BLUETOOTH 4.0</b>	PROFILES: ADVANCED AUDIO DISTRIBUTION PROFILE(A2DP) 1.2, HANDS-FREE PROFILE(HFP) 1.5, HEADSET PROFILE(HSP) 1.1, 100-FOOT RANGE
<b>MIC CONTROL FUNCTIONS</b>	SIRI AND GOOGLE VOICE COMPATIBLE
<b>BATTERY TYPE/CAPACITY</b>	RECHARGEABLE, NON-REPLACEABLE LITHIUM POLYMER
<b>BATTERY STATUS</b>	DISPLAYED ON HANDSET, AUTOMATICALLY SHUTS DOWN AFTER 5 MINUTES OF INACTIVITY OR UNPAIRED
<b>CHARGE CONNECTOR PORT</b>	MICRO USB (CABLE INCLUDED)
<b>CHARGE TIME (MAXIMUM)</b>	LESS THAN 100 MINUTES FOR FULL CHARGE
<b>WARRANTY AND SERVICE</b>	1-YEAR LIMITED WARRANTY BARRING SALT WATER

BOOMBOT PRO

# TROUBLESHOOTING

## **BOOMBOT DRIVE NOT SHOWING UP ON COMPUTER**

DOUBLE TAP THE POWER BUTTON (WHITE LED) AND MAKE SURE THE USB CABLE IS SECURELY CONNECTED TO YOUR DEVICE

## **DEVICE NOT PAIRING**

TURN UNIT ON AND OFF AND RESET BLUETOOTH BY HOLDING + AND -  
DELETE ADDITIONAL BLUETOOTH DEVICES FROM BLUETOOTH SETTINGS

## **MUSIC NOT PLAYING**

CHECK MUSIC SOURCE AND INTERNET/DATA

## **MUSIC NOT LOADING ONTO FLASH STORAGE**

MAKE SURE FILE FORMAT IS MP3 OR MP4 AND LESS THAN 2GB IN SIZE

## **DEVICE NOT CHARGING**

CONFIRM MICRO USB CABLE IS SEATED PROPERLY IN PORT AND DEVICE HAS APPROPRIATE POWER INPUT

## **MICROPHONE INPUT UNCLEAR**

BE SURE USER VOICE INPUT IS WITHIN 3 FEET OF THE FRONT OF PRO SPEAKER

FOR ADDITIONAL SUPPORT HEAD OVER TO [BOOMBOTIX.COM/SUPPORT](http://BOOMBOTIX.COM/SUPPORT)

**BOOMBOT PRO**

# WARRANTY



Boombotix warrants to the original retail purchaser of this Boombotix portable speaker that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s). The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase. This Warranty is not transferable or assignable. This Warranty does not apply to:

- (a)** Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b)** Product whose mechanical serial number or electronic serial number has been removed, altered or defaced;
- (c)** Damage from excessive exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d)** Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e)** Defects in appearance, cosmetic, decorative or structural items such as framing and nonoperative parts;
- (f)** Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, blown fuse, theft or improper usage of any electrical source.
- (g)** Product taken apart without written permission by Boombotix. This includes and is not limited to removing the metal clip or removing the screws holding the casing together.

Boombotix reserves the right to inspect any Product subject to a warranty claim to determine, at its sole discretion, whether the claimed defect is a Manufacturing Defect or otherwise. Note that Boombotix regularly changes the models, colorways, and styles of its Products and cannot guarantee the availability of an exact replacement for any Product. **BOOMBOTIX DOES NOT ASSUME ANY LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES UNDER THIS LIMITED WARRANTY.**

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Caution!**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



SOUND OF THE BRAVE

[www.boombotix.com](http://www.boombotix.com)