



A small white speaker icon with three curved lines representing sound waves, located in the bottom right corner of the slide.



BLUETOOTH

- Boombot is paired: Solid blue light.
- Reset Bluetooth connection: Hold [+] and [-] for 2 seconds.

1
TAP TO PL.
DOUBLE TAP T
TRIPLE TAP FOR P

DATA ENTRY

- Full charge will take 1-2 hours, indicated by a **pulsing orange** light.
- Boombot is fully charged when indicated by a **solid orange** light.
- Boombot battery is low when indicated by a **flashing red** light.

- To modify:
 1. Conn.

2. Power on Boombot PRO+.
3. Double tap power button.
4. Boombot PRO+ will mount as a drive, indicated by a solid white light.
5. Once file transfer is complete, eject Boombot PRO+ flash drive.

- Filetypes accepted: M4A, MP3, WAV, FLAC, OGG, WMA.
- Empty trash after removing files from Boombot PRO+ flash drive.
- Device will accept up to 2GB (approx. 250 songs) of content.


- To shuffle flash flash drive play

- Flash drive playback mode, indicated by a solid green light.
- Flash drive playback controls are identical to Bluetooth playback controls.

SPEAKERPHONE + VOICE ASSISTANT

- Answer incoming phone call: Tap center play button.
- End current phone call: Hold center play button.
- Ignore incoming phone call: Press [+] or [-].
- Open Siri/Google Voice assistant: Hold center play button.

- (b) Product whose mechanism of damage is not known
- (c) Damage from excessive use

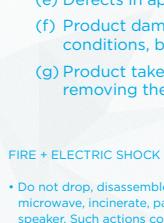

- Clean the Boombot speaker only with
- Do not expose your Boombot speaker
- Do not leave your Boombot speaker in

time, maximum operating temperature is 70°C.

- Do not leave your Boombot speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.
- Do not charge the Boombot speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the Boombot speaker when it is being charged. Always unplug the charger first before cleaning the Boombot speaker.

TO ACTIVATE YOUR ONE YEAR WARRANTY AND DOWNLOAD USER MANUAL, VISIT US AT: BOOMBOTIX.COM/SIGNUP

[OOMBOTIX.COM/SIGNUP](https://oombotix.com/signup)

CC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

stallation. This equipment generates uses and can radiate radio frequency energy; in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, the user is encouraged to try to correct the interference at interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, the user is encouraged to try to correct the interference at

- Reorient or relocate the receiving antenna.
- Increase the separation distance between the antenna and the receiver.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV tech

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this
(2) this