

IMPORTANT SAVEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER- TO REDUCE THE RISK OF ELECTROCUTION:
Do not use the charging base near water (bathtub, sink, etc.) or outdoors. Never immerse in liquids. Choose a stable, dry location.

Check supply cord and charging device regularly for cracks or other damages. Never touch with sharp/hot objects. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped. Never operate damaged charging device or toothbrush.

WARNING- To reduce the risk of burns, electrocution, fire, or injury to persons.

Use this product only for its intended use as described in this manual.

Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

Improper repairs or modifications to the device may result in electric shock, injury or fire.

Replace the brush heads after a fall or impact (even without visible damage). If parts of the brush head break off, there is a risk of choking.

Never touch the mains plug with wet hands and never pull it out by the cable.

Only use supplied charging device and original brush heads.

Do not use outdoors or where oxygen is being administered.


Use the device only at room temperature (0-40°C)

Never use while sleeping or drowsy.

This toothbrush is also suitable for braces and dentures.

Wearers of a pacemaker or other electronical implant should consult a doctor prior to use.

SAVE THESE INSTRUCTIONS

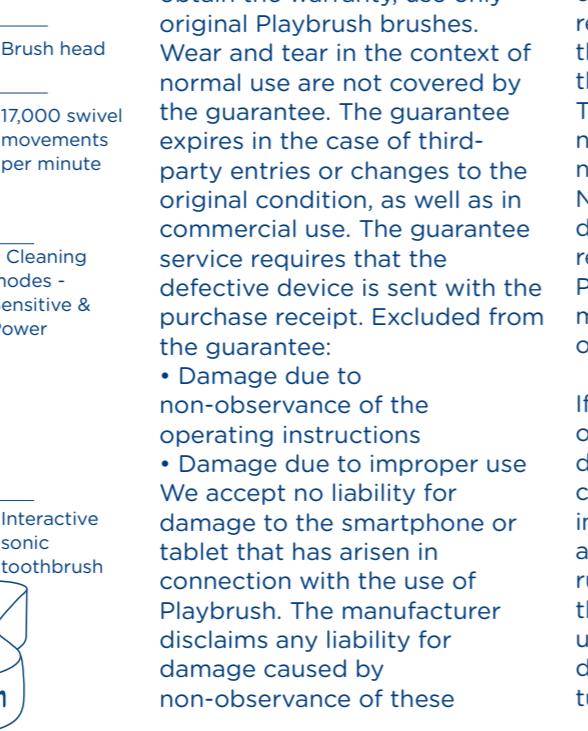

HYGIENE

Replace brush heads every 3 months. Thoroughly rinse the brush attachment and toothbrush under running water after each use.

GUARANTEE

For this device, the manufacturer provides you with a two-year warranty from the date of purchase (purchase receipt). The guarantee covers the repair or replacement of a device with material or manufacturing defects. To obtain the warranty, use only original Playbrush brushes.

Wear and tear in the context of normal use are not covered by the guarantee. The guarantee expires in the case of third-party entries or changes to the original condition, as well as in commercial use. The guarantee service requires that the defective device is sent with the purchase receipt. Excluded from the guarantee:

- Damage due to non-observance of the operating instructions

• Damage due to improper use

We accept no liability for damage to the smartphone or tablet that has arisen in connection with the use of Playbrush. The manufacturer disclaims any liability for damage caused by non-observance of these

operating instructions, by improper repairs or incorrect operation. Subject to change.

DECLARATION OF CONFORMITY

Hereby, Playbrush GmbH declares that Playbrush complies with the essential requirements and other relevant provisions of Directives 2014/30/EU, 2014/35/EU, 2014/53/EU, 2009/125/EC and 2011/65/EU.

The compliance statement can be viewed at https://www.playbrush.com/wp-content/uploads/2018/07/DoC_en.pdf.

BATTERY PACK

To extend the life of the battery, use the toothbrush at least every six months until fully discharged and fully charged again. The toothbrush should never be left uncharged and charged at least every 6 months.

Place the toothbrush in the charger after each use to ensure optimal performance at all times. For the most energy-efficient use, it is recommended that the plug of the charger be removed from the socket after full charge.

This product contains a non-replaceable, rechargeable nickel metal hydride battery. DO NOT attempt to open or disassemble the device to replace or remove the battery.

Please contact the original manufacturer for maintenance or replacement of the battery.

DISPOSAL

Electrical appliances must not be disposed of with household waste. Use the return options in the designated sales or collection points. The toothbrush contains a nickel-metal hydride battery. For environmental reasons, it must be removed at the end of its life and disposed of in an environmental manner.

Quickstart Guide

FAQ

My Playbrush Smart Sonic does not work:

- Your Playbrush may need to be charged. Place the toothbrush on charge overnight.
- Try using the socket with another electrical appliance.

Brushing performance is low or insufficient:

- The toothbrush head may need to be cleaned or replaced.
- Your Playbrush may need to be charged.

Playbrush Smart Sonic turned off during brushing:

- Playbrush will automatically turn off when the battery level is low. Place the Playbrush on charge for at least 1 hour or overnight if possible.

Playbrush Smart Sonic sometimes vibrates in unusual motions during brushing:


- Your Playbrush's vibrations will quickly pause every thirty seconds and start again at 2 minutes to help track brushing time. Your Playbrush's vibrations will also pause to indicate if pressure or speed of brushing is too high.

You don't have access to all games or other features:


- Some games and brushing statistics are only available to subscription customers.
- To discover a subscription upgrade, please visit our webshop.



At the end of the service life, open the cap with a coin.

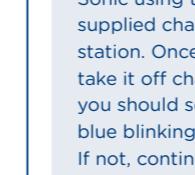

Press the unit against a firm surface and push out the inner components.

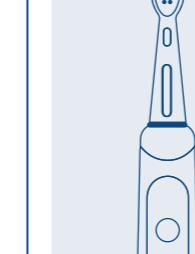

Cut through connecting wires and remove battery. Do not short-circuit the positive and negative poles. Take the battery to a designated collection point.



This device has been designed and complies with the safety requirements for portable RF exposure in accordance with FCC rule part §21093 and KDB 447498 DoI.

FCC ID: 2AF47A116



1 Activate

Charge the Playbrush Smart Sonic using the supplied charging station. Once you take it off charge you should see a blue blinking light. If not, continue charging.

2 Turn on Bluetooth

Make sure that Bluetooth on your smartphone/tablet is turned on. Don't pair Playbrush on your smartphone/tablet in Bluetooth settings. This takes place within the app.

3 Playbrush App

Download the Playbrush app onto your smartphone or tablet.

Android Users: If Bluetooth fails under the location settings, please allow the app to access your location. Playbrush will never actually access the location.

A one-off registration is required when first loading the app. If you purchased your Playbrush from the Playbrush website, please enter the email address you used for your order. Otherwise, please use any email address.

4 Connect

Pick up your Playbrush and launch the app. If the Playbrush isn't showing a blinking blue light, press the aero bar button in settings to turn on flight mode. Simply press the start button and connect in the app to disable flight mode.

If your Playbrush shows a blinking blue light, it will automatically begin to connect within the app. Your Playbrush is successfully connected when it shows a full blue light.

For any queries please contact us: support@playbrush.com

Playbrush Light Signals:

Blinking Red
Playbrush needs to be charged.

Blinking Green
Playbrush is charging.


Full Green Light
Playbrush is fully charged.

Vibration Feedback

When connected to the app, Playbrush will vibrate to indicate if pressure speed brushing is too high. When brushing (not using the app) Playbrush will vibrate every 3 seconds.

Flight mode

Use flight mode to save battery. Connect Playbrush to the app and press the aero bar button in settings to turn on flight mode. Simply press the start button and connect in the app to disable flight mode.

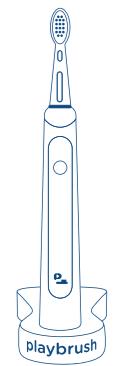

Instructions For Use

www.oralb.us

General Information
Model #: A116
Manufacturer: Oral-B
Model #: A116
Manufacturer: Oral-B
Type: A6
Disinfectant
Pleasant Breath
Taste
www.oralb.us
www.oralb.com
A5
A6
A7
A8
A9
A10
A11
A12
A13
A14
A15
A16
A17
A18
A19
A20
A21
A22
A23
A24
A25
A26
A27
A28
A29
A30
A31
A32
A33
A34
A35
A36
A37
A38
A39
A40
A41
A42
A43
A44
A45
A46
A47
A48
A49
A50
A51
A52
A53
A54
A55
A56
A57
A58
A59
A60
A61
A62
A63
A64
A65
A66
A67
A68
A69
A70
A71
A72
A73
A74
A75
A76
A77
A78
A79
A80
A81
A82
A83
A84
A85
A86
A87
A88
A89
A90
A91
A92
A93
A94
A95
A96
A97
A98
A99
A100
A101
A102
A103
A104
A105
A106
A107
A108
A109
A110
A111
A112
A113
A114
A115
A116
A117
A118
A119
A1100
A1101
A1102
A1103
A1104
A1105
A1106
A1107
A1108
A1109
A1110
A1111
A1112
A1113
A1114
A1115
A1116
A1117
A1118
A1119
A11100
A11101
A11102
A11103
A11104
A11105
A11106
A11107
A11108
A11109
A11110
A11111
A11112
A11113
A11114
A11115
A11116
A11117
A11118
A11119
A111100
A111101
A111102
A111103
A111104
A111105
A111106
A111107
A111108
A111109
A111110
A111111
A111112
A111113
A111114
A111115
A111116
A111117
A111118
A111119
A1111100
A1111101
A1111102
A1111103
A1111104
A1111105
A1111106
A1111107
A1111108
A1111109
A1111110
A1111111
A1111112
A1111113
A1111114
A1111115
A1111116
A1111117
A1111118
A1111119
A11111100
A11111101
A11111102
A11111103
A11111104
A11111105
A11111106
A11111107
A11111108
A11111109
A11111110
A11111111
A11111112
A11111113
A11111114
A11111115
A11111116
A11111117
A11111118
A11111119
A111111100
A111111101
A111111102
A111111103
A111111104
A111111105
A111111106
A111111107
A111111108
A111111109
A111111110
A111111111
A111111112
A111111113
A111111114
A111111115
A111111116
A111111117
A111111118
A111111119
A1111111100
A1111111101
A1111111102
A1111111103
A1111111104
A1111111105
A1111111106
A1111111107
A1111111108
A1111111109
A1111111110
A1111111111
A1111111112
A1111111113
A1111111114
A1111111115
A1111111116
A1111111117
A1111111118
A1111111119
A11111111100
A11111111101
A11111111102
A11111111103
A11111111104
A11111111105
A11111111106
A11111111107
A11111111108
A11111111109
A11111111110
A11111111111
A11111111112
A11111111113
A11111111114
A11111111115
A11111111116
A11111111117
A11111111118
A11111111119
A111111111100
A111111111101
A111111111102
A111111111103
A111111111104
A111111111105
A111111111106
A111111111107
A111111111108
A111111111109
A111111111110
A111111111111
A111111111112
A111111111113
A111111111114
A111111111115
A111111111116
A111111111117
A111111111118
A111111111119
A1111111111100
A1111111111101
A1111111111102
A1111111111103
A1111111111104
A1111111111105
A1111111111106
A1111111111107
A1111111111108
A1111111111109
A1111111111110
A1111111111111
A1111111111112
A1111111111113
A1111111111114
A1111111111115
A1111111111116
A1111111111117
A1111111111118
A1111111111119
A11111111111100
A11111111111101
A11111111111102
A11111111111103
A11111111111104
A11111111111105
A11111111111106
A11111111111107
A11111111111108
A11111111111109
A11111111111110
A11111111111111
A11111111111112
A11111111111113
A11111111111114
A11111111111115
A11111111111116
A11111111111117
A11111111111118
A11111111111119
A111111111111100
A111111111111101
A111111111111102
A111111111111103
A111111111111104
A111111111111105
A111111111111106
A111111111111107
A111111111111108
A111111111111109
A111111111111110
A111111111111111
A111111111111112
A111111111111113
A111111111111114
A111111111111115
A111111111111116
A111111111111117
A111111111111118
A111111111111119
A1111111111111100
A1111111111111101
A1111111111111102
A1111111111111103
A1111111111111104
A1111111111111105
A1111111111111106
A1111111111111107
A1111111111111108
A1111111111111109
A1111111111111110
A1111111111111111
A1111111111111112
A1111111111111113
A1111111111111114
A1111111111111115
A1111111111111116
A1111111111111117
A1111111111111118
A1111111111111119
A11111111111111100
A11111111111111101
A11111111111111102
A11111111111111103
A11111111111111104
A11111111111111105
A11111111111111106
A11111111111111107
A11111111111111108
A11111111111111109
A11111111111111110
A11111111111111111
A11111111111111112
A11111111111111113
A11111111111111114
A11111111111111115
A11111111111111116
A11111111111111117
A11111111111111118
A11111111111111119
A111111111111111100
A111111111111111101
A111111111111111102
A111111111111111103
A111111111111111104
A111111111111111105
A111111111111111106
A111111111111111107
A111111111111111108
A111111111111111109
A111111111111111110
A111111111111111111
A111111111111111112
A111111111111111113
A111111111111111114
A111111111111111115
A111111111111111116
A111111111111111117
A111111111111111118
A111111111111111119
A1111111111111111100
A1111111111111111101
A1111111111111111102
A1111111111111111103
A1111111111111111104
A1111111111111111105
A1111111111111111106
A1111111111111111107
A1111111111111111108
A1111111111111111109
A1111111111111111110
A1111111111111111111
A1111111111111111112
A1111111111111111113
A1111111111111111114
A1111111111111111115
A1111111111111111116
A1111111111111111117
A1111111111111111118
A1111111111111111119
A11111111111111111100
A11111111111111111101
A11111111111111111102
A11111111111111111103
A11111111111111111104
A11111111111111111105
A11111111111111111106
A11111111111111111107
A11111111111111111108
A11111111111111111109
A11111111111111111110
A11111111111111111111
A11111111111111111112
A11111111111111111113
A11111111111111111114
A11111111111111111115
A11111111111111111116
A11111111111111111117
A11111111111111111118
A11111111111111111119
A111111111111111111100
A111111111111111111101
A111111111111111111102
A111111111111111111103
A111111111111111111104
A111111111111111111105
A111111111111111111106
A111111111111111111107
A111111111111111111108
A111111111111111111109
A111111111111111111110
A111111111111111111111
A111111111111111111112
A111111111111111111113
A111111111111111111114
A111111111111111111115
A111111111111111111116
A111111111111111111117
A111111111111111111118
A111111111111111111119
A1111111111111111111100
A1111111111111111111101
A1111111111111111111102
A1111111111111111111103
A1111111111111111111104
A1111111111111111111105
A1111111111111111111106
A1111111111111111111107
A1111111111111111111108
A1111111111111111111109
A1111111111111111111110
A1111111111111111111111
A1111111111111111111112
A1111111111111111111113
A1111111111111111111114
A1111111111111111111115
A1111111111111111111116
A1111111111111111111117
A1111111111111111111118
A1111111111111111111119
A11111111111111111111100
A11111111111111111111101
A11111111111111111111102
A11111111111111111111103
A11111111111111111111104
A11111111111111111111105
A11111111111111111111106
A11111111111111111111107
A11111111111111111111108
A11111111111111111111109
A11111111111111111111110
A11111111111111111111111
A11111111111111111111112
A11111111111111111111113
A11111111111111111111114
A11111111111111111111115
A11111111111111111111116
A11111111111111111111117
A11111111111111111111118
A11111111111111111111119
A111111111111111111111100
A111111111111111111111101
A111111111111111111111102
A111111111111111111111103
A111111111111111111111104
A111111111111111111111105
A111111111111111111111106
A111111111111111111111107
A111111111111111111111108
A111111111111111111111109<br