


300 lumen LED Lantern With Remote Control

User Manual

Model: MX1914

300 lumen LED Lantern With Remote Control

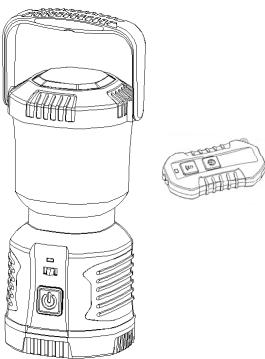

Switch Operation:

switch



 
Features:

- Dual color LED's (twenty white LED's and four amber LED's)
- Rugged housing is IPX4 weather-resistant
- Glow in the dark handle, body ring and switch
- 4 light modes: white high, white low, amber high and amber low
- Battery capacity indication
- Manual or radio remote control operation
- Remote distance up to 35 feet
- Built-in recessed hook at lantern base for hanging as downlight
- Powered by three "D" size batteries(not included)
- Output 300 lumens with 48-300 hours run time

Battery Installation:

Remote control:

- (1) CR2032 batteries - 3V
- To install the A24:A33 batteries, open the battery cover.
- Install one CR2032 battery with the positive + side facing up.



Lantern:

- (3) D size batteries
- To install the batteries, open the battery cover.
- Install three "D" size batteries in proper polarity.
- Improper installation of the batteries will damage the light.
- Reinstall the battery cover.



To protect the environment, please recycle the batteries. For more information about battery recycling, please go to: www.batteryrecycling.com

WARNING:

Never mix fresh and used batteries.

Never mix different battery brands or chemistry types.

Always remove drained batteries immediately. Remove batteries during long periods of storage.

Recessing Hook:

The lantern built-in recessed hook at lantern base for hanging as downlight.

Manual control:

- Turn operation switch to left(LED bub icon) to start the manual control. Light will turn into white high mode. Change lighting modes (white high, white low, amber high, amber low) by pressing and releasing the mode change button.
- Turn off the light by pressing the mode change button for 5s or turn operation switch to lock mode.

Remote control:

- Turn operation switch to right(Remote icon) to start the remote control. Remote control indicator light will turn to blue. Change lighting modes (white high, white low, amber high, amber low) by pressing and releasing the mode change button on the remote control.
- Turn off the light by pressing the mode change button on the remote control for 5s or turn operation switch to lock mode.
- The remote control built-in two white LED lights, press the power switch to turn on the light, release the power switch to turn off.

It is suggested to turn the operation switch to lock position after you turn off your lantern and during transportation.

Troubleshooting:

If the lantern fails to light:

- Check the batteries for proper installation.
- If proper installation is confirmed replace batteries.

FCC NOTE :

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Item No.: MX1914

Made in China