

blink
an amazon company

XT2

Quick Start Guide



Start
Here

Thank you for purchasing the Blink XT2!

You can install the Blink XT2 in three easy steps:

Step 1: Download the Blink Home Monitor App ([page 4](#))

Step 2: Connect your Sync Module ([page 4](#))

Step 3: Add and position your camera(s) ([page 6](#))

To install your camera or system, you can:

- Follow the in-app instructions as directed.
- Follow the steps listed in this guide.
- For more detailed instructions and/or how to customize your experience, scan the QR code or visit: support.blinkforhome.com



How to get started:

- If you're adding a new system, go to **Step 1** on [page 4](#) for instructions on how to add your system.
- If you're adding a camera to an existing system, go to **Step 3** on [page 6](#) for instructions on how to add your camera(s).
- Before you begin, please make sure you have the following minimum requirements:
 - A mobile device running the minimum software requirement. You can check the latest software requirements by going to: blinkforhome.com/requirements
 - Home WiFi Network (2.4GHz only).
 - Internet access with upload speed of at least 2 Mbps.

Step 1: Download the Blink Home Monitor App

- A. Download and launch the Blink Home Monitor App on your phone or tablet through the Apple App Store, Google Play Store, or Amazon App Store.
- B. Create a new Blink account.

Step 2: Connect Your Sync Module


- A. Follow the in-app instructions to add a Blink system.
- B. When directed, scan the Sync Module serial number and complete setup in the app.

Note: The Sync Module is required for your battery powered cameras to function

Blink Sync Module



Connectivity between the camera and the Sync Module is optimized when positioned within 100 ft of each other.

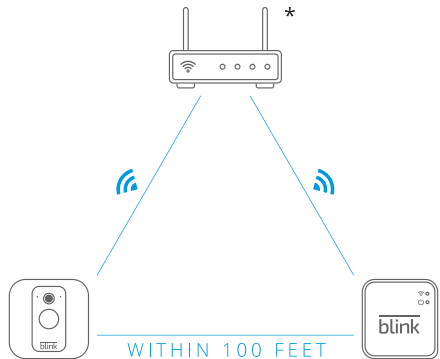

* WiFi range is dependent on conditions.
Distance between Blink devices and WiFi can vary.