

# blink video doorbell 2

## Quick Start Guide

# Getting started with Blink is easy

1. Sign in to or create an account in the Blink app.
2. Add your device by clicking the plus sign (+) at the top right of the app home screen. Start with the Sync Module, then add your Video Doorbell 2.
3. Follow the in-app instructions to complete setup.

For more mounting, setup, and installation instructions, scan this QR code or go to [blink.com/setup](https://blink.com/setup)



## **IMPORTANT PRODUCT INFORMATION**

### **⚠ SAFETY INFORMATION**

READ ALL SAFETY INFORMATION BEFORE USING THE DEVICE. FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

Use only accessories supplied with your device, or specifically marketed for use with your device, to power your device. Use of third-party accessories may impact your device's performance. In limited circumstances, use of third-party accessories may void your device's limited warranty. In addition, use of incompatible third-party accessories may cause damage to your device or the third-party accessory. Read all safety instructions for any accessories before using with your device.

**WARNING:** Small parts contained in your device and its accessories may present a choking hazard to small children.

## **Video Doorbell 2**

**WARNING:** Electrical shock hazard. Disconnect power to installation area at your circuit breaker or fuse box before beginning installation. Always use caution when handling electrical wiring.

Installation by a qualified electrician may be required in your area. Refer to your local laws and building codes before performing electrical work; permits and/or professional installation may be required by law.

Please consult a qualified electrician in your area if you are unsure or uncomfortable in performing the installation.

Do not install when it is raining.

**CAUTION:** Risk of fire. Do not install near combustible or flammable surfaces.

**CAUTION:** When mounting this device in elevated locations, use precautions to ensure that the device does not fall and harm bystanders.

Your device can withstand outdoor use and contact with water under certain conditions. However, your device is not intended for underwater use and may experience temporary effects from exposure to water. Do not intentionally immerse your device in water. Do not spill any food, oil, lotion, or other abrasive substances on your device. Do not expose your device to pressurized water, high velocity water, or extremely humid conditions (such as a steam room). Do not expose your device or batteries to salt water or other conductive liquids. To protect against electric shock, do not place cord, plug, or device in water or other liquids. If your device gets wet from immersion in water or high pressure water, carefully disconnect all cables without getting your hands wet and wait for them to dry completely before powering it on again. Do not attempt to dry your device or batteries (if applicable) with an external heat source, such as a microwave oven or a hair dryer. To avoid risk of electric shock, do not touch your device or batteries or any wires connected to your device during a lightning storm while your device is powered. If your device or batteries appears to be damaged, discontinue use immediately.

Protect your device from direct sunlight.

### **Sync Module Core**

Your device is shipped with an AC adapter. Your device should only be powered using the AC adapter included with the device. If the adapter or cable appears damaged, discontinue use immediately.

Install your power adapter into an easily accessible socket-outlet located near the equipment that will be plugged into or powered by the adapter.

Do not expose your device or adapter to liquids. If your device or adapter gets wet, carefully unplug all cables without getting your hands wet and wait for the device and adapter to dry completely before plugging them in again. Do not attempt to dry your device or adapter with an external heat source, such as a microwave oven or a hair dryer. If the device or adapter appear damaged, discontinue use immediately. Use only accessories supplied with the device to power your device.

Install your power adapter into an easily accessible electrical

socket located near the equipment that will be plugged into or powered by the adaptor.

Don't expose your device to steam, extreme heat or cold. Use your device in a location where temperatures remain within the device's operating temperature range set forth in this guide. Your device may get warm during normal use.

## **BATTERY SAFETY** **Video Doorbell 2**

The lithium batteries accompanying this device cannot be recharged. Do not open, disassemble, bend, deform, puncture, or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion, high temperature or other hazard. Fires involving lithium batteries can usually be controlled with flooding with water, except in confined spaces where a smothering agent should be used.

If dropped and you suspect damage, take steps to prevent

any ingestion or direct contact of fluids and any other materials from the battery with skin or clothes. If a battery leaks, remove all batteries and recycle or dispose of them in accordance with battery manufacturer's recommendations. If fluid or other material from the battery comes into contact with skin or clothes, flush skin or clothes with water immediately. An open battery should never be exposed to water, as fire or explosion may result from exposure to water.

Insert the batteries in the proper direction as indicated by positive (+) and negative (-) markings in battery compartment. Always replace with non-rechargeable AA 1.5V lithium batteries (lithium metal batteries) like those provided with and specified for this product.

Do not mix used and new batteries or batteries of different types (for example, lithium and alkaline batteries). Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with applicable laws and regulations.

## **SAFELY CONNECTING YOUR VIDEO DOORBELL 2 TO YOUR HOME'S ELECTRICAL WIRING**

If you install the Video Doorbell 2 where a doorbell is already in use and you connect the Video Doorbell 2 to your home's doorbell electrical wiring, you must turn off the existing doorbell's power source at your home's circuit breaker or fuse and test that the power is off BEFORE removing the existing doorbell, installing the Video Doorbell 2, or touching electrical wires. Failure to turn off circuit breaker or fuse so could result in FIRE, ELECTRIC SHOCK, or OTHER INJURY or DAMAGE.

More than one disconnect switch may be required to turn off the equipment before servicing.

To test whether you have successfully de-energized your existing doorbell's power source, press your doorbell several times to confirm that the power is off.

If the electrical wiring in your home does not resemble any of the diagrams or instructions provided with Video Doorbell 2, if you encounter damaged or unsafe wiring, or if you are unsure or uncomfortable in performing this

installation or handling electrical wiring, please consult a qualified electrician in your area.

## **Protection Against Water**

### **Video Doorbell 2**

To reduce the risk of damage to your device, follow these instructions:

- Do not intentionally immerse your device in water or expose it to seawater, salt water, chlorinated water or other liquids (such as beverages).
- Do not spill any food, oil, lotion or abrasive substances on your device.
- Do not expose your device to pressurised water, high-velocity water or extremely humid conditions (such as a steam room).

If your device is dropped or otherwise damaged, the waterproofing of the device may be compromised.

For more information concerning care instructions and the waterproofing of your device, please see  
[amazon.com/devicesupport](http://amazon.com/devicesupport)

## **PRODUCT SPECIFICATIONS**

### **Video Doorbell 2**

Model Number: BDM00300U

Electrical Rating: 3x AA (LR91) 1.5 V lithium metal battery  
8-24 VAC, 50/60 Hz, 40 VA

Operating Temperature Range: -5°F to 113°F (-20°C to 45°C)

### **Sync Module Core**

Model number: BSM00600U

Electrical rating: 5V == 1A

Operating Temperature Range: 32°F to 104°F (0°C to 40°C)

## **FOR USA CUSTOMERS**

### **Supplier's Declaration of Conformity**

Device Name: Video Doorbell 2

Model: BDM00300U

Device Name: Sync Module Core  
Model: BSM00600U

This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2)  
this device must accept any interference received, including  
interference that may cause undesired operation.

**Responsible Party and Party issuing Supplier's  
Declaration of Conformity:**

Amazon.com Services LLC, 410 Terry Avenue North, Seattle,  
WA 98109, U.S.A.

**[blink.com/contact-us](http://blink.com/contact-us)**

**NOTE:** This equipment has been tested and found to  
comply with the limits for a Class B digital device, pursuant  
to part 15 of the FCC Rules. These limits are designed to  
provide reasonable protection against harmful interference  
in a residential installation.

This equipment generates, uses and can radiate radio  
frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Pursuant to Section 15.21 of the FCC rules, user changes or modifications not expressly approved by the party responsible for compliance could void the user's

authority to operate the equipment.

This device complies with FCC radio frequency radiation exposure limits set forth for an uncontrolled environment. Information is on file with the FCC and can be found by inputting such Product's FCC ID (which can be found on the device) into the FCC ID Search form available at [fcc.gov/oet/ea/fccid](http://fcc.gov/oet/ea/fccid)

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other product antenna or transmitter.

## **RECYCLING YOUR DEVICE PROPERLY**

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to [amazon.com/devicesupport](http://amazon.com/devicesupport)

## **Additional Safety and Compliance Information**

For additional safety, compliance, recycling and other important information regarding your device, please refer to the Legal and Compliance section of the About Blink menu in the Settings in your app or on the Blink website at [blink.com/safety-and-compliance](https://blink.com/safety-and-compliance)

## **TERMS AND POLICIES**

By purchasing or using the product, you agree to the Terms of Service found at [blink.com/terms-of-service](https://blink.com/terms-of-service)

## **LIMITED WARRANTY**

For information on our warranty and any other applicable policy, visit

[blink.com/blink-terms-warranties-and-notices](https://blink.com/blink-terms-warranties-and-notices)

©2025 Amazon.com, Inc. or its affiliates.  
Amazon, Alexa, Blink, and all related marks are  
trademarks of Amazon.com, Inc. or its affiliates.

