 




SAFETY INSTRUCTIONS:

This product is specially designed for your listening pleasure. In order to ensure accident-free operation, please abide by the guidelines listed below:



POWER: Only use the provided power supply.



ELECTRIC SHOCK: To prevent electric shock, do not pull or insert plug with your hand wet.



 
HEAVY PRESSURE / HEAT: The equipment should not have any objects on it. The speaker should be in a well ventilated cool area to avoid overheating.



DISMOUNTING: Do not under any circumstances attempt to open or repair the speaker yourself, only trained certified technicians.



POWER CABLE PROTECTION: Do not place objects on or step on the power cable, do not drag power cable forcefully.



NON USAGE: Please pull out plug from outlet and switch off main POWER while not in use for extended periods of time.

WARNING:

- The equipment will only work with an AC110V power supply, do not use any other power supply to drive the device.
- Do not expose to any liquid.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachment/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Don't put the speaker in a high moisture or a dusty place.
- Do not open the speaker tower, please service with a technician.

WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE



The symbols shown above are internationally accepted symbols that warn of potential hazards with electrical products. The lightning flash with arrow point in an equilateral triangle means that there are dangerous voltages present within the unit. The exclamation point in an equilateral triangle indicates that it is necessary for the user to refer to the owner's manual.

These symbols warn that there are no user serviceable parts inside the unit. Do not open the unit. Do not attempt to service the unit yourself. Refer all servicing to qualified personnel. Opening the chassis for any reason will void the manufacturer's warranty. Don't get the unit wet. If liquid is spilled on the unit, shut it off immediately and take it to a dealer for service. Disconnect the unit during storms to prevent damage.

ABOUT THE SPEAKER :

1. Accessories:

The tower speaker contains the speaker, remote control, and user manual.

2. Voltage:

AC 110V/60Hz

3. Power:

Press the Power button to choose "ON" or "OFF" to control the speaker. After using the speaker, please set the master volume to the min. This will help to ensure high quality audio performance for long term use.

4. Input (socket):

USB/SD/Microphone input/Audio input/Wireless

5. Play Mode:

Press the "MODE" button to change the mode and play audio by USB, SD, Aux in, FM radio or even using the wireless system. Please refer to the digital display screen to confirm the mode.

How to use the wireless function:

Press the "MODE" button to change the channel, when you see the words "BLUE" on the screen and hear a double tone, it means the speaker is in wireless mode. Then pair your mobile with the speaker. After connected successfully, you will hear another tone. Then you can play your music from your phone.

6. PREV/PLAY/PAUSE/NEXT/REPEAT/EQ/MODE:

- PREV/VOL- : previous song /decrease volume by pressing for a few seconds
- PLAY/PAUSE: play / stop music / keep pressing for a few seconds for FM radio channels and for searching and storage.
- REPEAT: When music is playing, press the button for single song repeat
- MODE: USB, SD, FM, LINE (AUX IN), Blue wireless
- NEXT/VOL+: next song / increase volume
- EQ: Adjust bass and tone levels.

7. M. VOL /ECHO/BASS/TREBLE/MIC.VOL:

- M.VOLUME: Master volume control
- MIC.VOL: Microphone volume
- ECHO: Microphone ECHO
- TREBLE: Music Treble volume control
- BASS: Music Bass volume tuning

8. AUDIO INPUT:

You can connect a DVD, CD player or other music devices to play the songs.

TROUBLESHOOTING:

1. No sound:

- Please check if the power plug is inserted properly into outlet. Does the outlet provide power?
- Check to see if the audio cable is connected correctly.
- Check if the main volume knob is turned up.
- The speaker and parts are disconnected.

2. Poor Sound:

- Change location of the speaker, with no obstructions.
- Check for incorrect speaker connections.
- Bass and treble knobs are set too low or too high.
- Poor music quality from source.

3. Karaoke mode has a sharp noise:

- Tune the wireless microphone properly.
- Adjust the distance between the equipment and the wireless microphone.
- If two people are singing at the same time, adjust the distance between as the microphones may be causing signal interference.

WARNING:

DO NOT open the speaker. Please only use certified technicians for any repair or maintenance.

CONTROL PANEL INSTRUCTIONS:

