
User Manual

HGR HERMANOS GARCIA ROMERO S.A.S

(CARRERA 20 No. 13 - 39 off. 212 BOGOTA,
COLOMBIA DC 110111)

Product Name: Mobile Phone

Trade: Tigers

Mode:TIS001

Contents

Safety.....	3
Environment.....	3
1 Getting Started.....	3
1.1 Getting to know your touch phone.....	3
1.2 Installing the SIM card, battery, and storage card.....	4
1.3 Charging the Battery.....	5
1.4 Starting up the device.....	6
1.5 Status Icons.....	7
2 Using phone features.....	8
2.1 Turning the phone function on and off.....	8
2.2 Making a call.....	8
2.3 Answering and Ending a call.....	9
2.4 In-call options.....	9
2.5 Using call history.....	9
2.6 Call settings.....	9
3 Setting on your device.....	10
4 Bluetooth.....	14
5 Contacts.....	16
6 Exchanging Messages.....	17
7 Internet.....	22
7.1 Ways of Connecting to the Internet.....	22
7.2 Browser.....	22
8 Experiencing Multimedia.....	23
8.1 Camera & Picture.....	23
8.2 Music.....	25
8.3 FM Radio.....	27
8.4 Sound record.....	27
9 Other applications.....	27
9.1 Calendar.....	27

9.2 Alarm Clock.....	28
9.3 Calculator.....	28
10 Play Store.....	29
11 Equipment maintenance.....	29

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

Electrical safety: Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Electronic equipment: To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

Electronic medical equipment: Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Environment

Packaging: To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries: Spent batteries must be deposited at the designated collection points.

The product: The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

1 Getting Started

1.1 Getting to know your touch phone

Key Description

Key	functional description

Home Key	Any interface click the Home button to switch to the main interface by default; Click on the time, long in the near future.
power	Long press for 3 seconds to start up and shut down; On the short press to close the screen backlight.
Volume key +	To speak when adjusting call volume; Standby adjust phone volume; In the menu long press to return to the main menu interface.
Volume key -	To speak when adjusting call volume; Standby adjust phone volume; In the menu long press to return to the main menu interface.

1.2 Installing the SIM card, battery, and storage card

You need to remove the back cover before you can install the SIM card and battery. Also, make sure to always turn off the power before installing or replacing the SIM card and battery.

To remove the back cover

1. Make sure your device is turned off.
2. Firmly hold the device with both hands and the front panel facing down.
3. Push the back cover up with your thumbs until it disengages from the device and then slide it up to remove.

To install the SIM card

The SIM card contains your phone number, service details, and phonebook/message memory. Your device is supported both 2G and 3G (WCDMA) SIM cards.

1. Remove the battery if it is installed.

2. Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.

3. Slide the SIM card completely into the slot.

Note: • The EUT is Dual SIM,But The two SIMs cannot use synchronization and only one can use for each time.


To install a memory card

To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device. Insert the memory card into the slot with its gold contacts facing down until it clicks into place.

Note: To remove the memory card, press it to eject it from the slot.

Note; there are three card slot, two SIM card slot and a the memory card slot

Red mark is composed SIM card slot and the memory card slot

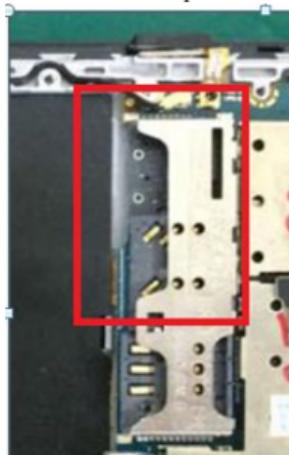

1.3 Charging the Battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the

battery.

1.4 Starting up the device

Power on/off

To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select ‘Power off’ and confirm.

To power on again, press & hold POWER.

Silent mode

To silence your phone quickly, press & hold the – volume button to zero volume. Or on the Home screen, select Settings > Audio profiles. Select ‘Silent’ check box.

Screen sleep

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your phone uses less battery power. You can control this behavior:

Set screen timeout period

1. On the Home screen, select Settings.
2. Select Display option.
3. Select Sleep. Select a time from the menu.

Home screen

The Home screen is your starting point for using all the applications on your phone. You can customize your Home screen to display applications, shortcuts, and widgets as you like.

1. The Home screen actually extends beyond the screen width. On Home screen, slide your fingertip left and right along the screen to reveal the full width of the Home screen.

2. Create Home screen shortcuts and widgets:

- Long touch the available space on the home screen with your finger to reveal the application icons, slide your fingertip right to show the shortcuts and widgets.
- Select an Application shortcut, a Shortcut to some of your saved information (such as a play list), a Widget (a clock or picture frame) for your Home screen.

3. To remove a shortcut or widget from your Home screen, touch & hold the item to enter “move mode”. The application tab turns into a Trash button. Drag the item to the Trash button and release.

4. Move objects on the Home screen

To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.

1.5 Status Icons

Connection status icons

Along the top of your phone screen is the status bar.

	EDGE service connected, data flowing		Song is playing
	GPS service connected, data flowing		Ringer is off (Silent mode)
	SMS/MMS		WLAN service connected
	Call in progress		Wireless services are off (Airplane mode)
	Missed call		Phone on mute
	Call forward		Battery is low
	Alarm is set		Battery is very low!
	Bluetooth is on		Battery is charging
	Connected the PC		Connected the earphone

Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. You can clear notifications list by selecting 'Clear' notifications at the top of the

notifications window.

Notes: On the home screen, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window, you can touch the icon on the top of the screen to enter the shortcuts screen, such as Airplane mode, Wi-Fi, Bluetooth, Data connection, Airplane mode, Brightness, you can open or close the selected function directly.

2 Using phone features

2.1 Turning the phone function on and off

To enable or disable Airplane Mode

When you enable Airplane Mode, all wireless radios on your device are turned off, including the phone function, Bluetooth, and WLAN.

1. Touch Settings -> More... -> Airplane mode.
2. Touch 'Airplane mode' to enable or disable.

Adjusting the volume

Press Volume button on the side of the phone to show the volume screen.

If the phone is in vibrating mode, the voice will be muted automatically and the device will vibrate when there is an incoming call.

2.2 Making a call

Calling a voice call

On Home screen, touch the Phone icon to enter the dial screen.

Touch the on-screen dial pad to enter a number, touch 'Delete' button to delete numbers you've entered. Touch & hold to delete all the numbers in the field.

To dial a number, touch 'Voice Call' button (Green icon ) to select SIM1 card or SIM2 card to make a call. To end a call, touch 'END' button (Red icon).

1. Call log tab: Select an entry listed in the log to call the number.
2. Contacts tab: Contacts with phone numbers are listed. Select a contact, and then select the phone number to dial the call.

Calling a video call

On Home screen, touch Phone icon to enter the dial screen.

Touch the on-screen dial pad to enter a number, press  icon > 'Video Call' to

make a video call.

Notice: • **SIM slot 1 can be supported video call default (SIM1 card must be supported 3G network).**

2.3 Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.

1. To answer an incoming call, slide ‘ANSWER’ (Green icon) button rightward.
2. To reject a call, slide ‘REJECT’ button (Red icon) button leftward.

2.4 In-call options

While on a call, reveal the in-call options: Speaker, Mute, Hold, End. You can select the one you need.

Note that if Bluetooth services are on and you are connected to a hands-free device, the more menu indicator will show Bluetooth on.

when another call comes in (“incoming call”), you have a few choices:

- Answer the incoming call and place the call in progress on hold. To switch calls at any time, touch ‘Swap calls’.
- If you don’t want to interrupt your call in progress, then touch ‘END’.
- If you have one call in progress and one caller on hold, to end both calls, touch ‘End all’.

2.5 Using call history

1. The missed call icon  appears in the title bar when you missed a call.
2. Use ‘Call log’ tab to check who the caller was, or view all your dialed numbers, and received calls. To open ‘Call log’ tab, touch ‘Call log’ button in the phone screen to enter the call history list.
3. Scroll to select the contact or number you want to dial, touch ‘Call’ button.
4. Tap and hold the selected contact you want to call, and then you can make to do the following options of call, edit number before call, send text message, add to contacts or remove from call log phone on the shortcut menu.

2.6 Call settings

On the dialing screen or call log screen, press MENU > Settings to enter Call

settings , you can make the operation of voice call, voice call and the other settings.

Note that when you open 'Call settings' for SIM1 or SIM2, your current settings are fetched, which can take a few moments.

3 Setting on your device

Control phone-wide settings from the Home settings screen:select Settings.

3.1 Wireless & networks

SIM management

You can select to activate or deactivate the SIM card you want to open.

Set the default SIM to use voice call, Video call and message, data connection.

WLAN: Turn on/off Wi-Fi.

WLAN settings: Click Wi-Fi to turn on, phone will automatically search available Wi-Fi internet within range. Choose the Wi-Fi internet you want to connect, if it has password, it will pop up the window, enter password, click connect, then MNODE will be in wireless network to enjoy faster internet experience. If you have enabled network notifications in the Wi-Fi settings, the phone will display this icon () in the status bar when finding the available open wireless network.

When the phone is connected to a wireless network, the status bar will display Wi-Fi icon ()

Bluetooth

Bluetooth on/off: Use this check box to turn Bluetooth services on or off.

Bluetooth settings: With Bluetooth services on, you can open the Bluetooth settings screen to:

- Rename your device.
- Select to be discoverable for up to 120 seconds, or not discoverable.
- Pair or unpair with one of the Bluetooth devices in range - You will be asked to type a PIN before pairing. Refer to the manufacturer's documentation for the PIN code.
- Rescan for devices.

More...

Airplane mode on/off: When airplane mode is selected, all wireless connectivity is

off. This icon  will display in the status bar when airplane mode is selected.
Mobile network

- Select data roaming capability.
- Select a wireless operator network - Scan for all available networks, or select a network automatically.
- Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator!

3.2 Device

One Hand Switch

Select the One Hand Switch check box you can turn pages by tilting your phone in some applications,

Home

Select one launcher to display

Audio profiles

Select one user profile and enter the following options:

Vibrate: Select to have your phone vibrate for incoming calls.

Volumes: Select to open the volume control, and then slide your finger along the volume bar to set a Ringtone & notifications volume or Alarms.

Voice/video ring tone: Select to decide on a ring tone to use for incoming calls.

Notification ring tone: Select a ring tone to use for a notification .

Dial pad touch tones: Select to have a tone sound when you use the on-screen Dialer.

Touch sounds: Select to have a sound play when you select an item on the screen either using touch.

Screen lock sound:Select to have a tone sound when you lock the screen.

Vibrate on touch:Select to have a vibration when you touch the screen.

Display

Lock screen notifications:Select to show notification on lock screen.

Wallpaper:Select the picture you like as the wallpaper.

Brightness: Select to open the brightness control, and then slide your finger along the brightness bar to set the level. In sunlight, increase the level.

Auto-rotate screen: Select to make the screen rotate automatically.

Sleep: Select to decide how long your phone must be inactive before the screen turns off.

Daydream: There are three ways to select, Clock/Colors/Google Photos.

Font size: Select the font size you like.

Storage

View and manage the data storage on your phone.

Memory card: Monitor and manage the use of your Memory card from this screen:

1. View how much space you are using on your memory card.
2. Select to use your memory card as USB mass storage when your phone is connected to your computer (selected by default)
3. Unmount/eject your memory card from your phone. Note that when your phone is connected to your computer via USB, you cannot view pictures or play any media stored on the card from your phone.

Internal phone storage: Reports how much internal storage is free.

Battery

Show the information of the battery usage.

Apps

View all the applications stored on your phone and how much space they occupy.

If you've downloaded an application from Android Market, you can uninstall it from this screen. Select a specific application to:

1. Clear your user data (if you have any associated with a particular application).
2. Disassociate the application with any actions.
3. Uninstall - If you've downloaded an application from Android Market, you will be able to uninstall it from this screen by selecting Uninstall.

3.3 Personal

Location

Select a source for determining your location.

Security

Screen lock: Including five lock screen methods.

1. Slide: Slide your fingers to unlock

2.Pattern:Create a pattern you will be asked to draw before your screen will unlock.

3.PIN:Create the PIN code you will be asked to input before your screen will unlock.

4.Password:Create the Password you will be asked to input before your screen will unlock.

Owner info:Select to show the owner information on lock screen.

Encrypt phone:Require a numeric PIN or password to decrypt your phone each time you power it on.

Set up SIM card lock : Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN, you can obtain it from your wireless operator.

Make passwords visible: Select to have your password display as you type it.

Device administrators:View or deactivate device administrators..

Unknown sources: Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Android Market.

Verify apps:Select to disallow or warn before installation of apps that may cause harm.

Auto-start management:Allow or deny app auto-start during system bootup.

App permissions:Select to manage app permissions for security and privacy protection.

Storage type:Select the type to store.

Trusted credentials:Display trusted CA certificates.

Install from phone storage:Install certificates from phone storage.

Clear credentials:Remove all certificates.

Language&input

Setting the phone language and input method.

Backup & reset

You can select to reset your phone to factory settings. This will erase all your data from the phone and require you to sign in and go through the setup screens to use

any of the applications.

3.4 Accounts

IMAP

show email account

Add account

to add a new account

3.5 System

Date & time

Set date, time, and time zone: Use Automatic unless you need to override the network values.

Use 24-hour format: Select from 12 or 24 hour formats.

Choose date format: Select from a variety of formats.

Scheduled power on&off

On: Set a specific time, when the time arrives, the phone automatically switched on.

Off: Set a specific time, when the time arrives, the phone will be prompted whether to turn it off, after 30 seconds, if no choice, the phone automatically shut down.

Accessibility

This screen list a variety of information, including talkback, Captions, Magnification gestures and more.

About phone

View your phone Status: This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any WLAN addresses you're connected to, and more.

View the model number and version information for your phone.

4 Bluetooth

You can use Bluetooth to send and receive calls using a headset or hands-free car kit.

Turn on Bluetooth services

1. On the Home screen, Select Settings.
2. Select Bluetooth, and then select ‘Bluetooth’ check box to turn on Bluetooth services.
3. When on, the Bluetooth icon appears in the status bar.

Discoverability

By default, your phone is not “discoverable”. This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices. If you make your phone discoverable, it will be visible to other Bluetooth devices for up to 120 seconds.

Name your Bluetooth device

1. Make sure you have turned Bluetooth on.
2. Select Settings > Bluetooth > menu > Rename phone.
3. Type the name for your device in the dialog box, and then select ‘Rename’.
4. Your new device name appears on the Bluetooth settings screen.

Pair & connect with Bluetooth devices

Before your phone can communicate with a Bluetooth headset or hands-free car kit, the devices must “pair”, then “connect”:

1. Make sure you have turned Bluetooth on.
2. Touch “SEARCHING FOR DEVICE” and your phone starts scanning for Bluetooth devices within range. As they are found, the devices appear in the list of Bluetooth devices.
3. To pair with a device in the list, select it.
4. Type the device’s PIN and then select ‘OK’.
5. Once paired, select the device name to connect. You can also touch & hold the name to open the context menu, and then select Connect.
6. Pairing and connection status appear under the device name.
7. Once the other Bluetooth device shows “connected” status, you can start using it to make and receive phone calls.
8. To disconnect or unpair with a device, touch & hold the device to open the context menu. Select Disconnect or Unpair, as appropriate. If you select ‘Unpair’ when connected, you will be disconnected as well.

If you pair with a second headset while connected to the first, the first headset will remain connected. To switch connection to the second headset you must manually select that headset again after pairing.

Rescan for Bluetooth devices

If you want to update the list of Bluetooth devices, select ‘SEARCHING’.

5 Contacts

The contacts on your phone are synced with your account contacts stored on the Web.

To view the contacts on your phone, on the home screen select People.

Contacts belonging to a specific group (you can choose which group) are listed in the Contacts tab. Only those contacts you star as “favorites” are listed in the Favorites tab. Browse through your contacts by sliding your fingertip up and down on the screen. Another way to find a contact quickly is to use “SEARCH” button, input the first letter of the name you’re looking for and touch search icon, the matching contacts are appeared on the screen.

From the Contacts tab, you can:

1. Go to Contact details: Select the contact’s name to open the Contact details screen, where all screen the information you’ve saved for this contact is displayed.
2. Take action on a contact: On the Contact details screen, you can view call the contact’s number, send a text message, add or remove a star, make a video or IP call.
3. On the Contact details screen, press MENU to open the context menu. From the menu you can edit the contact details, share or delete the contact.

Add a contact

1. On the Home screen select People. Your contact list appears.
2. Touch the + icon on the bottom of the screen to add new contact.
3. Add all the information you want to store for this contact in the appropriate fields. To add more fields, select ‘Add another field’.
4. To save your contact touch ‘DONE’.

Edit contact details

You can always make changes to the information you’ve stored for a contact:

1. From Contacts, touch the contact you want to open the Contact details screen.
2. Select 'Edit'. The Edit contact screen appears.
3. Make your edits, then press 'DONE'.

Communicate with a contact

From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you've stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

SIM contacts importer

If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option. From the contact list, press MENU to select 'Import/Export', you can select to import from SIM /Phone contact/Phone storagec or memory card, once the list of names and numbers appears you can:

Import all names/numbers in the list - Press MENU and select 'Select all'. then press 'OK'.

Import only certain names/numbers in the list - Select the name/number you want to import, then repeat for others as you wish. (As soon as you select the name/number, it is imported)

6 Exchanging Messages

6.1 SMS and MMS messaging

To open the SMS & MMS Messaging application, on the Home screen, touch the Messaging icon.

View the message from the message list

Select a message thread in the list to open it for reading. When open, the individual messages appear stacked on the screen, much like with instant messaging conversations (or chats).

Note that messages you send are also listed in the Read view.

From a message read view, you can do the following:

1. To view details about a particular message, in the Read view, touch & hold the

message to open the context menu. Select View details.

2. Reply to a message: Simply start typing your message in the text box at the bottom of the screen to reply to a message. You can always press MENU and select to add subject to convert it to a multimedia message. Select ‘Send’ when ready.

3. Links in messages: If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.

4. Delete messages: Your messages will be saved until you explicitly delete them. touch & hold the individual message you want to delete to open the context menu, and then select ‘Delete’.

Delete all message threads - From the message list, press MENU and select Delete all threads.

Compose text and multimedia messages

1. Touch ‘Compose’ icon. The Compose screen opens.

2. Add recipients by typing a name, phone number, or email address in the ‘To’ field. Matching contacts will appear. Add as many recipients as you wish.

3. To add a subject, press MENU and select ‘Add subject’. If you add a subject, the message will convert to a multimedia message.

4. To add an attachment, touch ‘Attach’ icon on the The lower left corner of the screen. Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture or record an audio file. Any recordings you make will be stored automatically in the Music application in a play list named “My recordings”. To remove an attachment, select the attachment’s ‘Remove’ button.

5. Type your message. Remember that text messages have a limit around 160 characters.

6. Select ‘Send’ when ready. You can also save a draft.

7. As your message sends, progress displays in the title bar. If you see this icon to the right of the message, it means your message is still being delivered.

Save message as draft

While composing, press BACK, your message automatically saves as a draft.

Text and multimedia message settings

To set text and multimedia message preferences, from the message list, press MENU and select 'Settings'. You can set the following from this screen:

1. SMS Enabled

Setting wireless&networks for the messages.

2. Text Message(SMS)

Request delivery reports: To receive a report on the delivery status of your message, select this check box.

Manage SIM card messages: Text messages can also be stored on your SIM card. The exact SIM card number depends on your card, but it is usually around 25-50. To view messages on your SIM card, delete them, and copy them to your phone memory, select this setting.

Edit quick text: You can add more quick text you like.

3. Multimedia Message(MMS)

Group messaging: Select to use MMS to send a single message when there are multiple recipients.

Request delivery reports: To receive a report on the delivery status of your message, select this check box.

Request read reports: To receive a report on whether each recipient has read or deleted the message without reading it, select this check box.

Send read report: Send a read report if reported by the MMS sender.

Auto-retrieve: To retrieve all your MMS messages automatically (the header plus the message will download to your phone), select this check box. If you clear this check box, then only the message headers will be retrieved and display in your message list. You can retrieve the full message by selecting the Download button that displays in the header. Once the message has downloaded, select the "play" button to expand the message.

Roaming auto-retrieve: If you are concerned about data traffic and just want the message headers to download while roaming, clear the Roaming auto-retrieve check box. Otherwise, you can select this check box to have your messages download even while roaming.

Creation Mode:Default free mode.

Size Limit:Select the size from 100K/200K/300K,it default 300K.

Priority: Default normal.

4. Notifications

You can receive a notification each time you receive a new message.

Select 'Notifications' check box to receive a notification in the status bar when a new message arrives. If you want your phone to vibrate when you receive a new message, select 'Vibrate' check box.

5.General

According to the need to set the display&preference.

6.2 POP3 and IMAP email accounts

Add an email account

You can fetch messages from up to five POP3 or IMAP accounts. Follow these steps:

1. On the Home screen, select Email application.
2. The Set up new account screen appears.
3. Type your account email address and password.
4. If you want, select the Send email from this account by default check box. This setting only applies if you have more than one POP3 or IMAP account set up.
5. Select 'Next'.

If you have a popular email account, the application will set everything up for you! Before you go to your Inbox, you can name the account (if you don't, your email address will be used). You are also asked to type your name as you want it to display on outgoing messages. You must complete this field before you can select 'Next' and go to your Inbox.

For less popular accounts, follow the prompts to type the email server, protocol, and other account information yourself. After your account settings have been verified, select 'Next' to go to your Inbox.

6. To add more accounts (up to five), from an Inbox or your Accounts screen, press MENU and select 'Add account'.

Use your POP3 and IMAP email account

Once you've set up an account, you can do the following:

1. Refresh Inbox: From the Inbox, press MENU and then select 'Refresh' to update your Inbox with any previously-unfetched email.
2. Read email: You can display or collapse the messages in your Inbox by selecting Inbox. Unread messages display with a colored band. (Each account you add will use a different color.)
3. Forward, Reply, Reply all: You can forward, reply, or reply all to an email message from the Inbox. From the Inbox, touch & hold the message to open its context menu. Select the action you want to take.
4. Compose new

From the Inbox: 1. Select 'Compose' icon. 2. Add recipients by typing a name or address in the 'To' field. Matching contacts will appear. Select the recipient or continue typing the address. Add as many as you wish. 3. Type a subject and message. 4. Select 'Send', 'Save as draft', or 'Discard'. Pressing BACK will also save as draft unless you have not typed anything.

5. Delete message

From the Inbox: 1. Expand the Inbox to display the messages. 2. Touch & hold the message you want to delete. 3. Select 'Delete' icon. 4. Your message is moved to the Trash.

6. Empty Trash: Once you've moved a message to the Trash, to empty messages in the Trash you must delete each message individually. Enter the Trash. Note that the message is only deleted from your phone, not from the account server.

7. Remove an email account: select Setting. Select IMAP, choose the accounts you want to delete. Press "MENU" to Select 'Remove account'. You will be asked to confirm before the account is removed.

Edit account settings

To open your Account settings screen, do the following:

1. From your account Inbox, press MENU and select 'Settings'.

2. The Account settings screen appears. You can do the following from this screen:

Account name: Select to change the name of your account as it appears on your Accounts screen.

Your name: Select to change your name as it appears in outgoing email.

Quick responses: Edit text you frequently insert when composing email.

Sync frequency: Select this pop-up menu to set how frequently your email account is checked for new messages. Note that whenever you open a folder, email is refreshed, regardless of this setting.

Download attachments: Auto-download attachments to recent messages via wi-fi.

Email notifications: If you want an icon to appear in the status bar when a new message arrives, select this check box.

Incoming settings: Select Incoming settings if you need to edit the username/password, server, port, or option to delete email from server.

Outgoing settings: Select Outgoing settings if you need to edit the SMTP server, port, security type, option to require sign-in, or username/password.

7 Internet

7.1 Ways of Connecting to the Internet

Your device's networking capabilities allow you to access the Internet or your corporate network through WLAN, GPRS, EDGE (if available), or WCDMA (if SIM card supported).

You can also add and set up a VPN or proxy connection.

7.2 Browser

To open the Browser, on home screen touch Browser icon.

The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display.

You can change your home page by pressing MENU > Settings > General > Set homepage.

The Browse screen

From the Browse screen you can do the following:

1. Go to a Web page: Make sure the focus is not on a text box and then start typing the URL.

2. Add a bookmark: Bookmark the Web page you are currently viewing:

- Press MENU and select 'Save to bookmarks'.

- Confirm the URL and name, and then select 'OK'.

To view all your bookmarks, press MENU and select Bookmarks.

3. Refresh a Web page: To refresh the contents of the current page, press MENU and select 'Refresh'.

Manage bookmarks

You can store as many bookmarks as you want on your phone.

Press MENU and select 'Bookmarks'. The Bookmarks screen opens.

1. Bookmark any page: Select 'Add'. Type a name and location (URL) in the dialog box. Select 'OK'.
2. Delete a bookmark: Touch & hold the bookmark you want to open. The context menu opens. Select 'Delete bookmark'. You will be asked to confirm.
3. Bookmark current page: Go to a Web page you want to bookmark. Press MENU and select 'Bookmarks'. The Bookmarks screen opens. Press MENU and select Bookmark last-viewed page. The Bookmark link dialog box opens. Confirm or edit the information, then select 'OK'.

Save bookmark page

You set your home page from the Settings screen:

1. Press MENU and select Save to bookmarks .Bookmark this page screen opens.
2. In the Page content section, select 'bookmark'.
3. Type the URL of the page you want to set as home, and then select 'OK'.

8 Experiencing Multimedia

8.1 Camera & Picture

All the pictures you can capture or view on your phone are stored on memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.

Load pictures onto your memory card

Read the instructions below to add pictures to your Memory card or the phone storage.

1. Mount your memory card to your computer by doing one of the following: Remove the memory card and insert it into a card reader attached to your

computer.

2. On your computer, find the mounted USB drive and open it.
3. Create a folder at the top-level called “Pictures” or some other descriptive name and open it.
4. Copy .jpg or other image files into this folder. To organize pictures into albums that will display in the Pictures application, create a folder and copy pictures there for each album you want to display.
5. When finished, close the USB drive window and eject the drive as required by your computer's operating system.

Take a picture

Captured pictures are saved to the “DCIM” folder on your memory card or the phone.

Tip: Before you take a picture, wipe the sensor window (on the back cover) to remove any small amounts of oil.

1. To open the Camera, on the Home screen, touch Camera icon.
2. The Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Touch Camera button to capture. Continue to hold the camera steady for a second after you hear the shutter sound.
3. Immediately after capture, you can select to Save, Set as (contact icon or wallpaper), Share (via a compatible application), or Delete your picture.
4. If you select to save, set as, or share, your picture is saved to Gallery application.

View your pictures

To view the pictures you captured, as well as any you stored on your memory card or the phone storage, go to Gallery application:

1. To open Pictures, on the Home screen, touch the Gallery icon.
2. Depending on how many pictures you stored, they may take a few minutes to load.
3. If you stored your pictures in folders on your Memory card, then the folders will display as separate “albums”. The top left album always contains all the pictures in all the albums.
4. The individual pictures display in a grid in thumbnail format. You can select to

display smaller or large thumbnails in Settings.

5. To open a picture in full-screen view, touch the picture. Once in full-screen, select the arrows to scroll through the pictures within that album. If the arrows disappear, touch the picture again to reveal the arrows and zoom controls.

Picture options

You can do the following while in Pictures. Note: In all the instructions below, you can touch & hold a picture to open the context menu to access all actions, rather than open the picture in full-screen view.

1. View full-screen: Select a picture to open it in full-screen view.
2. Share a picture: In full-screen view, press MENU and select Share. Select to share your picture via Messaging (MMS), or another application
3. Set as wallpaper: In full-screen view, press MENU and select Set as. From the menu that opens select Wallpaper. After edit you can select 'Save'.
4. Set as contact picture: In full-screen view, press MENU and select Set as. Select the contact you want to associate with the picture. After edit you can select 'Save'. The picture will now appear in the Contact details screen, as well as on any incoming call notifications.
7. Crop picture: In full-screen view, press MENU and select More > Crop. After edit you can select 'Save'. Select Discard to cancel the crop. The cropped picture is saved to Pictures as a copy. Your original is not touched.
8. Rotate picture: In full-screen view, press MENU and select Rotate. Select from Rotate left (counter-clockwise) or Rotate right (clockwise). Your picture rotates and is saved automatically.
9. Delete picture: In full-screen view, press MENU and select Delete. The picture will be removed from the Memory card after you confirm.
10. View picture details: In full-screen view, press MENU and select More > Details. The picture details window opens. You can see the title, resolution, file size, and date of the picture.

8.2 Music

To open your music Library, on the Home screen, touch the Music icon. Your music is organized into four categories: Artists, Albums, Songs, and Playlists.

Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. All the music you can listen to on your phone is stored on memory card.

Play back music

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select Play to begin play and go to the Playback screen.

Playlists

You can create as many playlists as you wish. Note that the “Recently added” playlist is a system playlist and cannot be deleted or renamed. Also, if you make any voice recordings as part of a MMS message, they will be stored automatically in a playlist called “My recordings”.

Create a playlist on your phone

1. From the Library, select a category. From the list that appears, navigate to the artist, album, or song that you want on a playlist.
2. Touch & hold the artist, album, or song to open the context menu.
3. Select Add to playlist.
4. In the Add to playlist menu that opens, select New to create a new playlist, or one of the existing playlists.
5. The song(s) are added.

Manage your playlists

Go to the Library screen and select ‘Playlists’. All your playlists appear.

Touch & hold the playlist to open the context menu. You can do the following from this screen: Play, Edit (rearrange songs), Delete and Rename.

Create ringtones from songs

You can set any of your songs as a phone ringtone:

1. From the Library, navigate to a song you want to use as a phone ringtone.
2. Touch & hold the song in the list to open the context menu.
3. Select Use as phone ringtone. The ringtone is set as your default incoming call ringtone.
4. Now, when you go to Home > Settings > Audio profiles, and select a phone

ringtone, your song will be listed as an option.

Delete music from memory card

All the music you play on your phone is stored on the inserted memory card. From your phone, you can delete music stored on the card:

1. From the Library screen, select the Artists, Albums, or Songs category.
2. Go to the screen that shows the artist, album, or song that you want to delete.
3. Touch & hold the item to open the context menu.
4. Select 'Delete'. You will be asked to confirm that you want to delete the item from your memory card.

8.3 FM Radio

This device provides radio function.

Note: Within doors or shielded environment, the receiving effect of radio may be affected. You can improve the effect in the following ways: Near window, adjust the position of earphone cable or adopt manual adjustment.

8.4 Sound record

With the recorder you can record sound and can set recorded sound as ringtones.

1. Click on the recorder menu.
2. Keep the cell phone microphone near to the sound source.
3. Click on the recording icon starting to record the sound, click on the pause icon to pause recording and click on it again to continue recording; click on the stop icon to stop recording, and chose "Discard" or "Save".

9 Other applications

9.1 Calendar

Calendar views

You can view multiple calendars on your phone, so each calendar event is coded with a color.

You can view your calendar in a variety of ways. Touch the date on the left-top of the screen to select from Day, Week, Month or Agenda.

Create an event

From any of the views, press MENU and select 'New event' to open the new

Event details screen. Type the information in the fields. When finished, select ‘Done’. Pressing BACK also saves the event.

Tip: Create an event quickly in the Day or Week view by selecting an empty time slot. A new Event details screen appears. The ‘From’ field contains the selected time slot.

9.2 Alarm Clock

To open Alarm Clock, on the Home screen, then touch the Clock icon. The Alarm clock offers as many alarms as you want.

Set an alarm

Three alarms are set up for you, ready to customize. All two alarms are turned off by default. Select the check box to turn on the alarm. If no day shows under the set time, the alarm will go off once when the set time is reached.

This alarm will go off at 9:00 am every Tuesday and Friday.

To begin, select one of the default alarms to open Alarm settings. And set the alarm as you need.

Add more alarms

To add more than three alarms, from the main Alarm Clock screen, press the ‘+’.

9.3 Calculator

To open Calculator, on the Home screen, then touch the Calculator icon.

The Calculator offers two panels: basic and advanced. Switch back and forth between panels by pressing MENU and selecting ‘Advanced panel’ or ‘Basic panel’, as you wish.

Calculator panels

Two calculator’s panels are available: basic and advanced. Use the Basic panel to enter numbers and perform basic addition, subtraction, multiplication, and division. Use the Advanced panel to insert advanced operators or delimiters, such as sine, cosine, tangent, square root, parentheses, etc.

To delete numbers, one at a time, touch the ‘clear’ icon on the screen.

To clear your operation history, press MENU and select ‘Clear history’.

10 Play Store

Android Market provides you with direct access to software developers throughout the world. It is the place to go to find fun games and cool applications that have been rated by your fellow Androids.

If you ever need help or have questions about Android Market, press MENU and select 'Help'. The Browser will take you to the Android Market "help & info" Web page.

Browse items to install

When you first enter Android Market, you will see featured items, a list of item categories, a link to search, and a link to 'Downloads'.

Install an item

1. Navigate to an item you want to install and select it.
2. The Item details screen appears.
3. More info about item: User comments about item, Scroll down to view more of this developer's applications or to email the developer.
Press MENU and select 'Security' (permissions) to view the functions and data this item can access on your phone.
4. To install the item, select either Install (item is free) or Buy, whichever appears. Once you select 'ACCEPT' on this screen, you will be responsible for the results of using this item on your phone.
5. You can see the download progress of the item by opening the notifications window. Download progress appears in the "ongoing" section of the notifications window. Once downloaded and installed, a notification appears.

Review a downloaded item

You can rate and post comments on any item you've downloaded from Android Market. Note that you must first rate an item to post a comment.

Review your downloaded items Rate a downloaded item

11 Equipment maintenance

Column Suggestions will help you to take care of your mobile phone:

1. All mobile phones and accessories from where children can touch;
2. Please keep the body dry, liquid can cause metal corrosion circuit;
3. Please send the body away from high temperature, high temperature will shorten the service life of electronic devices, melted the plastic and damage to the

battery;

4. Please do not attempt to open the cabinet or cell phone, non-professional disassembly may cause damage of the body;
5. Do not use strong acid or alkaline detergent to clean the body;
6. Only use a mobile phone original accessories. Violation of these will lead to warranty even use fault.

7:the phones support the hot spot function

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) Information

SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each the FCC that it does not exceed the exposure limit established by the FCC, Tests for each required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

You can gain the Certification Information (FCC ID : 2AFAUTIS001) from <https://www.fcc.gov/>