

Introduction:

Before using your SPV earphones for the first time, please take a few moments to read through the user manual.

Controls:

To activate light press (4), double click to alter flash speed, to switch off press & hold.

Answer call press (1)

Reject call press (1) Press and hold for 3 seconds.

Redial last number press (1) twice quickly.

Play press (1)

Pause press (1)


Skip forward tracks press (2)

Skip backward press (3)

Volume up press and hold (2)

Volume down press and hold (3)

Voice dial (SIRI) double press (3)

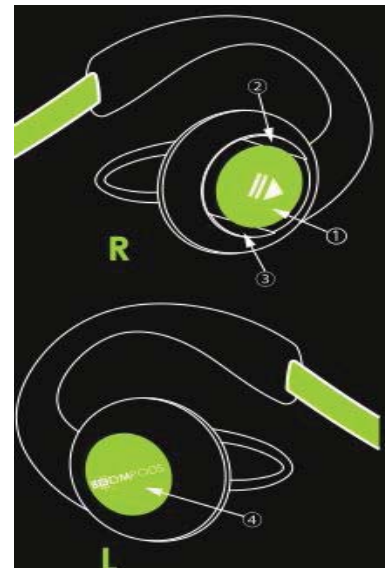

It's important for best sound quality that you use the correct ear tip size.

To change ear tip sizes; simply peel away & replace with bigger or smaller ear piece included. Make sure the ear tip is secure all the way around before placing into your ear.

Please note which side you are replacing, the ear tips are marked 'L' (left) 'R' (right), if unsure which side is left or right please refer to diagram.

Bluetooth connection:

Press & hold (1) until you hear voice prompt: power on > battery maximum* (if fully charged) > Pairing, or press & hold (1) until LED is flashing red & blue.

Now find the words SPV in your Bluetooth device menu, select this & wait to be prompted "connected", you are now connected & ready to play music & receive calls.

To switch off press & hold (1) until prompted "goodbye".

If you lose power on your Bluetooth device or move out of range your SPV will say "disconnected", once this happens move closer to your Bluetooth device until you hear "connected". If this doesn't happen you can switch OFF & ON, this will reconnect to your last paired device, or press & hold (1) to re-activate pairing mode.

Technical details:

Battery capacity: 150mAh 3.7V

Music time: 7 hours

Talk time: 9 hours

Charge time: 2.5 hours

Bluetooth range: 10m

Standby time: 100 hrs


Bluetooth version: 4.0

Frequency response: 20mw

Speaker OD: 13mm 32Ω

Speaker output S/N: 70 dB

Mic sensitivity: -42db +/-3db

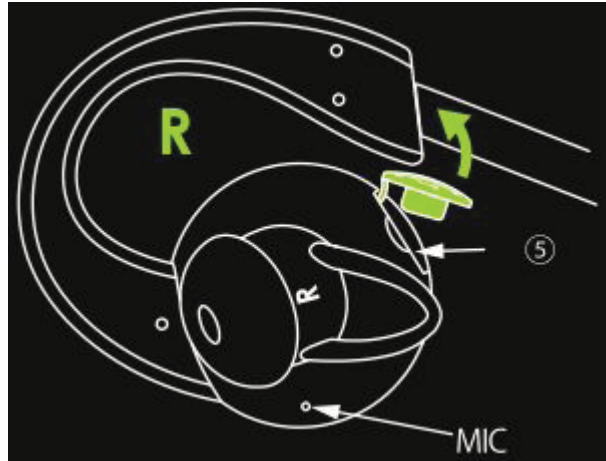

Charging:

When SPV prompts “battery low 30mins remaining” its time to charge, to check battery level at any time double click (2).

*Battery Maximum = 100% Battery Medium = 50%, Battery Low = 30mins remaining

To charge gently pull silicone protective cover upward to reveal the micro charging port, connect provided USB cable here (5) and the other end to PC, laptop or mains USB socket. The LED will be constantly Red whilst charging and when fully charged the light will turn Blue.

General guidelines:

Keep away from high temperature or prolonged exposure to direct sunlight.

Avoid contact with liquids.

Do not disassemble.

Do not drop the product.

Keep out of reach of children.

Warranty:

Your BOOMPODS product is guaranteed against any defects in material or workmanship for one full year from the date of original purchase providing it has not been disassembled and it has not suffered accidental damage such as a knock or immersion in water, etc.

The device must be used in accordance with the user manual. The warranty is subject to presentation of the original invoice or receipt from the retailer and does not apply to normal wear and tear or to any device that has been misused or tampered with. It should be returned to the local service centre, the service centre will not bear any shipping cost of the returned item.

Please check www.boompods.com for your local service centre.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.