

User Manual



User Guide

Contents

1 Precautions before Use	3
2. Key Layout and Definitions	5
3. Introduction to Desktop	5
3.1 Windows8. 1 Start Screen	6
3.2 Image Slide Application	7
3.3 Apps Introduction	9
3.4 Menu Column	11
3.5 Double Screen Application.....	12
4.Basic Operations.....	13
4.1 Sleep mode, Restart, and Power off	13
4.2 Security Management	14

I .Precautions Before Use

- 1.This product works well in non tropic area with terrain altitude below 2000 meters.
2. Prevent the Tablet PC from falling onto the ground or being strongly impacted.
- 3.Do not use the tablet for an extended period in temperature below 0°C or above 95°F, nor place it in a damp humid environment. Do not expose the tablet PC to the sun.
4. Do not use it in a strong magnetic environment nor place it in a strong static environment.
5. If water or any other liquid splashes into the Tablet PC, please dry it immediately and do not use it till it dries out.
6. Clean the Tablet PC with a dry soft cloth or tissue paper instead of detergent containing chemical elements so as to avoid corrosion or getting damped.

7. Our company shall not bear any responsibilities for changing or disassembling inside material of the device, nor man-made mal-operation.

8. Please back up the important documentation at any time in case of file missing.

9. Please do not disassemble the Tablet PC on your own; otherwise the product might be out of warranty service due to mal-operation.

10. Quick Use Guide and the relevant software need to be updated at any time.

11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II . Key Layout and Definitions

-3-

(8) Power for earphone and microphone: This port can transmit the audio signals of Tablet PC into loudspeaker or earphone.

(9) Front camera: webcamera, take pictures, and selffiles


(10) Back camera: take pictures, and record vedios

(11) Matching keyboard connector:It can help you to connect the keyboard very easy.

(12) Loudspeaker: The built-in loudspeaker enables you to hear sound without having to linking an additional device.

III. Into to Desktop

1. Windows 8. 1 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of icons. When you click the applications, you can easily visit each one of them. You need to log into your Microsoft account before the application program completely runs.

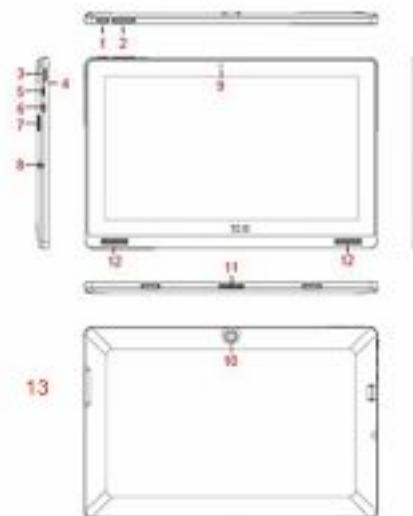

(1)G-sensor lock key.

(2)Sound-/sound+: Down/Up volume

(3) Power button: Press down to start or close the touch screen panel. You can also make the tablet go into sleep mode through this button or wake up from the sleep mode.

(4) Microphone connector outlet

(5) Micro USB Interface: You can read the data through USB.

(6) Mini HDMI: Connect TV, computer, etc.

(7) Micro SD card slot: The built-in storage card reader slot supports Micro SD and Micro SDHC format and USB charging.

-4-



2. Image slide applications

Slide to right



Slide to left



Slide from the left side from to the right to start the application program in running.

Slide from the right side to the left side to start the menu column.

Reduce



Enlarge



On the touch screen, narrow two fingers to reduce the image

On the touch screen, widen two fingers to enlarge the image

Slide downward



In start screen, slide from the top of the screen to view all application programs

Slide with finger



In start screen, slide finger right or left to move the image.

Slide upward



In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can start other application programs while you have them displayed on the screen, such as software application programs attached to the Tablet PC.



Conversely, if you want to cancel or delete a certain application in the start screen,

- (1) Press and hold the application program for about one second and then let it go, run, and select.
- (2) Attribute column to cancel the programs such as fixation and deletion and then it can be completed.

4. Menu column, slide from the right side to the left to start Charm menu column, including: Start, Device, Settings, Share, and Search Program.

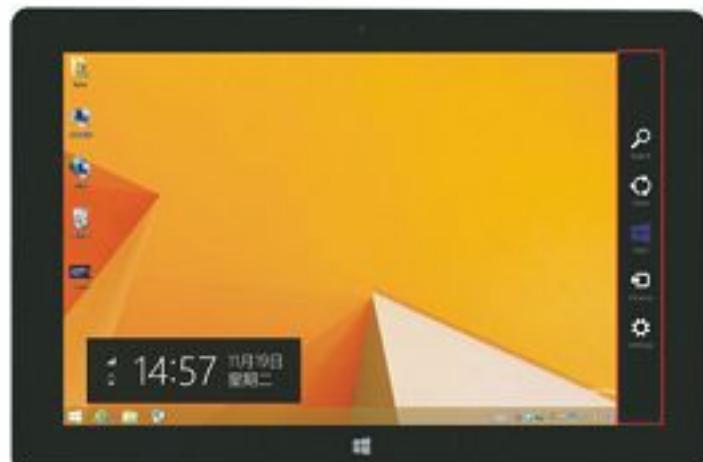



Search the files and application programs in the Tablet PC.



Share the program through social exchange website or e-mail.



Return to the start screen. You can also use the apps to return the application program that opened in recently.



Read, write and share files, connect external screen or printer with the device connected to the Tablet PC.



Set up the Table PC.

Device Menu



Settings Menu




5. Dual-Screen Application

On desktop(figure 1), slide the apps from the left side of the screen, drag and hold till double interface appears, and then let it go. In(figure 2),press the partition button in the middle of partition line, then slide it to the left or right to select the displaying content of the whole screen.




(Figure 1)

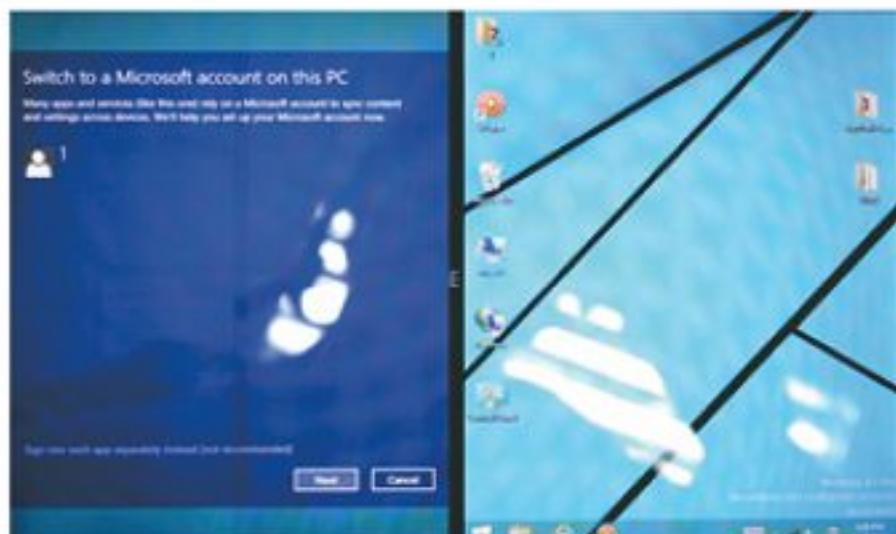

(Figure 2)

2. Security Management User ID and Password setup

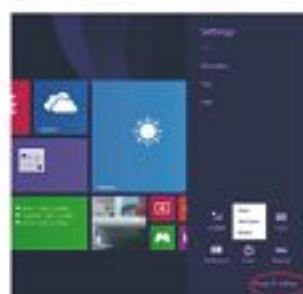

Method for quick setup:

Click the “Settings button”, and select “Change PC settings. Select “Accounts” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live ID, enter user name, password, and then confirm password promptly.



IV. Basic Operations

1. Sleep mode, restart and power off



FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.