



3

**LAX-MAX®**  
NEW GENERATION

## BLUETOOTH SPEAKER

Multi Colored LED Lights

**LI-S7372BT**



Please keep this manual in a safe place for future reference.

## Features

- BT to stream your music via your wireless enabled device.
- Micro SD (TF) Card and USB Disk Drive for MP3 playback
- FM Radio
- Alarm Clock
- LED Dancing Lights
- Built In Rechargeable battery
- Infrared Remote Control
- AUX IN to connect External Audio Players (iPod®/iPhone®/iPad®/smartphones etc.)

## Lights on Unit

- LED Dancing Lights front of unit - Long press the "MODE" button to change the light mode or to switch it "ON" and "OFF" (or switch on) front LED Lights

## Charging the Unit

- Connect one end of supplied USB cable to compatible (Output 5V) USB AC Adaptor (not included) & other end of cable to speaker socket (back panel of unit) to charge unit. Red LED will light up while charging.
- Additional battery slot (BL-5C) at back of unit has been provided to operate unit, incase unit is discharged and no charging source is available. (Additional battery not included).
- Power button on Remote control will switch off front display & Lights only. Main Power button is at back control panel of unit.

## Volume Control

- Unit comes with rotary "VOLUME" & "BASS" control Knobs.
- Please note that while in AUX or BLUETOOTH mode, volume can be controlled from your external device or from unit or unit's remote control
- Sound output quality off the speakers will depend on the quality of your MP3 files in case of USB, Micro SD, BT and AUX or Distance of your device from unit in case of BT, or frequency reception in case of FM.

## Operating BT

- Press "MODE" button on the speaker unit or remote control to select BT. On screen display will show "BLUE"
- From BT enabled device, scan for "LI-S7372BT". After pairing is done, unit is ready to playback tracks from your device.
- Tracks can be changed from unit "H/-" / "H/+ and also through your external BT enabled device.
- After use, please disconnect/unpair your device from unit. Only one device at a time can be paired with unit.
- Press "H/AUTO" to PAUSE or release pause.

## Playing MP3 Files through the Speaker using Micro SD Card or USB Stick

- Plug in your USB Disk or Micro SD Card in the respective slots. (Please make sure you use the correct file format in your media devices – MP3 FILES ONLY).
- Press the "MODE" button on the unit or remote to switch between USB and Micro SD. The files from your media should start playing. Please ensure that your speaker is fully charged & that your files are MP3 format, or that the Mode button is on the correct source.
- Press the "H/" to listen to the previous track or "H/" for next track. OR press "H/H/" for previous track or "H/H/" for next track on the Remote Control.
- To PAUSE or release pause, press "H/AUTO" from unit control panel or from Remote Control.

## Using Aux

- For external Devices such as iPod®, iPhone®, iPad®, smartphones, MP3, MP4 players or other audio devices, use the included 3.5mm to 3.5mm cable and connect it to the "AUX Jack".
- Press "MODE" on the unit or press MODE on the remote control to switch to AUX mode. The word "LINE" will appear on the display front control panel when using AUX function.
- Tracks can be changed only through your external connected device.

## Using FM Radio

1. Press the "MODE" button on the speaker unit or remote control to receive FM Frequency.
2. To scan and preset FM frequency Long Press "H/AUTO" on unit.
3. To select preset FM Frequency Short Press "H/-" or "H/+" from unit's control panel or on remote control "H/-" or "H/+"
4. Desired frequency can also be selected by 0-9 buttons on remote control.
5. Use Built in Antenna for better reception

## Clock function

1. Press "MODE" to select clock, Short Press "CLOCK" on unit control panel to set time, adjust hour when you see hour blinking using "H/-" or "H/+".
2. Short press "clock" again to adjust minutes following same procedure.
3. Short press "H/AUTO" when done.
4. While in other modes Press "H" on remote control to see time.

## Alarm Function

1. Long Press "ALARM" to ON or OFF alarm, Switch alarm ON to set alarm
2. Short Press "ALARM" to adjust hour when you see hour blinking using "H/" or "H/". To set minutes, pressing "ALARM" again, minute will start blinking, press "H/" or "H/" to set desired time.
3. Short press "H/AUTO" when done.

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc. All other Trademarks & Trade Names belong to their respective owners. Certain Models of SanDisk® USB drives are not compatible to this unit. Please keep this manual in a safe place for future reference.

## Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Please keep this manual in a safe place for further reference.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please keep this manual in a safe place for further reference.