


BLUETOOTH SPEAKER

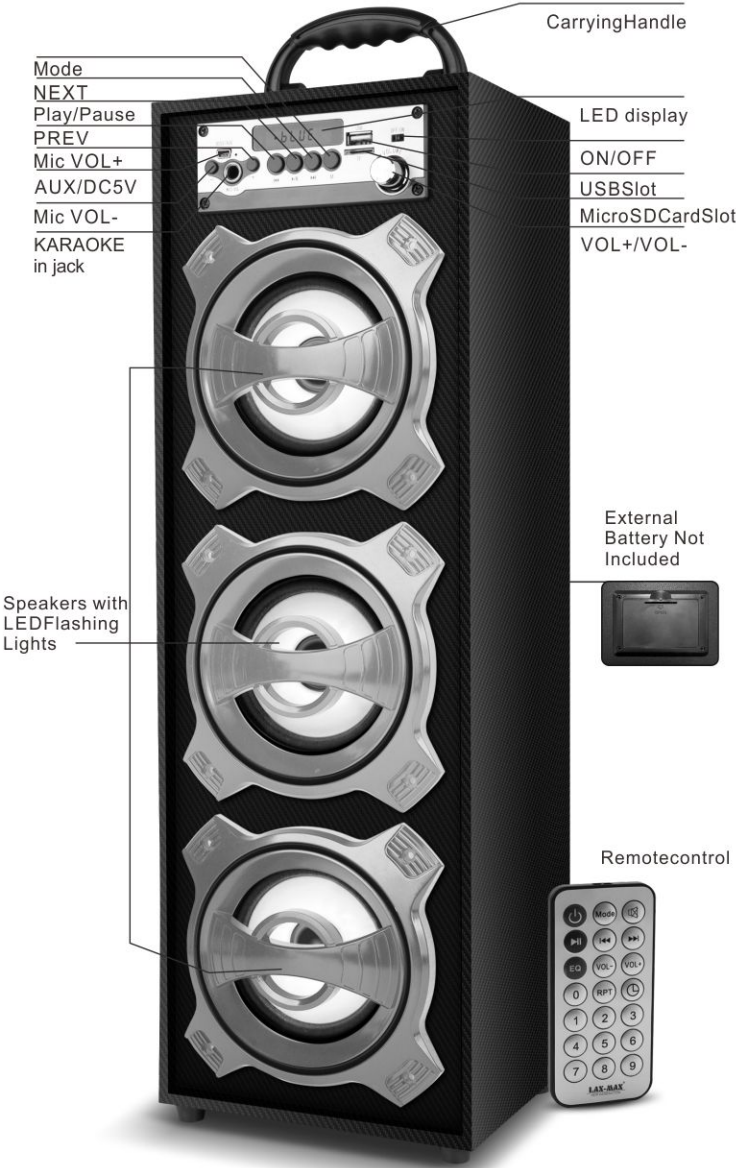

3

LAX-MAX[®]
NEW GENERATION

BLUETOOTH SPEAKER

with Multi Color LED Light

LI-S20125BT



Please keep this manual in a safe place for future reference.

Features

- BT, FM, AUX, USB, Micro SD functions
- LED Flashing Lights
- LED Display
- Built in rechargeable Battery
- Karaoke Jack (Microphone not included)
- Wireless Remote control

Power supply for Unit

- Connect the supplied power adaptor to charge built in battery.
- Please make sure battery is fully charged. For best results (or to charge faster) don't use the unit while charging.

Volume Control

- Rotary knob on control panel is master volume control of unit. Maximum level of volume set through the knob will be maximum volume through remote control ("VOL+") or "I◀◀" (Long press on unit control panel).
- Volume can be reduced from Rotary knob or "▶▶I" (Long press on unit control panel) or ("Vol-") from wireless remote control.
- Volume can also be controlled through connected external device (in Bluetooth and Aux mode), maximum volume level would be set through rotary knob.

BT Operation

- Press "M" on unit ("Mode" on remote control) to select BT, display will show "bLUE" followed with voice prompt.
- Scan from your BT enabled device for "LI-S20125BT" and pair it. After pairing is done speaker is ready for use with your device.
- The sound output quality off the speaker will depend on the quality of the MP3 files and distance of speaker from device.
- When using BT enabled device short press (on unit or remote control) "I◀◀" for previous track or "▶▶I" for next track on speaker to change track on your device.
- To pause a track or release pause, press "▶||" on speaker.

Playing MP3 Files through the Speaker using the Micro SD Card or the USB Stick

- Plug in your USB Disk and/or Micro SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
- Turn on the power switch; the LED display will come on. Press the "M" on unit ("MODE" on remote control) to select USB or Micro SD. The files from your media should start playing, if it does not play, ensure that your speaker is fully charged & that your files are MP3 format, or that the mode button is on the correct source.
- Sound output quality of the speakers will depend on the quality of the MP3 files.
- Short Press on unit/remote control "I◀◀" to listen to the previous track or "▶▶I" to skip to the next track. To pause a track or release pause, press "▶||" on speaker

Using Aux

- Plug in external device to Aux jack using supplied cable to listen audio through unit.
- Press "M" on unit/"Mode" on remote control to select Aux (Line in)
- Do not charge unit while using Aux.

1

Listening to the FM Radio

1. Press "M" on unit/"Mode" on remote control to select FM. Display will show frequency information.
2. Long Press "▶||" to auto scan and the unit will store the frequencies with strong signal. Use "I◀◀" / "▶▶I" to switch between stored stations.

Karaoke Function

1. Power on the unit, plug in Microphone to Karaoke Jack (microphone not included).
2. Mic Volume can be controlled through "-" & "+" buttons on the side of Karaoke Jack.

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc. All other Trademarks & Trade Names belong to their respective owners. Certain Models of SanDisk® USB drives are not compatible to this unit. Please keep this manual in a safe place for future reference.

Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Please keep this manual in a safe place for future reference.

2