



OUTDOOR TECH.®

BUCKSHOT PRO

ALL-IN-ONE
WIRELESS

BLUETOOTH
SPEAKER



Hi.



Good call on picking up the **Outdoor Tech® BUCKSHOT PRO** all-in-one speaker, Your experience of the outdoor world will be fully covered by this little dude. This manual exists to help make sure you can use 'em to the fullest potential. So sit back, put your feet up, and flip through this to get to know your **BUCKSHOT PRO**.

Kisses,



OUTDOOR TECH.

■ CONTENTS

What's Inside?	1
Anatomy	2
Power Up	5
Powerbank Functions	6
Pairing Mode	7
Music Functions	8
Phone Functions	9
Specs	10
Care & Maintenance	12

www.outdoortechology.com

■ WHAT'S INSIDE




BUCKSHOT PRO



BIKE MOUNT


***Micro USB Cord and instructional manual
are also included in the packaging.**

■ ANATOMY

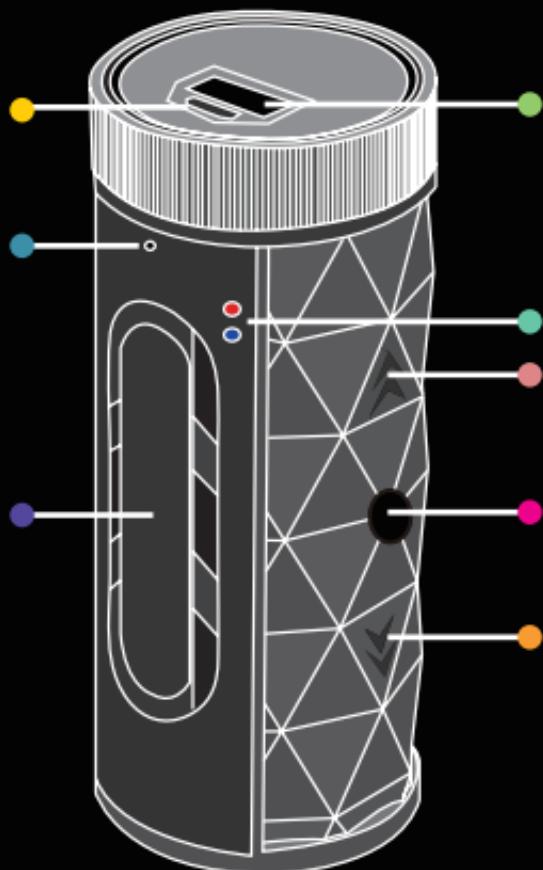

- **Multifunction button (MFB)**
- **Blue and red LED light indicator**
- **Volume down // Skip backward**
- **Volume up // Skip forward**
- **Microphone**
- **Passive bass port**
- **Micro USB port**
- **USB output port**

■ POWER UP

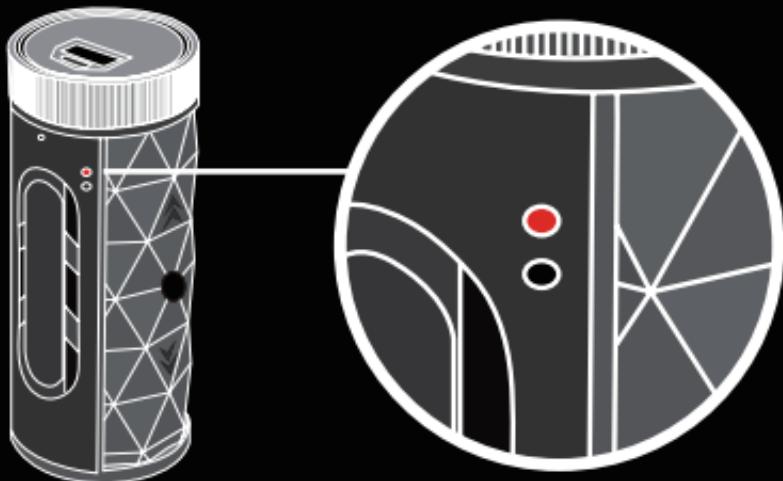

TO CHARGE




1. Connect the included Micro USB cord to a power source and the charging port on the BUCKSHOT PRO. When charging, the red LED light will stay activated. ***Full charge time is about 3 hours.
2. When the BUCKSHOT PRO is fully charged, the RED light will turn off.

The displayed battery meter is supported for Apple products.

* The BUCKSHOT PRO's Bluetooth and music functions can still operate while charging.

POWERBANK FEATURES

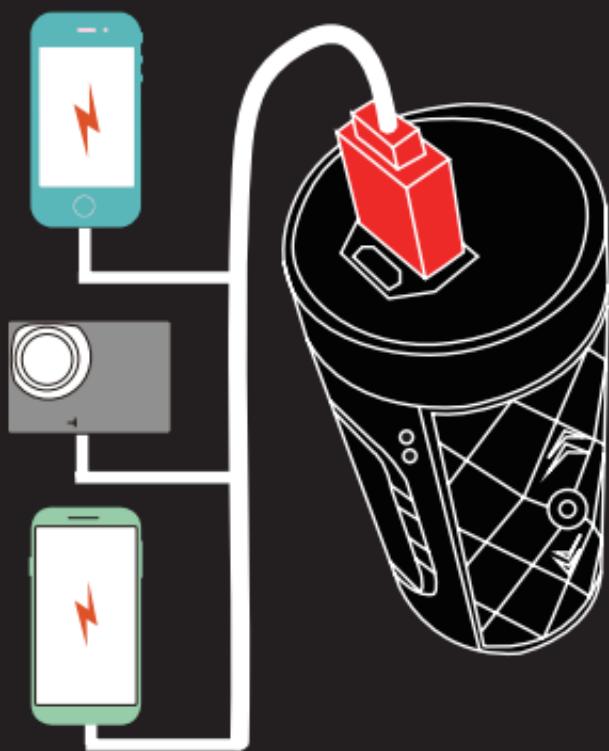

Charging your devices:

1. Connect the USB Port cable to the BUCKSHOT PRO's output port.
2. Connect the other port to your device.
3. Your device should automatically start charging.
4. When the your device is fully charged, disconnect the BUCKSHOT PRO.

■ PAIRING MODE

Power On / Off

ON: Hold the MFB for 2-3 seconds or until the LED light flashes blue and the voice prompt states "Power on"

OFF: Hold the MFB for 3-4 seconds or until the LED light flashes red and the voice prompt states "Power off"



Enter Pairing Mode

When powered on, it will enter into pairing mode automatically. Hold the MFB for 2-3 seconds or until you see the LED light flash blue and the voice prompts states "Power on, Pairing." The LED lights will then flash red and blue alternately.


Pairing BUCKSHOT PRO to Device

Open the Bluetooth settings on your device. If you have put your BUCKSHOT PRO into pairing mode, it should be listed as "ODT BUCKSHOT PRO" as an available device to pair. Connect with the BUCKSHOT PRO. The voice prompt will state "Successful" if the BUCKSHOT PRO and your device connected. The blue LED light will flash for as long as the device is connected and on.

*The BUCKSHOT PRO will automatically repair to a previously paired device.

MUSIC FUNCTIONS

Music/Device Controls

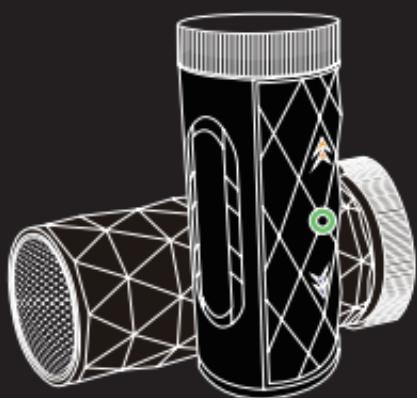

Skip backward
Volume down



MFB



Skip forward
Volume up

*The Volume up button is closest to the speaker end of the BUCKSHOT PRO.

FUNCTION	BUTTON	ACTION
Power on	○	Press 3 sec
Power off	○	Press 2 sec
Pairing mode	○	Hold 3 sec
Manual pairing mode	◀◀ ▶▶	Hold for 3 sec
Play / Pause	○	Short press once
Volume up	▶▶	Short press once
Volume down	◀◀	Short press once
Skip forward	▶▶	Press & hold for 1 sec
Skip backward	◀◀	Press & hold for 1 sec

PHONE FUNCTIONS



Device Controls



FUNCTION	BUTTON	ACTION
Answer an incoming call	○	Short press once
Reject an incoming call	○	Press & hold for 2 sec
End call	○	Short press once
Siri/Voice activation	○ >>	Short press
Last number redial	<< ○	Short press
Remove previously paired devices	<< ○ >>	Press & hold for 5 sec simultaneously
DFU	<< ○	Press & hold for 6 sec

SPECS



Rating: IPX5

Bluetooth v 4.0

Bluetooth Profiles: HFP, A2DP, AVRCP

Capatability: Bluetooth v 1.1 and above

Operating range: 32 ft

Device name: ODT Buckshot Pro

Pairing code: 0000 (if needed)

Power source: Lithium ion rechargeable battery cell

Battery capacity: 2600 mAh

Charging in: micro-USB 5V 1A

Charging out: 5V / 500 mA (max 700 mA)

Playing Time: Up to 20 hrs

Standby Time: +500 hrs

Operating Temperature: 0~45° C

Storage Temperature: -20~60° C

RoHS: Fully RoHS compliant

CARE & MAINTENANCE



- Do not access the input/output simultaneously.
It may affect the product's performance and not charge properly.
- Use a soft, dry cloth to wipe the surface.
Do not use intensive chemical products or detergent to clean the product.
- Charge the product at least once every three months, to prevent the batteries from drying out.
- It is normal for the battery to heat up during its charge. The temperature should be below 45° & does not affect the BUCKSHOT PRO's performance.
- For best performance, fully charge the BUCKSHOT PRO before charging other devices.
- All products have passed the strict quality inspection, Do not use the battery/device if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Hereby, Joyatech, declares that this BUCKSHOT PRO is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

K, Later gator.

DON'T BE SO ANTISOCIAL



[Facebook.com/outdoortech](https://www.facebook.com/outdoortech)
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires,
or just to say what's up: email info@outdoortech.com

K bye.



outdoortech.com