





WIRELESS SPORT EARBUDS WITH FUNCTION CONTROL & MIC



Thank you for choosing Hottips!® Wireless Sport Earbuds. First, familiarize yourself with the wireless functionality of your mobile or other devices before use. Please read through this user manual closely to ensure your safety before and while using Hottips!® Wireless Sport Earbuds.

Included Contents:

- 1 Pair of Hottips!® Wireless Sport Earbuds
- 1 Micro-USB to USB-A Charging Cable - 18 in.
- 3 Sizes of Silicone Ear Pads

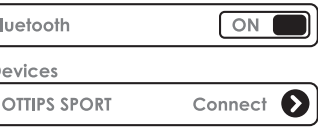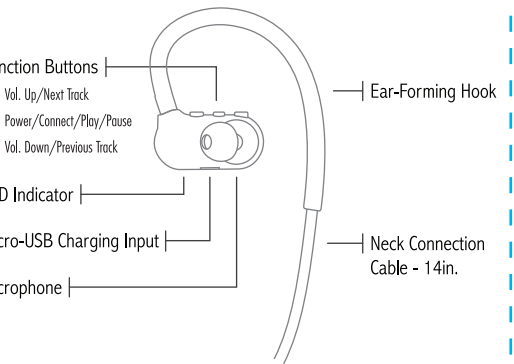

Operating Functions:

Pairing Device: Press and hold the Ⓜ button for 3 seconds to Power On the earbuds and will automatically enter Bluetooth® pairing mode. A voice will prompt "Bluetooth® Mode" and **Blue** and **Red LEDs** will start flashing. On your device, open your Bluetooth® wireless settings and click "HOTTIPS SPORT" when it appears in the available options. A voice prompt will announce "Bluetooth® connected" and the **LED indicator** will slowly flash **Blue**. If your headphones have been connected to your device before, they will automatically connect to the device they were last paired with. If pairing fails, check device to see if it is connected with a different Bluetooth® device, if so, disconnect other device and restart headphone pairing process. Press and hold the Ⓜ button for 3 seconds to Power Off the earbuds and they will automatically disconnect from Bluetooth® device.

Playing Audio: Click the Ⓜ button once to **Play** and **Pause** music or **Answer** and **End** phone calls. Music will automatically pause when answering a call and resume playing once call is ended.

Controlling Audio: Click the ⊕ button once to skip to the **Next Track**. Press and hold the ⊕ button to Turn Up **Volume**. Click the ⊖ button once to skip to the **Previous Track**. Press and hold the ⊖ button to Turn Down **Volume**.

Charging:

Earbuds: With the included Micro-USB to USB-A charging cable, connect the Micro-USB connector into its respective port on the bottom of the Right Ear earbud. Connect the USB-A connector into a compatible USB-A adapter or power source (not included). A **Red LED** will light up while charging earbuds and will turn **Blue** once fully charged.

Attention:

- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- Keep your ears safe! To avoid hearing damage, make sure that the volume on your device is turned down before connecting your earbuds. After placing earbuds in/on your ears, gradually turn up the volume until you reach a comfortable listening level.
- To lengthen life of battery, fully charge at least once a month.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.

Attention (Continued):

- Do not modify, repair or dismantle Hottips!® Wireless Sport Earbuds. Doing so may result in fire, electric shock, or complete breakdown of Hottips!® Wireless Sport Earbuds. Any of these actions will void the warranty.
- Do not use Hottips!® Wireless Sport Earbuds in hazardous locations or while driving.

Product Specifications:

Wireless Specs: Bluetooth 5.0 Technology
Wireless Connection Range: Up to 33 ft.
Driver Unit: 10mm
Frequency Response: 20hz - 20khz
Speaker Resistance: 32Ω ± 2%
Speaker Sensitivity: 95 ± 3dB
Mic Sensitivity: -42 ± 3dB
Earbud Battery: 80mAh Li-ion
- Listening/Call Time: Up to 8 Hours at 80% Volume
- Charging Time: About 1 to 2 Hours

FCC Notice:

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Warning Statements:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 5mm between the radiator & body.

KEY:

CUT (DO NOT PRINT)

FOLD (DO NOT PRINT)

BLACK & WHITE