



## SAFETY INFORMATION

1. Please follow all local, state, and federal laws concerning electronic equipment.
2. Please follow the instructions of the crew when traveling by airplane in order to comply with any civil aviation laws.
3. Please check with your doctor before using these if you use personal medical equipment (such as a pacemaker).
4. Please do not disassemble or modify the headphones. Aside from losing the warranty it could be dangerous.

## SPECIFICATIONS - Headphones


1. Bluetooth® Protocol Standards: Bluetooth V4.0
2. Receiver Range: approximately 10 meters / 30 feet
3. Carrier Frequency: 2402MHz - 2480MHz
4. USB Interface: High Speed USB2.0
5. Battery: rechargeable lithium-ion polymer battery (3.7V/400mAh)
6. Charger Power: use with DC5V (500mA) base units or a computer
7. Battery Life: 180 hours standby, 12 hours listening
8. Frequency: 20Hz - 20kHz
9. S/N Ratio: 95dB (Line-in)/60dB (Bluetooth)

If the headphones run out of battery they can still be used with the included 3.5mm audio cable as if they were a corded high quality headphone instead of a Bluetooth® pair.\*\*

## SPECIFICATIONS - Microphone

1. Microphone Size: 4mm x 15mm
2. Directivity: 360 degree
3. SPL: -42 +/- 3dB
4. Impedance: less than or equal to 2.2K ohms
5. Frequency Response: 30Hz - 16000Hz
6. Operating Voltage: 4.5V

## BUTTONS AND INDICATORS

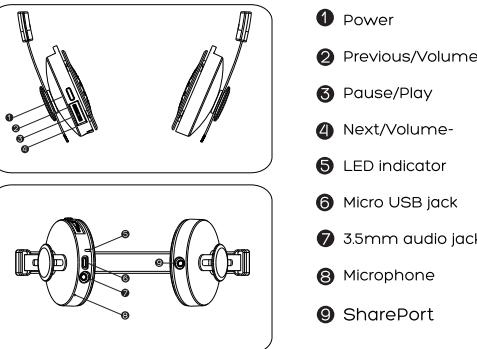

## LED INDICATORS

Operation	LED Indicator Status	Action
Power On	Blue LED flashing	Press and hold the power key for 2 seconds until the blue LED blinks
Pairing	Blue/Red LED alternating & flashing	Press the power key for 5-6 seconds until the blue and red LED flash alternately (done from power off mode)
Power Off	Red LED on then turns off	Press the power key for 3 seconds until the red LED blinks and turns off
Charging	Red LED remains on until fully charged, then turns blue	Connect the headphones to the included micro USB and plug into computer or base station for charging

## TONE INDICATORS

Operation	Tone Indicator Status	Action
Fully Charged	Blue LED on	While connected to a power source, the blue LED will be on
Pairing Successfully	Blue LED blinking	The blue LED will flash then turn off
Call Receiving	Blue LED blinking quickly	The blue LED will flash quickly and repeatedly until you press the power key to answer the call
Power Off	1 low beep followed by 1 high beep	Press the power key for 3 seconds
In Conversation	Blue LED blinking	The blue LED will flash every 5 seconds
Low Battery	Red LED on full time	When the battery has less than 20% remaining, the red LED will come on and remain on until fully discharged or re-charged

## USING AS A PHONE

Operation	Tone Indicator Status	Action
Power On	1 high beep	Press the power key for 1-2 seconds
Pairing	2 consecutive high beeps	Press the power key for 5-6 seconds (done from power off mode)
Power Off	1 low beep followed by 1 high beep	Press the power key for 3 seconds
Pairing Successfully	2 consecutive high beeps	None
Call Receiving	Device ring tone	Press power key to answer call
In Conversation	1 beep upon answering	Press power key to answer call

## USING THE SHAREPORT

We have included the SharePort so that your children can easily share their audio with you or their friends. In either Bluetooth or wired mode, just plug in another 3.5mm audio cable to the SharePort and start listening!

## PAIRING THE HEADPHONES

1. Set your computer or other device into pairing mode by following the device's instructions to turn on Bluetooth®.

For computers, mobile phones, tablets, phablets and the like, you should consult your user manual in order to find the Bluetooth® settings on your device.

Once you have confirmed that your device is able and ready to be paired, please follow these steps to complete the process:

2. With the power off on your Untangled Pro™ Children's Bluetooth® Headphones, press and hold the power key for 5-6 seconds until the LED indicator alternates between red and blue flashes.

If you need to clean the product, please use a dry soft cloth.

3. Now on your computer or device you should see the equipment called "Untangled Pro" and once you select it, the pairing process will be complete.

4. If a password is required to confirm it will be 0000 (zero zero zero zero).

5. Once the pairing is successful the blue LED will flash several times to confirm.

6. If the pairing is unsuccessful please turn off the headphones and repeat steps 1 through 5.

## PAIRING THE HEADPHONES - Cont.

Your Untangled Pro™ Children's Bluetooth® Headphones can be used with most electronic devices that support Bluetooth® technology. For computers, you may need to consult with your manufacturer to confirm the Bluetooth® driver is installed so the headphones can pair properly.

For computers, mobile phones, tablets, phablets and the like, you should consult your user manual in order to find the Bluetooth® settings on your device.

Once you have confirmed that your device is able and ready to be paired, please follow these steps to complete the process:

1. Set your computer or other device into pairing mode by following the device's instructions to turn on Bluetooth®.

2. With the power off on your Untangled Pro™ Children's Bluetooth® Headphones, press and hold the power key for 5-6 seconds until the blue LED flashes and you hear the power up tone accordingly.

3. Now on your computer or device you should see the equipment called "Untangled Pro" and once you select it, the pairing process will be complete.

4. If a password is required to confirm it will be 0000 (zero zero zero zero).

5. Once the pairing is successful the blue LED will flash several times to confirm.

6. If the pairing is unsuccessful please turn off the headphones and repeat steps 1 through 5.

## USING THE HEADPHONES

Since these are going to be used by your child or children, it is STRONGLY recommended that you use your device's built-in volume limiter and restrict the maximum volume allowed. Turn the headphones to full volume using the switch on the bottom of the headphones. Turn the headphones to full volume using the switch on the bottom of the headphones. Turn the headphones to full volume using the switch on the bottom of the headphones. Turn the headphones to full volume using the switch on the bottom of the headphones.

For computers, mobile phones, tablets, phablets and the like, you should consult your user manual in order to find the Bluetooth® settings on your device.

Once you have confirmed that your device is able and ready to be paired, please follow these steps to complete the process:

1. Set your computer or other device into pairing mode by following the device's instructions to turn on Bluetooth®.

2. With the power off on your Untangled Pro™ Children's Bluetooth® Headphones, press and hold the power key for 5-6 seconds until the blue LED flashes and you hear the power up tone accordingly.

3. Now on your computer or device you should see the equipment called "Untangled Pro" and once you select it, the pairing process will be complete.

4. If a password is required to confirm it will be 0000 (zero zero zero zero).

5. Once the pairing is successful the blue LED will flash several times to confirm.

6. If the pairing is unsuccessful please turn off the headphones and repeat steps 1 through 5.

## USING THE HEADPHONES - Cont.

Power On: When they are powered off, press and hold the power button for 2 seconds until the blue LED flashes and you hear the power up tone accordingly.

Power Off: When they are powered on, press and hold the power button for 3 seconds until the blue LED flashes and you hear the power down tone accordingly.

Volume Adjustment: When listening to music, holding a dial or turning a volume dial forward (volume up) will increase the volume until you reach the maximum and holding the volume dial backward (volume down) will decrease the volume until you reach the minimum.

Pause/Play: When playing music, press the pause/play switch or the time to pause and once it is in pause mode, to resume playing.

Previous/Next: When playing music, press the next dial or time to go to the next song or press the previous dial or time to go back one song.

## FCC STATEMENT (CONT.)

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment to an outlet on a circuit different from the receiver's.

• Consult a dealer or experienced radio/TV technician for assistance.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set in Part 15 of the FCC Rules.

These limits are set to provide an additional margin of safety and are based on scientific findings and engineering judgments that have been peer-reviewed by the FCC.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO

CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL

INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY

INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT

MAY CAUSE UNDESIRABLE OPERATION.