

TV BOX

User Manual

Thank you

For Choosing Our TV BOX

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons.


Interface

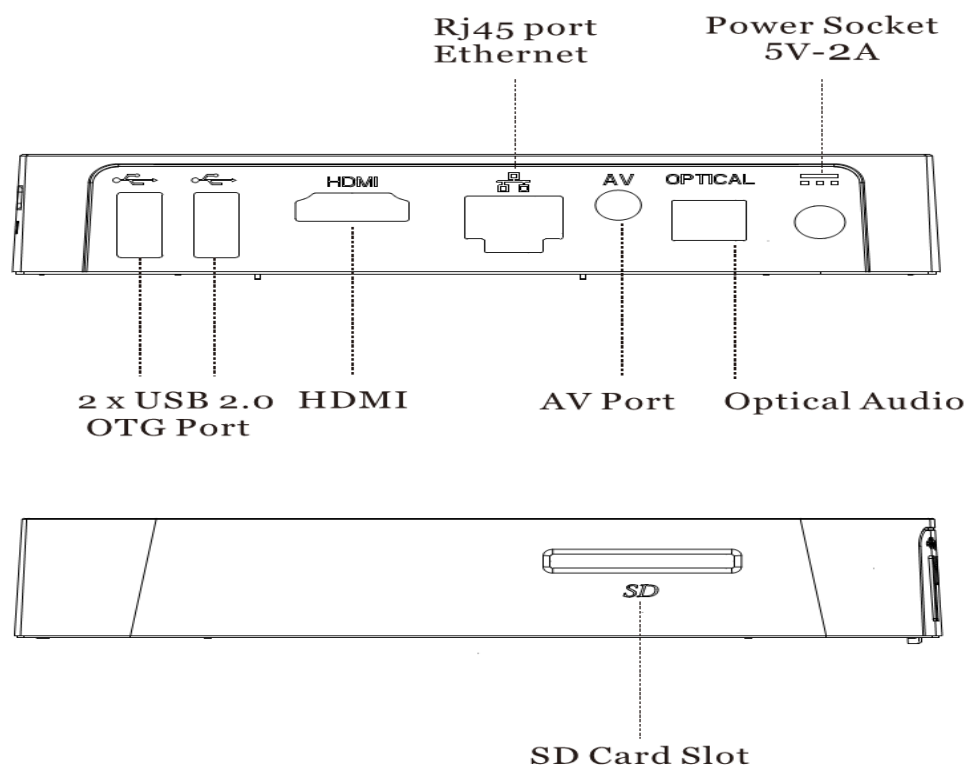


Installation

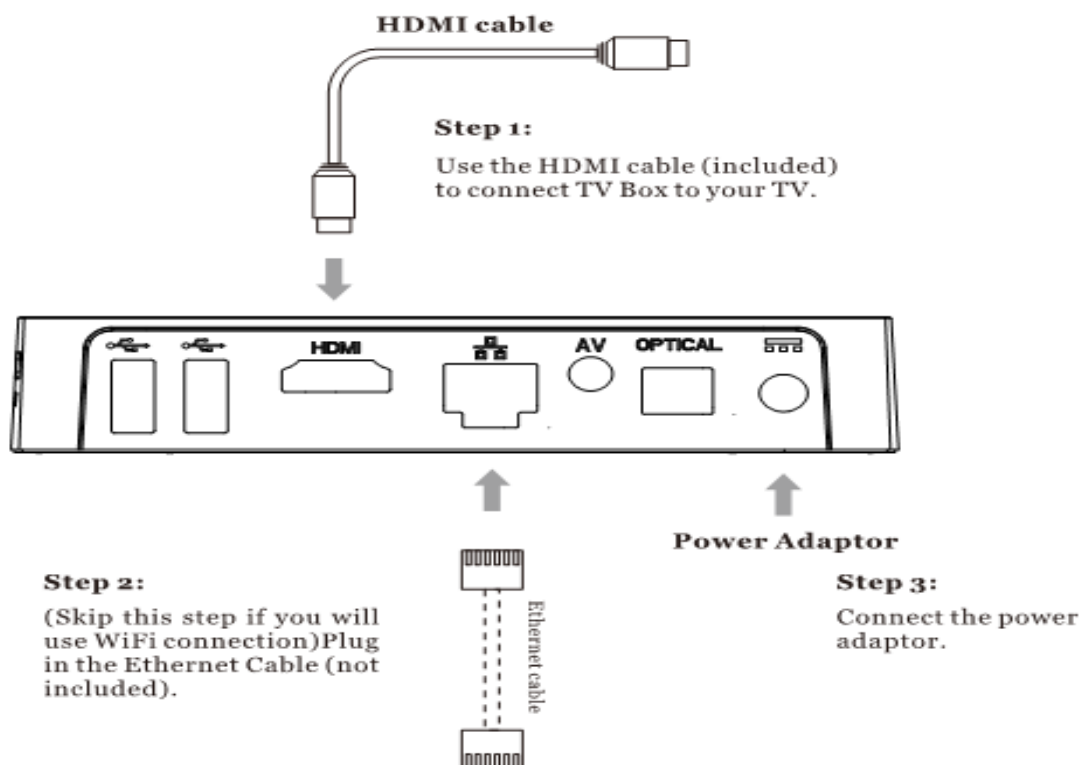 

Remote Controller

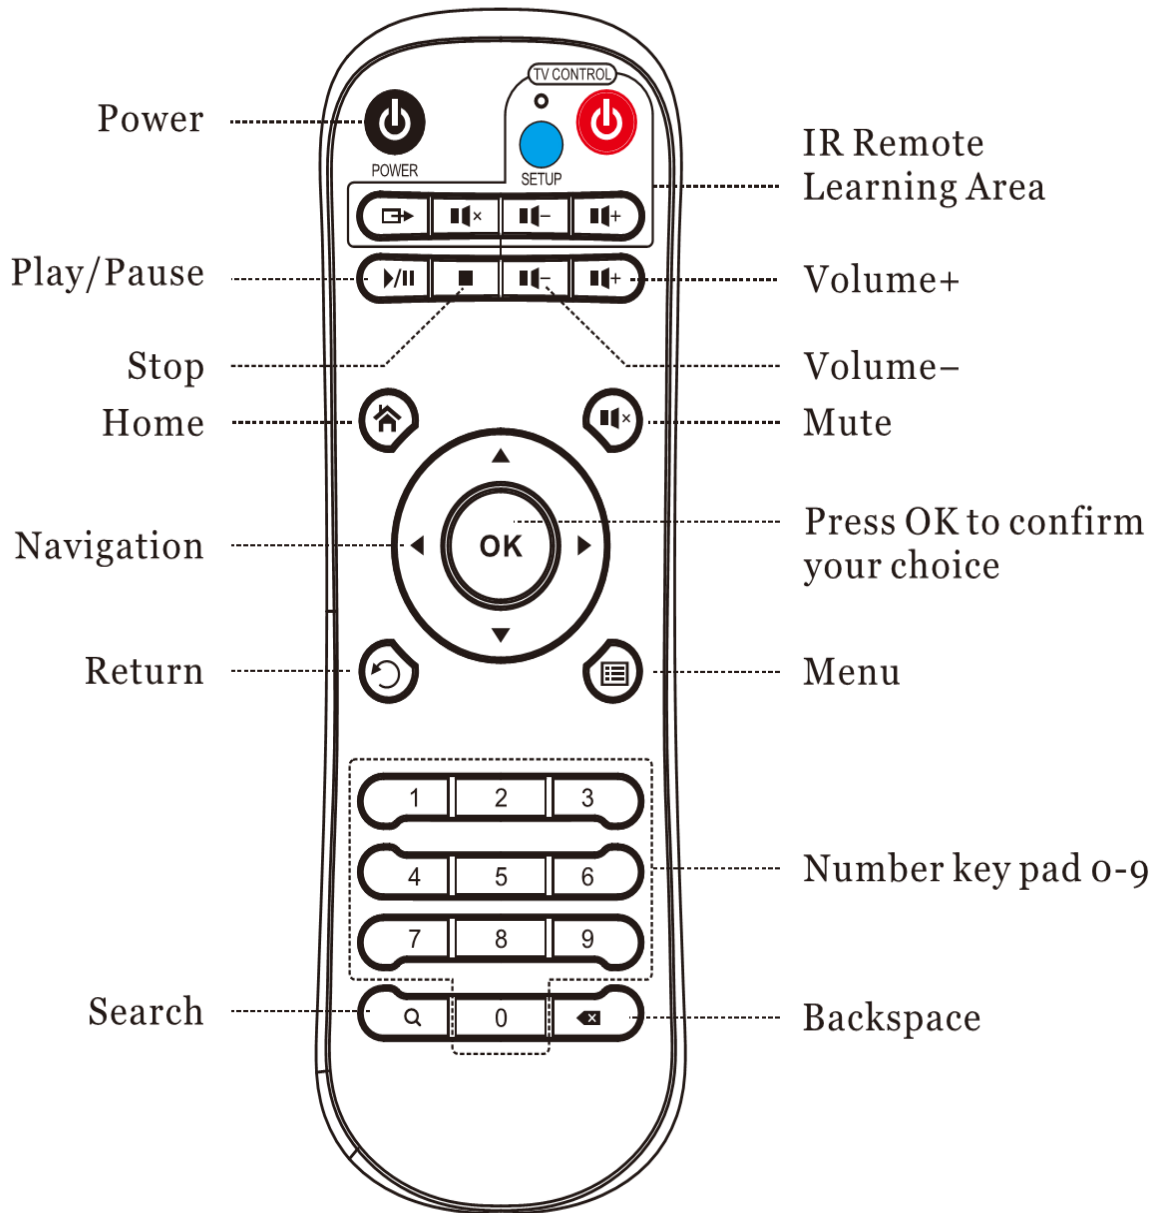 

Plug and Play

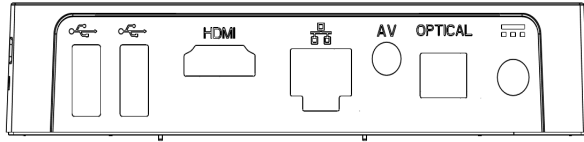 

- You need to connect one end of the power cable to a power socket and the other to the socket at the back of TV Box.
- No WiFi coverage? No issues, use an Ethernet cable to connect.
- Use the HDMI Cable to enable video on TV.



 
After plugging on the TV Box the device will start automatically in 30 seconds. You will be guided by a setup wizard on your screen when you run the device the first time or after an upgrading or factory reset. To start off, select the language by scrolling through the three options available. You may select from up to 49 more languages through Advance Settings menu.

Screen Scale



To adjust the screen scale use the up and down navigation keys present on the remote. TV Box offers an interactive screen scale which adjusts screen settings of a majority of TV models.

Network

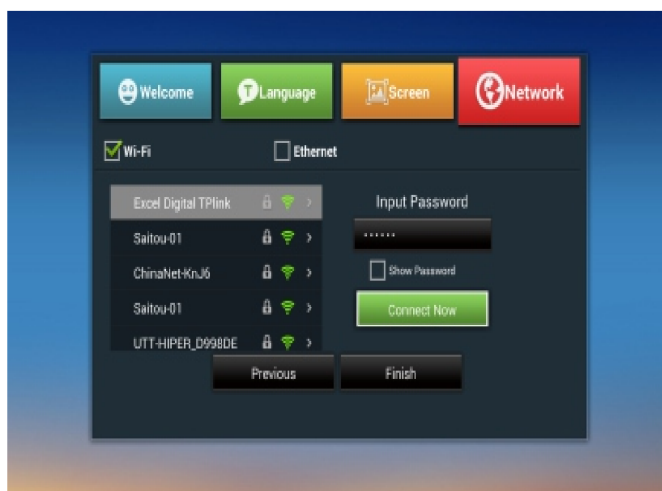

Clicking on WiFi will enable WiFi connectivity and the device will automatically search for nearest networks. Select the network and enter password. A message of “WiFi connected” will appear and IP address will be displayed to show successful setup. The process may take longer if coverage is not stable. In that case you may need to try more than once to connect. Simply click on Ethernet option if you don’t want to use WiFi.

Congratulations




The setup of TV Box is complete. You will see this home screen every time you boot up the TV Box. On this page you will find 6 main functions in large icons and some useful shortcuts down below.

XBMC	XBMC is highly advanced and powerful multimedia player. It plays all kinds of online streaming videos and local media.
Browser	To use your normal TV as smart TV and surf the internet use the browser. We recommend that you use an Air Mouse.
Setting	To adjust settings this menu contains advanced options.
My Apps	All preloaded and user-installed APPs will be displayed here.
Local	Use this option to play Local Media.
Recent Apps	Gain quick access to recently used APPs or clear all background APPs.
Shortcut Bar	Creates shortcuts of all your favorite APPs for quick access.

Detailed information about each service will be introduced in following chapters.

 
XBMC/Kodi

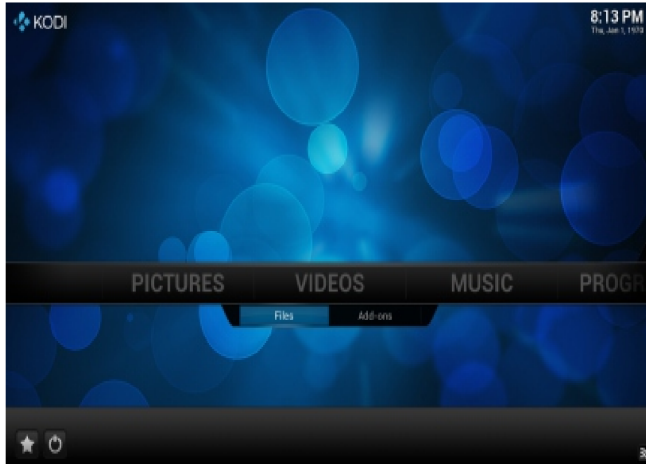

XBMC is an outstanding open-source multimedia player. It Plays online Streaming videos and local media. It is compatible with most of the video and audio formats.

The TV Box has a customized version of KODI based on official version. It offers improved video playback quality and stability. After every eight hours the system cache gets cleaned automatically, which reduces memory occupation and improves responding speed.

 Browser

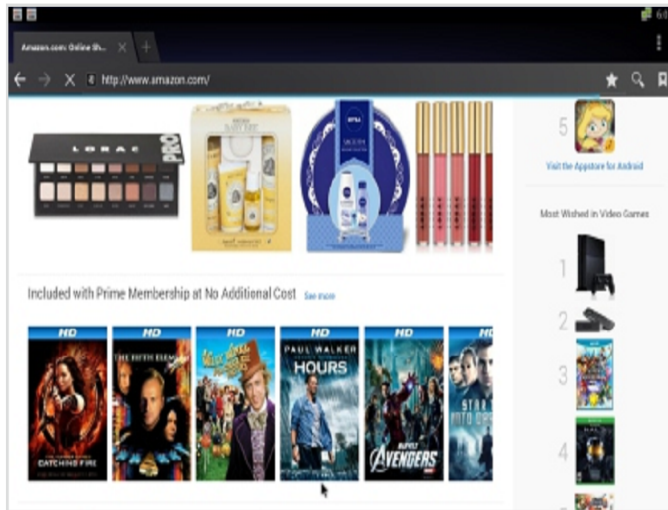


TV Box Browser supports Flash and HTML5. Web page with video clips and animation effects can be viewed on your Television just like on a PC or your smart phone.

After opening the App, press search button present on the remote. It is shaped like a magnifier. A virtual keyboard will pop-up. The navigation keys on the remote allows you to choose letter to type-in the web address. Click the 'go' button on the virtual keyboard to view the website.

Tips:

- Virtual keyboard can be disabled by pressing “back”
- An Air mouse with keyboard or a desktop wireless keyboard will enhance your web surfing experience on TV.

 Setting

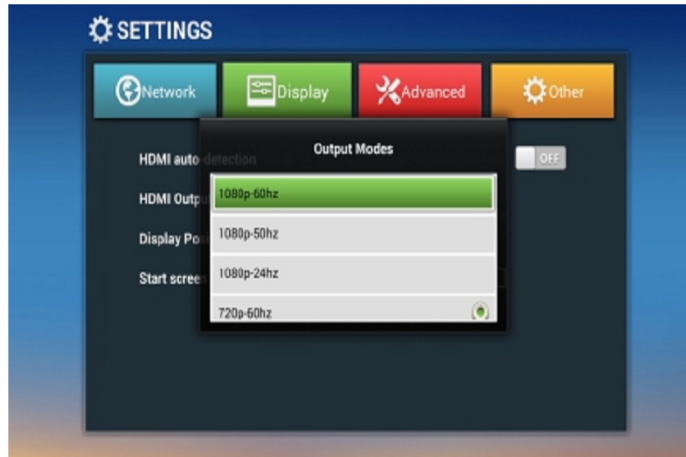

This menu offers many more options like screen resolution and advanced setting.


Network	Lets you select network type, WiFi or Ethernet.
Display	The TV BOX automatically adjusts to suitable resolution for you. However, to change the resolution, disable the HDMI auto detection, and set it resolution manually. Remember: Unsupported resolution can cause 'black screen'. In case it happens wait for 5 seconds the screen will switch back to previous setting.
Advanced	Audio output and CEC control can be accessed from here.
Other	To access additional setting options choose this menu. Understand each option before making any new changes.

My Apps



Shows preloaded and user-installed Apps. You can also access Miracast setting and Media Center for Airplay. More Apps will be displayed as you scroll down.

 
Local

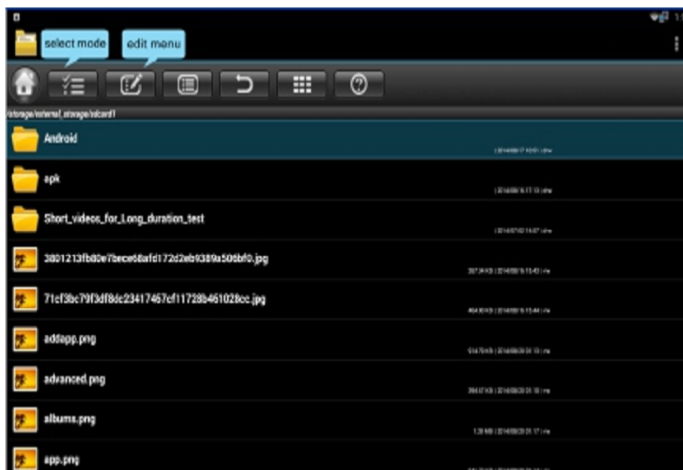

It is a local file manager App. You can easily copy/paste your files and access medias or APKs saved in TV Box or a flash drive.

Tips: A gear like Menu key on the remote greatly helps in this app.

 Recent Apps

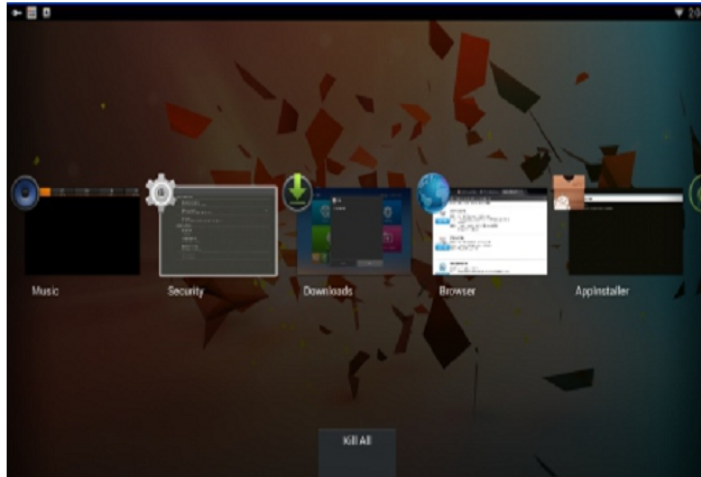

TV Box operates through the latest multitask Android OS. You can run various apps, and benefit from a variety of system resources. This system lets you switch between recent Apps and/or Kill all Apps to claim free space. If system gets slow you can use this option.

Shortcut Bar



It appears at the bottom of the home page. To place your favorite apps here press '+'.

Trouble Shooting

Under no circumstances should you try to repair the TV Box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV Box. -Press the power on the remote controller to turn on the power
No picture	-Reconnect with HDMI cable or AV cable. -Check if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.
The Box does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV Box. -Reduce the distance to the TV Box. -Replace the batteries in the remote control.
Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.
No sound during movies playback	-The audio codec may not be supported by the TV Box. You can change to the supported audio on playing menu. -Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the Box. -If one of the USB can not be read, please turn off the TV Box 30 seconds and restart the TV Box.
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDMI connection	-Check the connection between the TV and the HDMI jack of Box. -Check your TV system setup. -Check the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV Box, wait 30 seconds, turn it on again. -If under HDMI status, check if HDMI connection is correct or change another HDMI cable set the output resolution of this TV Box into 720p.