



Brookstone®

Grill Alert®

BLUETOOTH® CONNECTED THERMOMETER

919441_INS_BLUETOOTH_GRILL_ALERT
Size:5" Wx4.75" H Output:100% Prints:1/1,Blk

TABLE OF CONTENTS

Warnings and Cautions.....	1
FCC Information	4
Location of Parts and Controls.....	6
Installing the Batteries	12
Downloading Free App.....	13
Pairing Device and Grill Alert®.....	14
Grill Alert® Operation	15
Selecting an Entree and Doneness Level.....	16
Selecting a Temperature Pre-Alert	17
Selecting Alert Type.....	18
Adding a Custom Entree	19
Editing a Custom Entree	19
Using the Timer.....	20
Probe Placement Information.....	21
Changing Temperature Setting	21
Accessing Help.....	21
Care and Maintenance	24
Troubleshooting.....	25
App Compatibility	26
Specifications	27
Warranty	28

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAFETY AND HANDLING INFORMATION

For maximum product life, do not drop, throw, or crush the Grill Alert. Do not expose it to humidity, dust, or operating temperatures outside 32°F to 113°F (0°C to 45°C).

SAVE THESE INSTRUCTIONS!

WARNING

1. Close supervision is necessary when this unit is used by or near children or mentally disabled individuals.
2. This product can be used to share content with Social Media Websites. Adult supervision is required.
3. Use this unit only for its intended use as described in this manual.
4. To comply with FCC's RF radiation exposure limits for general population/ uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must be collocated or operating in conjunction with any other antenna or transmitter.

BATTERY PRECAUTIONS

1. Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
2. Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
3. The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
4. Use only fresh batteries of the required size and type.

FCC INFORMATION

FCC ID : 2AFFZ6011

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.



LOCATION OF PARTS AND CONTROLS (GRILL ALERT®)

1. Pairing/Low Battery LED Indicator
2. Probe 1 Current Temperature
3. Power Button
4. Probe 2 Current Temperature



LOCATION OF PARTS AND CONTROLS (GRILL ALERT®)

5. Probe Ports Cover
6. Probe 2 Port (under Cover)
7. Probe 1 Port (under Cover)
8. Probe Jack
9. Silicone Probe Cord Wrap
10. Probe (2)
11. Battery Door

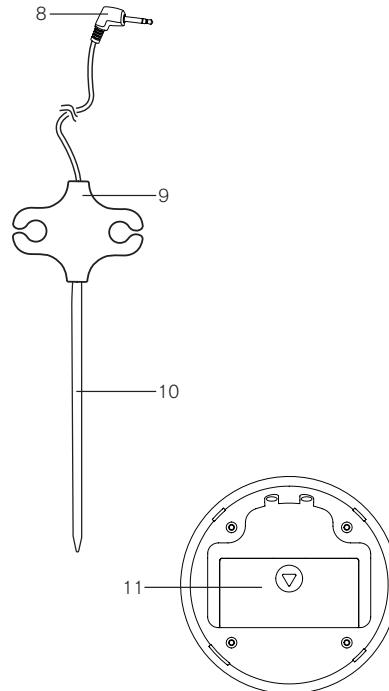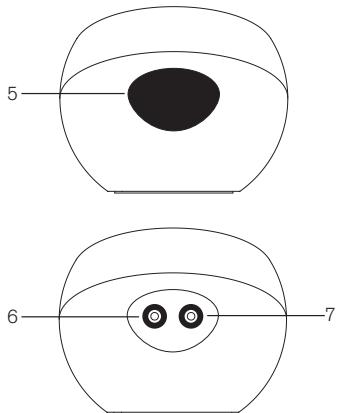

HOME SCREEN APP CONTROL (TABLET)


1. Probe 1 Entree/Doneness
2. Access Probe 1 Settings
3. Probe 1 Current Temperature
4. Probe 1 Target Temperature
5. Probe 1 Temperature Graph
6. Probe 2 Temperature Graph
7. Probe 2 Current Temperature
8. Probe 2 Target Temperature
9. Main Menu
10. Probe 2 Entree/Doneness
11. Access Probe 2 Settings



Note: The control layout may not appear exactly as shown, depending upon your device.

HOME SCREEN APP CONTROL (PHONE)


1. Access Probe 1 Settings
2. Probe 1 Current Temperature
3. Probe 1 Temperature Graph
4. Access Probe 2 Settings
5. Probe 2 Current Temperature
6. Probe 2 Temperature Graph
7. Probe 2 Target Temperature
8. Probe 2 Entree/Doneness
9. Probe 1 Target Temperature
10. Probe 1 Entree/Doneness
11. Main Menu

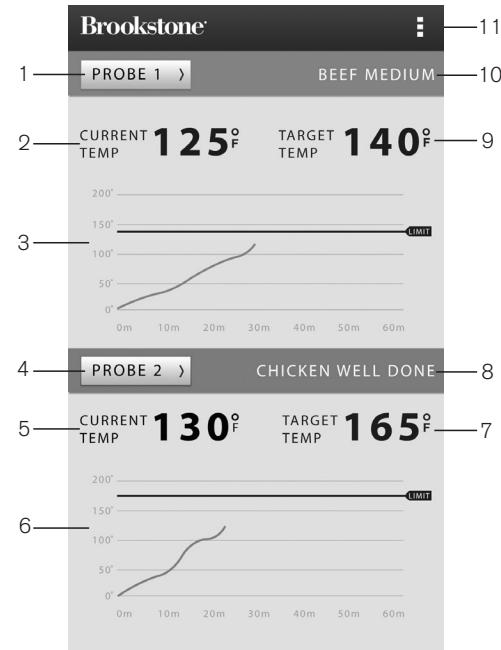

Note: The control layout may not appear exactly as shown, depending upon your device.


SETTINGS APP CONTROL

1. Previous Screen
2. Select Entree
3. Select Doneness
4. Select Temperature Pre-Alert
5. Select Alert
6. Return to Home Screen
7. Main Menu

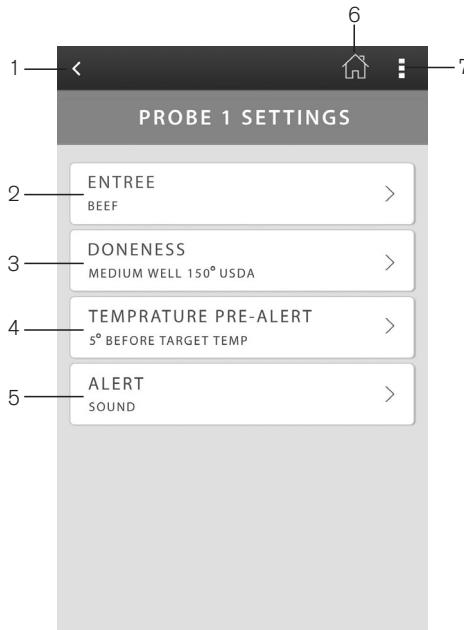

MAIN MENU APP CONTROL

1. Main Menu
2. Timer
3. Share Photos
4. Probe Placement Information
5. Temperature/Bluetooth Pairing Settings
6. Quick Start Guide/Tutorial

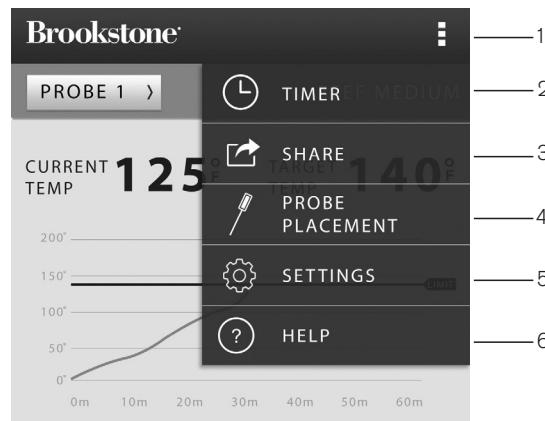


Note: The control layout may not appear exactly as shown, depending upon your device.

Note: The control layout may not appear exactly as shown, depending upon your device.

INSTALLING THE BATTERIES

1. Remove both probes from the Grill Alert.
2. Twist the bottom housing counter-clockwise to unlock and remove.

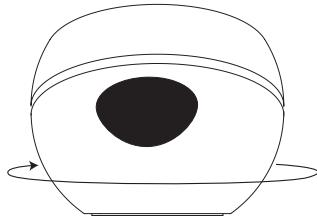

3. Remove the BATTERY COVER.
4. Insert 2 AAA batteries (not included) according to polarity indicators.
5. Replace the BATTERY COVER.
6. Replace the bottom housing and twist clockwise to lock in place.
7. The PAIRING/LOW BATTERY LED INDICATOR will flash red when the batteries need to be replaced.

DOWNLOADING FREE APP

Go to the iTunes® App StoreSM (for Apple devices) or Google Play™ (for Android devices) to download the Grill Alert App, "Grill Alert".



PAIRING DEVICE AND GRILL ALERT®

1. Prepare your device to pair using Bluetooth® technology, making sure the device is within 150 feet of the Grill Alert. Refer to your device's owners manual for details if necessary.
2. Download the free "Grill Alert" app from the iTunes® App StoreSM (for Apple devices) or Google Play™ (for Android devices).
3. Press the POWER/PAIRING button to turn the unit on.
4. Press and hold the POWER/PAIRING BUTTON until the PAIRING LED INDICATOR starts flashing.
5. Open the Grill Alert app on your device.
6. Tap the Bluetooth® icon or tap the Main Menu icon then tap "SETTINGS" to access the Bluetooth® icon.
7. Tap "Scan" to scan for the Grill Alert.
8. Tap "GrillAlert" to sync the app with the Grill Alert.
9. The PAIRING LED INDICATOR will be solid blue.

Notes:

- To cancel pairing mode, either press the POWER/PAIRING BUTTON to turn the Grill Alert off, or wait 2 minutes for pairing to cancel automatically. The PAIRING LED INDICATOR turns off.
- If the Bluetooth connection is lost or the device and unit are out of range, the Grill Alert will search for two minutes for the Bluetooth connection to reestablish or the device and unit to come back into range. The PAIRING LED INDICATOR will flash while searching and will be solid when reconnection is made.

GRILL ALERT® OPERATION

1. Press the POWER/PAIRING button to turn the Grill Alert on.
2. Refer to page 14 for pairing instructions if using with Grill Alert app.
3. Insert the PROBE JACK into PROBE PORT.
4. Insert the PROBE into thickest part of the entree. The PROBE should not touch bone or fat.
5. The PROBE and SILICONE PROBE CORD WRAP are heat resistant and can be used on a grill or in an oven.
6. The magnetic base will stick to metal surfaces and the temperature display flips when the Grill Alert is rotated.
7. Press the POWER/PAIRING button to turn the Grill Alert off.
8. Wrap the PROBE cord around the SILICONE PROBE CORD WRAP when not in use.

SELECTING AN ENTREE AND DONENESS LEVEL

1. Tap “PROBE 1” or “PROBE 2” on Home Screen to access Settings menu.
2. Tap “ENTREE” to access the list of entrees.
3. Tap the desired entree.
4. Tap the back arrow to return to the Settings menu.
5. Tap “DONENESS” to access a list of recommended doneness levels for the selected entree.
6. Tap the desired entree doneness level.
7. Tap the Home icon to return to the Home screen.
8. The desired entree and doneness target temperature will display on the Home screen.
9. An alert will activate when the current temperature reaches the target temperature.

Note: If “NONE” is selected for the Alert type, no alert will activate at the target temperature.

SELECTING A TEMPERATURE PRE-ALERT

1. Tap “PROBE 1” or “PROBE 2” on Home Screen to access Settings menu.
2. Tap “TEMPERATURE PRE-ALERT.”
3. Tap the desired temperature pre-alert. Tap “NONE” for no temperature pre-alert.
4. Tap the Home icon to return to the Home screen.
5. An alert will activate when the current temperature reaches the temperature pre-alert setting.

Note: If “NONE” is selected for the Alert type, no alert will activate when the current temperature reaches the temperature pre-alert setting.

SELECTING ALERT TYPE

1. Tap "PROBE 1" or "PROBE 2" on Home Screen to access Settings menu.
2. Tap "ALERT" to access the list of alert types for entree done and temperature pre-alerts:
 - For a Sound Alert, tap "SOUND" to access a list of sound alerts. Tap the desired sound alert.
 - For a pop up window alert only, tap "POP-UP ONLY."
 - To add Vibration to an alert (for phones only), slide the Vibration button to the right. To deactivate Vibration, slide the Vibration button to the left.
 - For no alert, tap "NONE."
3. Tap the Home icon to return to the Home screen.

ADDING A CUSTOM ENTREE

1. Tap "PROBE 1" or "PROBE 2" on Home Screen to access Settings menu.
2. Tap "ENTREE" to access the list of entrees.
3. Tap 
4. Enter the name of the custom entree.
5. Enter the doneness temperature of the custom entree.
6. Close the keyboard and tap "Add."
7. The custom entree will show in the list of entrees.
8. Tap the Home icon to return to the Home screen.
9. The custom entree and doneness target temperature will display on the Home screen.

EDITING A CUSTOM ENTREE

1. Tap "PROBE 1" or "PROBE 2" on Home Screen to access Settings menu.
2. Tap "ENTREE" to access the list of entrees.
3. Tap on the custom entree to be edited.
4. Tap 
5. Edit the name and doneness temperature of the custom entree.
6. Close the keyboard and tap "Save".
7. Tap the Home icon to return to the Home screen.

USING THE TIMER

1. Tap the Main Menu icon.
2. Tap "TIMER" to access the Timer.
3. Tap the time to access the timer selector.
4. Select desired time and tap "OK".
5. Tap "ALERT" to access the list of alert types for the Timer:
 - For a Sound Alert, tap "SOUND" to access a list of sound alerts. Tap the desired sound alert.
 - For a pop up window alert only, tap "POP-UP ONLY."
6. Tap "Start" to start the Timer. Tap "Stop" to stop the Timer.
7. Tap the Home icon to return to the Home screen.
8. An alert will activate when the Timer ends.

SHARING PHOTOS

1. Tap the Main Menu icon.
2. Tap "SHARE."
3. Tap the camera icon to take a photo.
4. Tap photo to select.
5. Tap  to share selected photo.
6. Tap the Home icon to return to the Home screen.

PROBE PLACEMENT INFORMATION

1. Tap the Main Menu icon.
2. Tap "PROBE PLACEMENT."
3. Tap the desired entree to access probe placement information.
4. Tap the Home icon to return to the Home screen.

CHANGING TEMPERATURE SETTING

1. Tap the Main Menu icon.
2. Tap "SETTINGS."
3. Slide the temperature setting button to the left to show temperature on app and on Grill Alert in Celsius.
4. Slide the temperature setting button to the right to show temperature on app and on Grill Alert in Fahrenheit.

ACCESSING HELP

1. Tap the Main Menu icon.
2. Tap "SETTINGS."
3. Tap "QUICK START GUIDE" to access the Quick Start Guide.
4. Tap "TUTORIAL" to start the app tutorial.
5. Tap the Home icon to return to the Home screen.

CARE AND MAINTENANCE

- Hand wash the probe with mild detergent and water. Do not submerge in water. Do not machine wash.
- Wipe Grill Alert with a damp cloth. Do not submerge in water.
- If a probe becomes damaged during use, order a replacement probe (919441) by calling customer service at 800-846-3000.

TROUBLESHOOTING

ISSUE	SOLUTION
Can not make Bluetooth® connection through app.	App is only compatible with select Bluetooth® 4.0 and Bluetooth® Smart Ready devices.
Bluetooth® disconnection.	Ensure your device is within 150 feet of the clock and reconnect your device to the Grill Alert. Refer to page 14 for pairing instructions.
Can not access Bluetooth® settings by tapping Bluetooth® icon in "SETTINGS."	If the Bluetooth® icon is gray in "SETTINGS" the Grill Alert is paired to another device. Turn Bluetooth® off on the other device and refer to page 14 for pairing instructions to your device.
No sound when Alert is activated.	Ensure your device is not set to Vibrate or Do not Disturb.
Alert does not activate.	"NONE" may be selected for Alert Type. Select "SOUND" or "POP-UP ONLY" for alert type.

APP COMPATIBILITY

iPhone 6 Plus	iPad Air 2
iPhone 6	iPad Air
iPhone 5s	iPad mini 3
iPhone 5c	iPad mini 2
iPhone 5	iPad mini
iPhone® 4s	iPad® (4th generation)
iPod touch® 5th generation	iPad® (3rd generation)

Apple® iOS: 6.0 and later

Android 4.3 and later, CPU: 800MHz, RAM: 512M

App is only compatible with select Bluetooth® 4.0 and Bluetooth® Smart Ready devices.

Visit Brookstone.com for compatibility updates.

SPECIFICATIONS

Power Supply.....	3V, 2 AAA batteries
App Compatibility.....	Bluetooth® 4.0/Bluetooth® Smart Ready
Weight (with batteries).....	Approximately 5 ounces
Dimensions	Approximately 3" dia x 3" h

Apple, iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

App Store is a service mark of Apple Inc.

Android is a trademark of Google, Inc.

Google Play is a trademark of Google, Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

© Brookstone 2015

NOTES

NOTES

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more
great ideas online

Brookstone[®]

919441

Merrimack, New Hampshire USA 03054 • 800-846-3000 • Brookstone.com

919441_INS_BLUETOOTH_GRILL_ALERT
Size:5" Wx4.75" H Output:100% Prints:1/1 Blk