

THE BLACK SERIESTM

water speakers



Introduction

Congratulations on your purchase of the Black Series Bluetooth LED Water Speakers. These rechargeable speakers connect wirelessly to tablets, smartphones and computers. Colorful LED lights and water streams dance and pulsate to the beat of your favorite music.

Contents

2x Water Speakers



Accessories



1x Micro
USB Cable



1x Mini USB
Cable



1x Auxiliary
Cable


Features

- Built in rechargeable battery
- Auxiliary connection
- Stereo Sound
- Compatible with BLUETOOTH®

Charging the Speakers

1. Attach the micro USB charging cable to (E).
2. Attach the other end of the USB Charging Cable to a computer USB Port. If (H) is set to On, the indicator light (D) will permanently light up. If (H) is set to Off, the indicator light (D) will turn on and when the speakers are fully charged the indicator light will turn off.
3. Remove USB cable from computer after speakers are fully charged. It takes approximately 2 hours to fully charge speakers.

Note: Turn off Water Speakers when not in use. A tone will be heard when battery is low, speakers will then turn off.

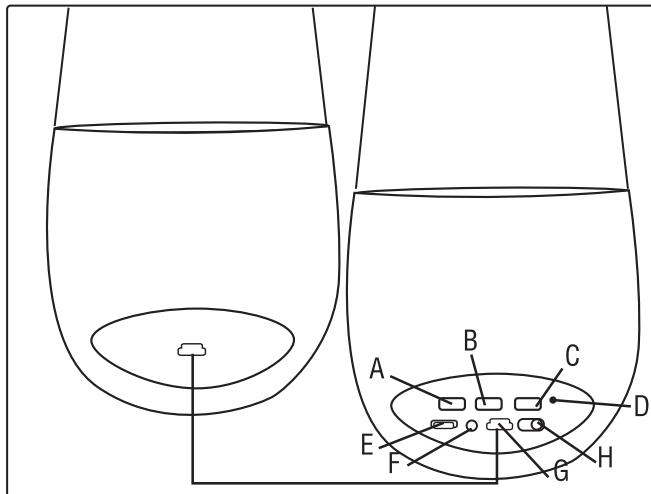

Controls

- A. Previous song (Press once) / Lower Volume (Press and Hold)
- B. Play / Pause
- C. Next song (Press once) / Increase Volume (Press and Hold)
- D. Bluetooth® Pairing indicator light
- E. Charging Jack
- F. Auxiliary Connection
- G. Mini USB Connection
- H. On/Off

Warnings

- Inspect the product before every use. If the product appears worn, frayed, cracked, or broken in any manner, discontinue use and discard immediately.
- Do not disassemble
- Do not use for anything other than its intended purpose
- This is not a children's product. Keep out of reach of children.
- Product is not designed for all weather use. Keep away from extreme temperatures.



Bluetooth®
wireless technology

THE BLACK SERIES™ water speakers



Pairing the Speakers

Your device must have BLUETOOTH® capability. Consult your device manufacturer or user manual if you are unsure if your device has this feature.

Turn off any devices that may have been previously paired to the speakers.

1. Turn speakers on by sliding the On/off switch (H) to the right side, a voice will prompt instructions
2. Place your device within 3 feet of speakers, figure 1.
3. Enable BLUETOOTH® on your device and search for new BLUETOOTH® devices. Refer to your device's manual on how to enable and operate BLUETOOTH®
4. Select BT-WATER SPEAKER from the list of BLUETOOTH® available devices, Figure 2.
5. A voice will notify you when the speakers are successfully paired

Note: In Pairing Mode, the LED will keep flashing until the units are paired. Speakers will attempt to pair for 10 minutes and then pairing mode will turn off.

6. You can now stream music wirelessly from your device to your speakers.

Note: The speaker without controls cannot function without the other speaker. Use the Mini USB Cable to connect both speakers, (G). If speakers are paired and idle for 10 minutes, the speakers will go into sleep mode (LED's will turn off). Stream audio to de-activate sleep mode.

Fig. 1


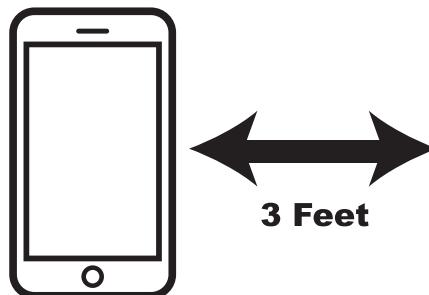


Fig. 2

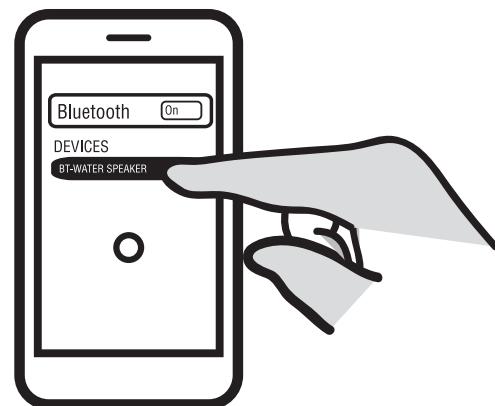

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in BLUETOOTH® wireless technology or 3.5 mm stereo mini plug to connect.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The artwork and design of this package are protected by US copyright law and may prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment