

## INSTRUCTION MANUAL

**MODEL: V50-200**  
**INSTRUCTION MANUAL**

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE  
AND KEEP IT FOR FUTURE REFERENCE.



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



### AVERTISSEMENT:

#### RISQUE DE CHOC ÉLECTRIQUE – NE PAS OUVRIR.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- **Warning:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

**CAUTION:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**WARNING:** To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure



**WARNING:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions- The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




15. The main plug is used as disconnect device, the disconnect device shall remain readily operable.
16. **WARNING**  
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
17. The use of the equipment in moderate climate.
18. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
19. No naked flame sources, such as lighted candles, should be placed on the apparatus.
20. The symbol with  $\sim$  Indication AC voltage.

**ACCESSORIES INCLUDED:**

- INSTRUCTION MANUAL
- 45 RPM ADAPTOR

## Product Overview

### Front View

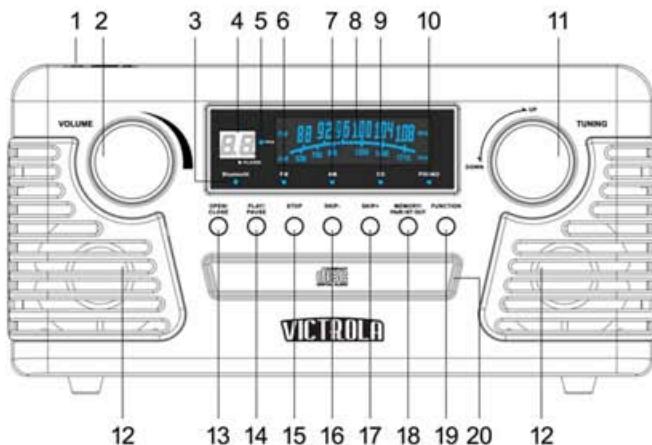

1. 3.5mm HEADPHONE JACK - Accepts headphones.
2. VOLUME KNOB/POWER ON/OFF - Turn to adjust volume. Turn left to power off the unit.
3. BLUETOOTH INDICATOR - Blue light will flash when the unit is waiting to be paired. The Blue light will stay lit when an external device is successfully paired to the unit.
4. FUNCTION DISPLAY
5. PROG INDICATOR – Illuminates to indicate the program playback is set.
6. FM INDICATOR - Blue light illuminates to indicate the station playing is in stereo.
7. AM INDICATOR - Blue light illuminates to indicate the station playing is in stereo.
8. DIAL LENS
9. CD INDICATOR - Blue light illuminates to indicate the CD mode is set.
10. PHONO INDICATOR - Blue light illuminates to indicate PHONO mode is set.
11. RADIO TUNER KNOB - In AM/FM mode, turn to tune in a station.
12. STEREO SPEAKERS
13. OPEN / CLOSE - In CD mode, press to open and close the disc tray.
14. PLAY / PAUSE - Press to start playback, press again to pause.  
*(Note: Play/Pause only works in CD & Bluetooth mode.)*
15. STOP - Press to stop playback or cancel the program setting.
- 16 & 17. PREVIOUS / NEXT TRACK & REWIND / FF (SKIP - or SKIP +).
18. MEMORY / PAIR / BT OUT - Press to set the program playback. *(Note: Memory function only works in CD mode) In Bluetooth and BT OUT modes, press and hold to connect or disconnect from your device.*
19. FUNCTION - Select AM/FM/BLUETOOTH/PHONO mode
20. DISC TRAY

## Rear View



### **1. FM WIRE ANTENNA**


While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.

### **2. AUX-IN SOCKET**

**3. AC POWER CORD** - Connect the AC plug into a wall outlet. It's strongly recommended that this product should be operated only from the type of power source indicated on the marking label.

## Parts of the Turntable



- A. Turntable
- B. Spindle
- C. Adaptor for 45 RPM Records
- D. Cue-lever
- E. Speed Control Switch
- F. Tone Arm
- G. Arm Rest
- H. Stylus

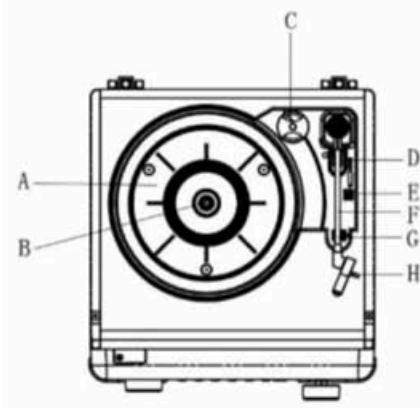

## Setup/Basic Operation

### Setup

1. Remove white protective needle cover by gently pulling towards front of unit.
2. Remove any packaging materials from the unit.
3. Connect the AC power cord to a wall outlet.

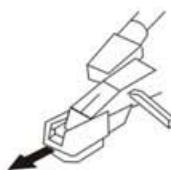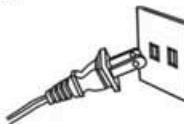

### Note:

- You're strongly recommended that this product should be operated only from the type of power source indicated on the marking label.
- To prevent interference, avoid bundling audio signal cables together with the AC power cord.

## Basic Operation

1. Connect the power plug into the wall outlet.
2. Turn Volume Knob clockwise to turn the unit ON and adjust volume to desired level.
3. Press Function button to select Radio (FM or AM), CD, Phono or Bluetooth.
4. Listen through Earphones/Headphones (not included).



The sound from all speakers is cut off.

## Listening to a Vinyl Record

1. Press the FUNCTION button to select the PHONO operation, the PHONO indicator will light.
2. Place a vinyl record on the turntable. When playing a 45 RPM record, use the included adaptor.
3. Select the appropriate speed.



4. Release the tone arm from the tone arm-rest holder.
5. Carefully remove the white needle guard from the end of the tone arm.
6. Move the tone arm gently to the edge of the record (or the starting point of a track).  
*The turntable will begin to turn.*
7. When the record reaches its end, the tone arm will stop at the center of the record.  
You must lift and return the tone arm to the tone arm-rest manually.
8. Lock the tone arm-rest holder to protect the tone arm when not using.

## Vinyl Stream (Bluetooth Out Mode)

In PHONO / CD / AUX mode, you can use the Bluetooth Out function to play your music from the device to an external Bluetooth speaker.

1. In PHONO / CD / AUX playing modes, the unit will automatically be emitting a Bluetooth signal.

*The "Bluetooth indicator" will be flashing blue.*

2. If you want to use an external Bluetooth speaker to play your music, simply turn ON your external Bluetooth speaker, make sure it is in Bluetooth pairing mode, and let it connect to the unit.

*NOTE: The effective distance between your external device and this device is 10 meters (33ft).*

3. When the pairing is successful, the device's internal speakers will turn off and the music will play from your external speaker. The Bluetooth indicator will remain lit while connected.

*NOTE:*

*-If you want to disconnect from the external Bluetooth speaker, press and hold the MEMORY / PAIR / BT OUT button.*

*-If you are having trouble pairing with an external speaker, move the speaker closer to this unit. If pairing is still not successful, please turn OFF both units and try again.*

## Listening to a CD

1. Press the FUNCTION button to select CD operation, the CD indicator will light up and "Cd" will appear on the function display. (NOTE: When no disc is in the unit "no" will appear on the display.)

2. Press the OPEN/CLOSE button to open the tray, carefully place a CD on the tray.

3. Close the tray and start playing the CD. *The CD will start playing from the first track.*

4. Press PLAY/PAUSE button to play/pause the track.

*Pressing the PLAY/PAUSE button will restart the CD where it was paused.*

5. Press STOP button to stop playing the CD play.

*(NOTE: Do not switch the unit off while playing a CD as this may damage the CD and the unit.)*

6. Press SKIP+ to skip to the next track, press the SKIP- button once to go back to the beginning of the current track, press the SKIP- button twice to go back to the start of the previous track.

7. To fast forward during playback, press and hold the SKIP+ button. Fast forwarding stops when the button is released. To rewind (reverse) playback, press and hold the SKIP- button.

### Programmed playback:

1. In CD play mode, press the STOP button to stop playing.

2. While the CD is stopped, press the MEMORY button, the unit will begin the programming function, the PROG indicator will light and "01" flashing on the function display.

3. Press SKIP+ or SKIP- button to select the desired first track.

4. Press the MEMORY button again to set the next programmed track, "02" will appear and blink.

5. Repeat step 3 through 4 to program the addition tracks.

*(NOTE: When all 20 program tracks are finalized, press the MEMORY button once and "F1" will appear on the display.)*

6. When you have finished programming the selected CD tracks, press the PLAY/PAUSE button to start the programmed playback.

7. Press the STOP button once to stop programmed playback, press the STOP button twice to cancel the programmed CD mode, the PROG indicator will turn off.

## Listening to the Radio

1. Press the FUNCTION button to select the AM/FM radio function.  
AM or FM will appear on the function display, depending which radio mode you are in.
2. Rotate the TUNING knob to select a station.
3. Adjust the FM Radio Antenna on the back of the unit for optimal FM reception. Be sure to stretch and move it around until the station you have tuned in is being received clearly.  
The AM/FM blue light will illuminate to indicate the station playing is in stereo.

## Listening to an External Audio Device (Bluetooth Mode)

External devices that have Bluetooth, can be connected to this unit and play through the internal speakers.

1. Press the FUNCTION button to select the Bluetooth mode, the Bluetooth indicator will begin flashing.
2. Set the Bluetooth function on your external device to ON.

*NOTE: The effective distance between your external device and this device is 10 meters (33ft).*

3. Select the "VICTROLA HALEY" on your "found" or "paired" devices list on your external device.
4. Wait a moment for the connection to occur, the Bluetooth indicator will remain lit.

*NOTE: If you want to disconnect and pair to a new external device, press and hold the "MEMORY / PAIR / BT OUT" button.*

## Listening to an External Audio Device (AUX Mode)

In AUX (auxiliary) mode, this unit can play audio from an external audio source (MP3 Player, Portable CD Player, etc.) There is an AUX-IN jack on the back of the unit.

1. Plug one end of the AUX-IN cable (not included) into the AUX-IN jack.
3. Plug the other end of the cable into the headphone jack of the external audio source.

**NOTE:**

1. *All operations are only available on your external device.*
2. *When inserting an AUX-IN cable (not included) into the AUX-IN jack, only the VOLUME knob will work.*
3. *Auxiliary mode has a function priority. When you plug the AUX cable into the unit in any other mode, Auxiliary mode will become active.*

## Maintenance / Proper Handling

### Compact Disc Handling

- Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recorded only on one side).
- To remove a disc from its storage case, press down on the center of the case and lift the disc upward, holding it carefully by its edges.
- To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
- Never use such chemicals as record spray, antistatic sprays or fluid, benzine or thinner to clean discs; they will irreparably damage the disc's plastic surface.
- Discs should be returned to their cases after use to protect from dust and scratches.
- Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods of time.
- Printable CD-R and CD-RW discs are not recommended, as the label side may become sticky and damage the unit.
- Use a soft oil-based felt-tipped pen to write information on the label side. Never use a ball-point or hard-tipped pen, as doing so may damage the recorded side.
- Do not use irregularly shaped CDs (octagonal, heart shaped, business card size, etc), as they will damage the unit.
- Read all precautions supplied with any CD-R or CD-RW disc.
- Never handle a disc with dirty fingers.
- Never insert a disc that has a crack on the surface.

### Handling Vinyl Records

- Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.
- To clean a record, use a soft anti-static cloth to gently wipe the record surface.
- Keep records in their protective sleeves when not in use.
- Always store records upright on their edges.
- Avoid placing records in direct sunlight, close to a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold or moisture.

### General Care

- When removing the power plug from the wall outlet, always pull directly on the plug. Never pull the cord.
- To keep the laser pickup clean, do not touch it, and do not forget to close the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish.
- For cleaning, only use a clean, dry cloth.
- In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time.

### How to Replace the Turntable Stylus (Replacement Needle # ITNP-LC1)

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality.

Prolonged use of a worn-out stylus may damage the record. The highest speed of 78 RPM records would wear out the stylus more quickly.

#### Removing the old stylus:

1. Set a screwdriver at the tip of the stylus and push downward (A).
2. Remove the stylus by pulling it simultaneously downward and forward.



#### Installing a new stylus:

1. Hold the front tip of the stylus and insert its rear edge (B) first.
2. Push the stylus upwards (C) until the tip locks into place.



#### Caution:

- Do not bend the stylus.
- Do not touch the needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children

## Specifications

### GENERAL

Power Requirements..... AC 120 V~ 60 Hz  
Power Consumption..... 21W  
Dimensions (L x W x H)..... 360mm x 345 mm x 165mm / 14.2 x 13.6 x 6.5 in (approx.)  
Weight..... 8.20 lbs. (approx.)

### FM/AM RADIO

FM Frequency Range..... 88 to 108 MHz  
AM Frequency Range..... 530 to 1710 KHz

## Troubleshooting Guide

In case of trouble with the unit, please look through this chart and see if you can solve the problem by yourself before calling your dealer.

	Problem	Cause	Solution
GENERAL	Power does not come on when the power switch is pressed.	Unit is unplugged.	-Connect the unit to the AC power supply.
	No sound comes out of the speakers.	The volume is turned down (to MIN). The input selector does not match the playback source.	-Adjust the volume. -Re-select the desired input source.
	The sound is noisy.	The unit is too close to a TV set or another similar appliance.	-Turn off the TV or other appliance, and relocate the unit.
TUNER	Cannot listen to any station, or signal appears weak.	The station is not tuned-in properly. A TV set is being used nearby and is interfering with the radio reception.	-Properly tune-in the desired station. -Turn-off the interfering TV set.
	The sound is distorted.	The antenna is not oriented properly.	-Re-orient the antenna until reception improves.
CD PLAYER	CD stops immediately after starting, or unit pauses or stops during play.	The CD is inserted upside down. The CD is dusty or dirty or there is condensation on the CD.	-Insert the CD with the printed side right-side up. -Carefully clean and dry the CD.
	No sound.	The CD player is paused.	-Press the PLAY/PAUSE button.

	Specific CD is noisy, or playback stops or skips.	The CD is scratched, damaged or warped. The disc is very dirty.	-The CD should be changed. -Carefully clean the CD.
BLUETOOTH	No sound.	The unit is not switched to Bluetooth mode. Your device's and/or the unit's volume is not turned up. Your device is too far from the unit or there is some obstacle between your device and the unit.	-Ensure the unit is switched to BT mode. -Move your Bluetooth device closer to unit. -Turn up the volume on your portable device and/or the unit. -Turn off your Bluetooth device and unit, then power them both back on.
	Sound is garbled.	Your device's and/or the unit's volume is not adjusted properly.	-Turn down the volume on your device/phone and the unit.
	Unable to pair with a Bluetooth device.	Your device doesn't have Bluetooth connectivity. The Bluetooth pairing is not successful.	-Confirm that your device is Bluetooth compatible. -Repair the unit and device again.
PHONE	Decline in turntable audio performance.	The turntable stylus is worn out.	-Replace the stylus.

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
Other trademarks and trade names are those of their respective owners.

Made in China.

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.