 


# VICTROLA

EN

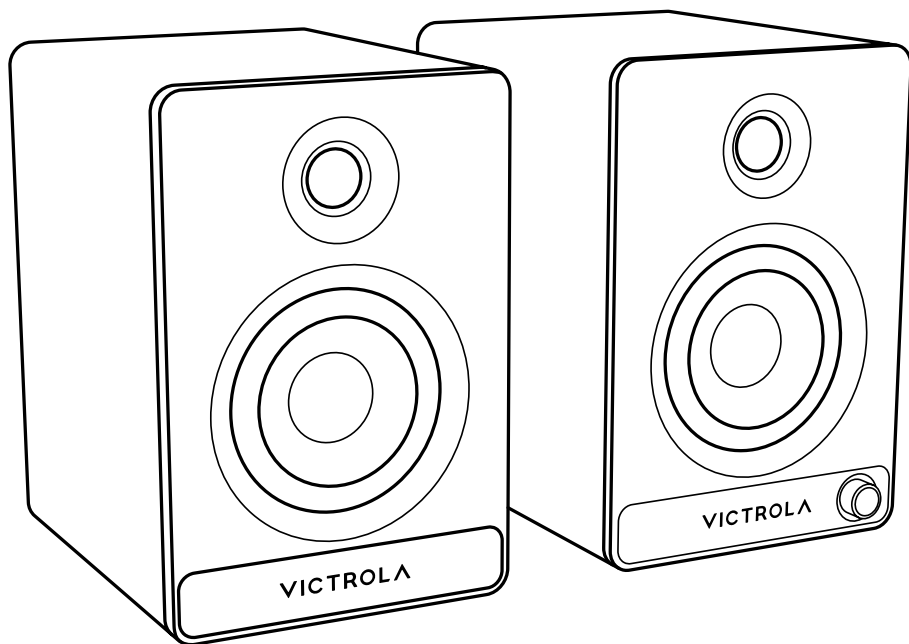

## VICTROLA TEMPO™

INSTRUCTION MANUAL  
VPS-400

# IN THE BOX

1. Primary (Right) Speaker

2. Secondary (Left) Speaker

 
3. Power Cable(s)

4. Speaker Cable


5. RCA to RCA Cable

6. 3.5mm to 3.5mm Cable

7. Instruction Manual(s)

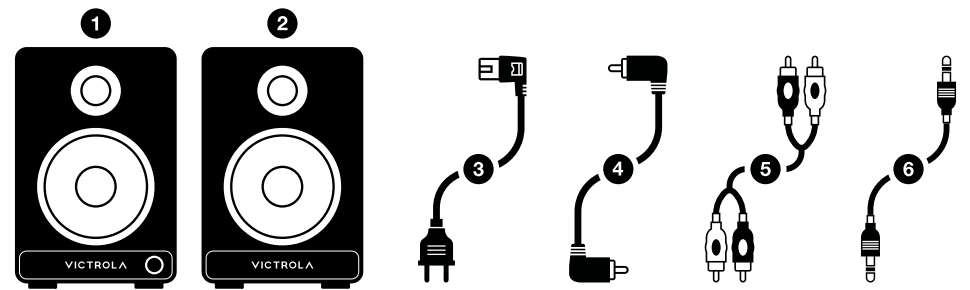

# OVERVIEW

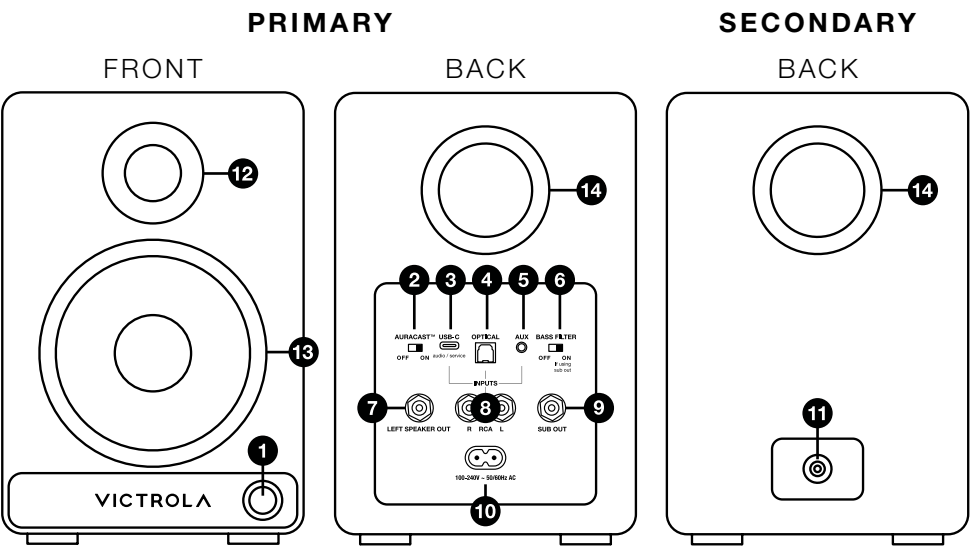 

1. Multi-Function Knob

2. Auracast Switch

3. USB-C Port

4. Optical Input

5. 3.5mm AUX Input

6. Bass Filter Switch

7. Left Speaker Output

8. RCA Input

9. Subwoofer Output

10. Power Input

11. Left Speaker Input

12. Tweeter

13. Woofer

14. Bass Port

# 1 SET UP SPEAKERS

1. Connect speaker cable from the LEFT SPEAKER OUT on the primary (right) speaker to the LEFT SPEAKER INPUT on the secondary (left) speaker.
2. Connect the power cord to the back of the primary (right) speaker. Connect the other end into a working power outlet.
3. Place the speakers in their listening position so that the primary (right) speaker is on the right side when looking at the speakers.

## NOTES:

- See 'Speaker Placement' section for optimal speaker placement.
- See 'Channel Switch' section for instructions on reversing the right and left channels.

# 2 USING THE SPEAKERS

1. Press and hold the multi-function knob for 1 second to power the speakers on.
2. Single press the multi-function knob to change sources:  
**Red** - Analog (RCA/Aux)  
**Green** - USB-C  
**Yellow** - Optical  
**Blue** - Bluetooth
3. Press and hold the multi-function knob for 1 second to power off the speakers.

## NOTES:

- Speakers will enter sleep mode if there is no audio signal for 15 minutes. To wake speaker, power on speaker or begin playback from the auto-sensing analog inputs (see analog input mode).
- When powered on speakers will return to last used mode unless woken up by auto-sensing input.

# 3 CONNECT SOURCES

## BLUETOOTH INPUT MODE-PAIR BLUETOOTH DEVICE

1. Enter BLUETOOTH mode, the speakers will automatically enter pairing mode and the LED will flash blue.
2. Select **Victrola Tempo** on your device's Bluetooth menu.
3. Once paired, the LED will turn solid blue for 2 seconds then turn solid white.

## NOTES:

- If connecting to a Victrola turntable, confirm the turntable is in Bluetooth pairing mode and near the speakers. Turntable and speakers will pair automatically.
- If attempting to connect to a Bluetooth device, confirm Auracast switch is OFF.

## OPTICAL INPUT MODE (RCA AND 3.5MM AUX)

1. Use an optical cable (not included) and connect one end of the cable to the OPTICAL input on the back of the primary speaker and the other end into the source device.
2. Enter OPTICAL mode, the LED will turn solid yellow for 2 seconds then turn solid white.

## **ANALOG INPUT MODE (RCA AND 3.5MM AUX)**

1. Use the included RCA cable or 3.5mm Aux cable to connect devices to the RCA or AUX inputs on the primary speaker.
2. Enter ANALOG mode, the LED will turn solid red for 2 seconds then turn solid white.

### **NOTES:**

- *RCA and AUX inputs are active at the same time. When there is audio from both inputs the 3.5mm AUX input takes priority.*
- *The analog inputs are auto-sensing, if they detect an audio signal they will automatically change the source to ANALOG.*

## **USB-C (PC) INPUT MODE**

1. Connect a USB-C cable (not included) to the back of the primary speaker and connect the other end to a supported USB-C audio device.
2. Enter USB-C mode, the LED will turn solid green for 2 seconds then turn solid white.



# **AURACAST™ MODE**

## **AURACAST TRANSMITTER MODE**

1. Connect source device and select source using multi-function knob.
2. Switch the Auracast switch on the back of the primary speaker to ON to begin an Auracast broadcast of the current source.
3. Follow directions of secondary Auracast device to connect to the Auracast broadcast.

### **NOTES:**

- *There is no LED indicator for Auracast Transmitter mode.*
- *To broadcast Bluetooth audio, Bluetooth device must be connected before turning on Auracast.*

## **AURACAST TRANSMITTER MODE**

1. Enter BLUETOOTH mode and do not connect a Bluetooth device.  
Switch the Auracast switch on the back of the primary speaker to ON.
2. LED will begin flashing light blue to indicate speaker is searching for a nearby Auracast broadcast.
3. Once speaker connects to nearby Auracast broadcast, LED will turn solid light blue

### **NOTES:**

- *Victrola Tempo speakers can only connect to Auracast broadcasts from other Victrola Auracast enabled products. Visit [victrola.com/auracast](https://victrola.com/auracast) to learn more.*

# AURACAST RECEIVER MODE

Connect an external subwoofer using the SUB OUT and a subwoofer cable (not included). It is recommended to use the BASS FILTER (below) when using an external subwoofer.

## BASS FILTER SWITCH

It is recommended to switch the BASS FILTER switch to ON when using an external subwoofer to allow the speakers to focus on clear mids and highs while the subwoofer handles the bass.

Using the BASS FILTER without a subwoofer connected will decrease the bass output for quieter listening, similar to Night Mode features found on other audio devices.

## SPEAKER PLACEMENT

Victrola Tempo speakers are designed to work seamlessly in any space and at any distance from each other. However, if you want to optimize their performance here are a few recommendations:

- *Place the speakers at least 6' apart from each other for the best stereo separation.*
- *Position the speakers an equal distance from the primary listening position.*
- *Keep the speakers at least 6" from the wall to allow proper bass port clearance.*
- *Align the tweeters at eye-level for the best listening experience. If needed, you can adjust the angle of the speakers using speaker platforms, stands, or wedges, such as the Victrola Angled Bookshelf Speaker Stands (VA-400W) (Sold Separately).*

## CHANNEL SWITCH

If you prefer placing the primary speaker on the left side you can change the channels of the speakers. Press and hold the multi-function knob for 5 seconds then release. A voice prompt will say 'Right' or 'Left' to indicate which channel is assigned to the primary speaker.

### NOTES:

- *During unboxing and after a factory reset the primary speaker defaults to being the right channel.*

## FACTORY RESET

Press and hold the multi-function knob for 10 seconds to factory reset the speakers and forget any paired devices. The LED will flash red 3 times quickly then the speakers will power off.

## FIRMWARE UPDATE

A software update may be available for your product.

To see if a new software is available visit **[victrola.com/firmware](https://victrola.com/firmware)**

# SPECIFICATIONS

|                             |                                                                   |
|-----------------------------|-------------------------------------------------------------------|
| DIMENSIONS (Each)           | 5.91" W x 7.76" D x 8.86" H<br>150mm W x 197mm D x 225mm H        |
| WEIGHT (Pair)               | 9.47 lbs / 4.30 kg                                                |
| POWER SUPPLY                | AC 100-240V~ 50/60 Hz                                             |
| POWER CONSUMPTION           | 40 W / <0.5W (Standby)                                            |
| OUTPUT POWER                | 80 W RMS (40w x 2)                                                |
| FREQUENCY RESPONSE          | 50 Hz - 20 kHz                                                    |
| IMPEDANCE                   | 6Ω                                                                |
| OPERATING TEMPERATURE RANGE | 0°C - 45°C                                                        |
| AUDIO INPUTS                | RCA, 3.5mm Aux, USB-C, Optical,<br>Bluetooth, Auracast (receiver) |
| AUDIO OUTPUTS               | Auracast (Broadcast),<br>Subwoofer Output                         |
| BLUETOOTH VERSION           | 5.4                                                               |
| BLUETOOTH PROFILE           | A2DP, AVRCP, HFP                                                  |

**INCLUDED:**

Tempo Speakers (Pair), Power Cord(s), Speaker Cable,  
RCA Cable, Aux Cable, Instruction Manual(s)

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by the Bluetooth SIG. Any use of such marks by Innovative Technology Electronics, LLC is under license. Other trademarks and trade names are those of their respective owners.

Made in China.

This product has been manufactured and sold under the responsibility of Innovative Technology Electronics, LLC. Victrola is a trademark used under license by Innovative Technology Electronics, LLC.

## SAFETY WARNINGS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near large bodies of water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as naked flames, lighted candles, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel, to reduce the risk of electric shock. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### CAUTION:

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN.



Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

# FCC & IC WARNINGS

## FCC STATEMENTS

Caution: the user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC & IC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

# WEEE AND CE STATEMENTS

## Declaration of Conformity

This device complies with the essential requirements and other relevant provisions of below:



1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from [www.victrola.com/eudoc](http://www.victrola.com/eudoc)

The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.



## Intended Use

This audio device is only intended for playing circuit boards. Any further use is considered improper. It is only suitable for use in dry interiors. The device is not intended for commercial use, but exclusively for use in private households. Any other use or modification of the device is not intended and is strictly prohibited. No liability can be assumed for damage caused by improper use or incorrect operation.

This device can be used by children from the age of 8 and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years and supervised. Also keep the packaging film away from children. There is a risk of suffocation.

Children younger than 8 years are to be kept away from the device and the connection cable.

# LIMITED WARRANTY

**Victrola is a registered trademark of Innovative Technology Electronics, LLC.**

## **United States**

For detailed information about our warranty policy and limitations visit

**[victrola.com/pages/warranty](http://victrola.com/pages/warranty)**

## **Canada and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

If assistance from the dealer from which it was purchased is not possible, you may contact our customer service for warranty assistance at [victrola.com/contact](http://victrola.com/contact).

## **Outside the U.S., Canada, and US Territories**

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

# CUSTOMER SUPPORT

**[VICTROLA.COM/PAGES/CUSTOMER-CARE](http://VICTROLA.COM/PAGES/CUSTOMER-CARE)**

[support@victrola.com](mailto:support@victrola.com)

(877)483-2497

### **EU Importer:**

Innovative Technology Electronics, LLC  
Ionweg 3, 4706 RB Roosendaal, NL  
NL827772956

Italy

NITAL S.p.A

Via vittime di piazza fontana 54  
10024 Moncalieri (Torino), Italy

### **EU authorized representative:**

REP Europe GmbH  
Prinzenallee 7, 4th floor 40549  
Düsseldorf, Nordrhein-Westfalen, Germany

[www.victrola.com/importer](http://www.victrola.com/importer)