

INSTRUCTION MANUAL

MODEL: VTA-754B.2

**WOODEN MUSIC CENTER
WITH BLUETOOTH**



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled
15. or objects have fallen into the apparatus has been exposed to rain or moisture, does not
16. operate normally, or has been dropped.
17. -
18. -
19. -
20. -
21. -
22. -



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



AVERTISSEMENT:

RISQUE DE CHOC ÉLECTRIQUE – NE PAS OUVRIR.

-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the

presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

-Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

-The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

23. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

24. WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.

25. The use of the equipment in moderate climate.

26. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.

27. No naked flame sources, such as lighted candles, should be placed on the apparatus.

28. The symbol with \sim indicates AC voltage.

29. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.


30.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

31. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

32. Attention should be drawn to the environmental aspects of battery disposal.


Product Overview

Front View

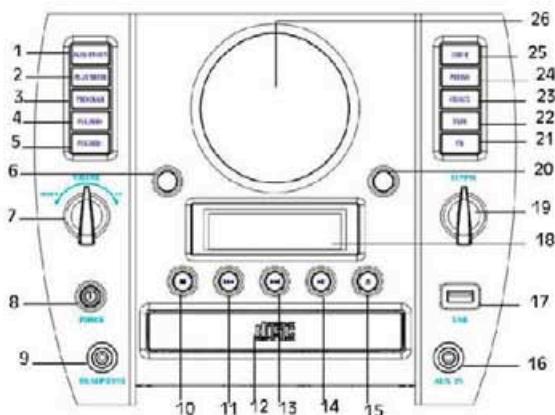

1. **PAIR/BT OUT:** In Bluetooth receive mode, press shortly to disconnect or reconnect . In Bluetooth transmitter mode, long press to disconnect or reconnect.
2. **PLAY MODE:** press to select play mode: repeat or shuffle playback.
3. **PROGRAM:** In CD or USB mode, while the CD or USB is stopped, press to program tracks.
- 4&5.**FOLDER + & FOLDER- :** In USB mode, press to choose your desired folder.
6. **REMOTE SENSOR**
7. **VOLUME KNOB:** Turn to adjust volume. (*Note: volume ranges from 00 to 30.*)
8. **POWER:** Push to turn the unit on or off.
9. **3.5mm HEADPHONE JACK:** Accepts headphone/earphone plugs
10. **STOP**: Press to stop playback
- 11&13. **PREVIOUS / NEXT TRACK & REWIND / FF (◀◀/▶▶)** : In CD or USB Mode, press once to skip to the previous / next track. Press and hold to fast rewind / forward.
12. **DISC TRAY**
14. **PLAY/PAUSE**▶▶: Press to start playback. During playback, press again to pause
15. **OPEN/CLOSE**▲: In CD mode, use to open and close the disc tray
16. **AUX-IN JACK:** Connect an external source to the AUX IN socket
17. **USB JACK**
18. **DISPLAY**
19. **TUNING:** In FM mode, turn to tune in station.
20. **TUNED/ST INDICATOR:** In FM Mode, the 'TUNED/ST' indicator lights up red when tuning in a stereo reception station.
21. **FM:** Press to enter to FM mode.
22. **TAPE:** Press to enter to cassette tape mode.
23. **CD/AUX:** Press to switch to CD or AUX mode.
24. **PHONO:** Press to enter to Phono mode.
25. **USB/BT:** Press to switch to Bluetooth or USB mode.
26. **FM SCAL**


Left side View

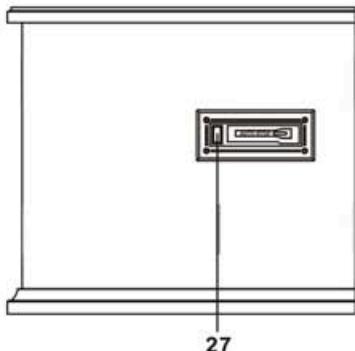

27

27. CASSETTE FF & EJECT Press halfway to fast forward, press all the way to end and eject the tape.

Rear View

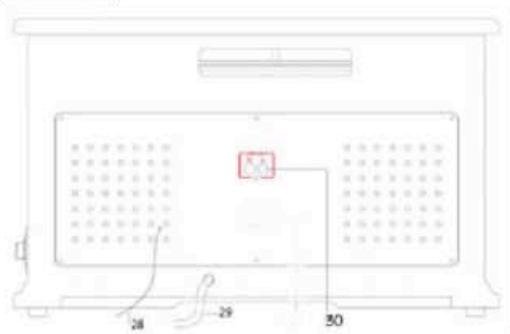

28

29

30

28. FM wire antenna

While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.


29. AC Power Cord

Plugs into a wall outlet.

30. LINE OUT jacks

For amplifier device with RCA auxiliary input sockets, insert the white and red plugs on the RCA cable into the unit. Insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack.

Parts of the Turntable

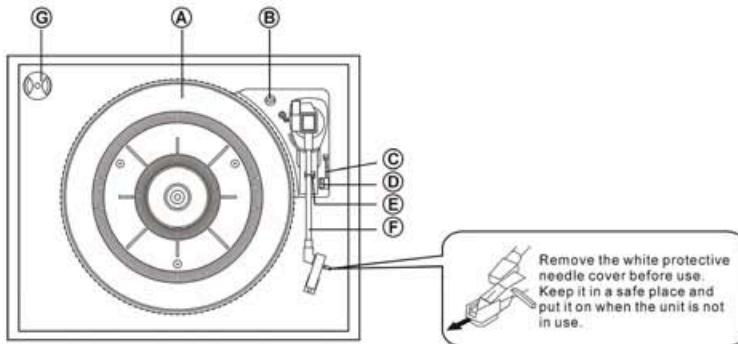

A. Turntable.

B. Safety Screw (for transport) Before using the unit, turn the screw clockwise using a coin or screwdriver.



Important: When you transport the unit, turn the screw counterclockwise to secure the turntable.
The silver screw on the back of the turntable is a balancer for both the turntable as well as for the tone arm.

Please turn this screw with a coin to either left or right and test by moving your tone arm to the middle of the spindle. Please note that this screw is a balancer and will have to be adjusted until the tone arm moves freely to the end of the record (middle of the spindle) without any resistance before using the turntable phonograph.

C. Cue-lever. Use this lever to lift the tone arm.

D. Speed Selector.

E. Tone Arm holder.



F. Tone Arm. Before use, completely loosen the fixed rope on the tone arm and lift the tone arm up.

G. 45 RPM adaptor.

Setup / Basic Operation

Setup

1. Remove white protective needle cover by gently pulling towards front of unit.
2. Remove any packaging materials from the unit.
3. Connect the AC power cord to a wall outlet.

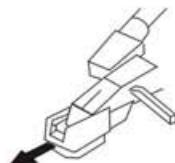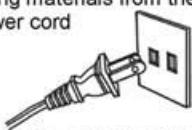


Note: To prevent interference, avoid bundling audio signal cables together with the AC power cord.

Basic Operation

1. Push the POWER button to turn the unit on.
2. Select the source by pressing the corresponding button (USB/BT / PHONO / CD/AUX / TAPE / FM) .
3. Rotate the VOLUME knob to adjust to the desired sound level.

Listening through Earphones/Headphones (not included)

For private listening, first reduce the volume level to minimum. Insert your headphones' plug into the 3.5mm jack, then adjust the volume up by turning the VOLUME knob.

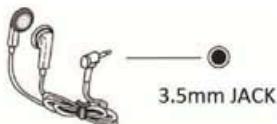

Note: The speakers will automatically be deactivated while headphones are plugged in.

Listening through RCA LINE OUT

For amplifier device listening, first reduce the volume level to minimum. Insert the white and red plugs on the RCA cable into the back of the unit, then insert the opposite end into your amplifier device. Be sure to connect the white plug into the white jack and the red plug into the red jack.

CONDENSATION WARNING:

When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it to stabilize at the temperature of its surroundings.

Remote Control


When using the remote control, point it towards the remote sensor on the front panel of the unit.

Notes:

- Even if the remote control is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other devices which generate infrared rays, it may not function properly. Conversely, the other devices may not function incorrectly.

Battery Installation

1. Remove the battery compartment cover.
2. Insert 2x "AAA" batteries.
Note: Make sure that they are oriented so their polarity markings, "+" and "-", match the remote's markings.
3. Replace the battery compartment cover.

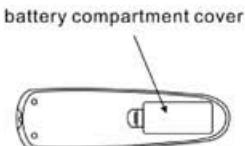

Battery Replacement

When the operating distance between the remote control unit and main unit decreases, it is necessary to replace the battery with new ones.

Battery Precautions

Be sure to insert the batteries with correct positive "+" and negative "-" orientation.

ALWAYS use batteries of the same type. Never mix different types of batteries together.

When using rechargeable batteries, refer to the precautions on their labels.

When the remote control unit is not to be used for a long time (more than a month), remove the batteries to prevent them from leaking.

Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire.

Remote Control Button Functions

1. "OPEN/CLOSE" Press to open/close the disc tray.

(Note: This button will only work in CD mode)

2. "PHONO" Press to enter to PHONO mode.

3. "FM" Press to enter to FM mode.

4. "Bluetooth" Press to enter to Bluetooth mode.

5. "TAPE" Press to enter to cassette tape mode.

- 6&15. "FOLFER+ / FOLDER-"

In USB mode, press to choose your desired folder.

7. "PROGRAM"

In CD or USB mode, while CD or USB is stopped, press to program tracks.

8. "REPEAT" In CD or USB mode, press to select a repeat mode

9. "STOP" Press to stop playback.

- 10&20. "VOL+" / "VOL-" Press to adjust the volume.

- 11&18. "Previous / Next Track & Fast Rewind / Forward (◀◀ / ▶▶)"

In CD or USB Mode, press once to skip to the previous / next track.

Press and hold to fast rewind / forward.

12. "CD" Press to enter to CD mode.

13. "AUX" Press to enter to AUX mode.

14. "USB" Press to enter to USB mode.

16. "SHUFFLE" In CD or USB mode, press for shuffle playback.


17. "PAIR" In Bluetooth mode, press shortly to disconnect current device

Press again to reconnect the device that has been connected

19. "▶BT OUT"


In CD, USB, BT IN mode, Press to start playback, press again to pause.

In Bluetooth OUT status, long press to close or open Bluetooth transmitter.

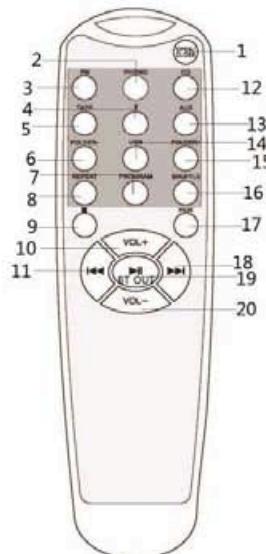

Listening to a Vinyl Record

1. Press the "PHONO" button, "PHONO" will appear on the display.
2. Gently open the top cover.
Note: Be careful not to pinch your finger when opening/closing the top cover.
3. Place a vinyl record on the turntable. When playing a 45 RPM record, use the included adaptor.

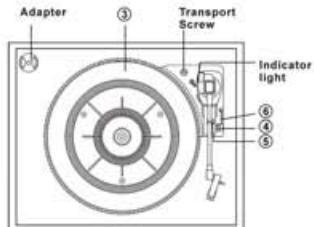


4. Select the appropriate speed (4).

5. Gently push tone arm clip (5) to the right to release the tone arm.



6. Raise the cue lever (6) to lift the tone arm off the tone arm support.

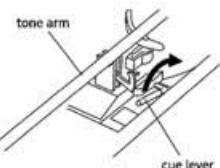

7. Move the tone arm gently to the edge of the record (or the starting point of a track). The turntable will begin to turn.
8. Gently lower the tone arm by slowly releasing the cue lever.
9. When playback is finished, the tone arm will automatically return to its holder and the indicator light will light up. The turntable will stop. To stop playback manually, slightly lift the tone arm using the cue lever and return it to the tone arm holder.

Note: It will take approximately 20 seconds for tone arm to return to its holder when playing a 78 rpm record.

Important:

- Closing the top cover will help prevent dust from settling on the turntable.
- Always relock the tone arm clip before transporting the unit.
- Do not place anything on top of the turntable cover, especially while playing a record.

Listening to a CD

1. Press the CD/AUX button to switch to CD mode.

Note: When no disc is set, "NO DISC" will appear on the display.

2. Press the OPEN/CLOSE (▲) button.

Note: This button will only work in CD mode.

3. Place a disc on the tray with the printed label face up.

4. Press the OPEN/CLOSE button (▲) to close the tray.

Note: "READ" will blink for a few seconds.

5. The number of tracks will show on the display. And then it will begin playback from the first track automatically.

6. To temporarily pause playback, press the PLAY/PAUSE button (▶II). Press again to resume.

7. To skip tracks backward or forward, press the corresponding skip button (I◀◀ or ▶I). Pressing I◀◀ once will restart the current track.

Pressing I◀◀ twice in succession will return to the beginning of the previous track.

8. To fast rewind / forward within a track, press and hold down the corresponding skip button (I◀◀ or ▶I) until the desired position is reached.

9. To stop playback, press the STOP ■ button.



Important:

- Never place more than one disc on the tray.
- The disc must be placed in the center of the disc tray. An incorrectly loaded disc can permanently damage the tray door mechanism.
- Do not push the CD tray – always use the OPEN/CLOSE button.
- It takes a moment for the unit to load a disc, during which all buttons will be temporarily deactivated.

Select Playback

Each time the PLAY MODE button is pressed, the play mode will cycle through the following options:

REPEAT 1 (Repeat one track)

The current track will be played repeatedly. If you press the (◀◀ or ▶▶) button to select another track, the track you select will be played repeatedly.

REPEAT ALL (Repeat the entire CD)

The entire CD will be played repeatedly.

Shuffle Playback

To play the tracks on a CD in a random sequence, press the SHUFFLE button during playback, "SHUFFLE" will show on the top of the display. Press SHUFFLE again to cancel shuffle mode.

To cancel the play mode, press PLAY MODE button repeatedly till the "REPEAT " or "Shuffle" icon disappears from the display.

Notes:

- If one of the following buttons is pressed, the repeat mode will be cancelled:
OPEN/CLOSE, FM, PHONO, CD/AUX, 3/USB, TAPE.
- Repeat playback works with finalized discs only.

Notes:

- Pressing (▶▶) during shuffle playback will randomly select the next track.
- Shuffle playback does not work during programmed playback.
- Shuffle playback works with finalized discs only.

Programmed Playback

Up to 32 tracks can be programmed to play in the desired order.

Notes:

- Shuffle playback does not work during programmed playback.
- Programmed playback works with finalized discs only.

1. Press "CD" to enter CD mode, then load a CD.
2. While the CD is stopped, press the PROGRAM button.
3. "PROGRAM" indicator blinks, and "P-01" appears on the display.
4. Press (◀◀ or ▶▶) to select a track number.
5. Press the PROGRAM button again to set the current track.
6. "P-02" is displayed. Repeat steps 4 thru 5 to program the additional tracks.
7. When the selection of track numbers has been finished, press the PLAY button (▶II) to start program playback.
8. To cancel the program mode, press the STOP (■) button twice and then the "PROGRAM" will disappear from the display.

To check the programmed order

In the stop mode, press (◀◀ or ▶▶) repeatedly to show the track numbers that have been programmed.

Listening to the Radio

1. Press the "FM" button. "RAD" will show on the display.
2. Tune to the desired station, using the Radio Tuner Knob.

Listening to an External Audio Device (AUX Mode)

Press the CD/AUX button to switch to AUX mode. "AUX" will show on the display.

In AUX (auxiliary) mode, this unit can play audio from an external device (iPod, MP3 Player, Portable CD Player, etc.)

There is an AUX IN jack on the front of the unit. When connecting a device that has a headphone jack, use a 3.5mm cable on both ends to connect the external device with the apparatus.

1. Plug one end of the 3.5mm cable (not included) into the AUX IN jack.
2. Plug the other end of the cable into the headphone jack of the external device.

NOTE: All operations are only available on your external device.

Listening to an External Audio Device (BT Mode)

In BT (Bluetooth) mode, this unit can enjoy music from external devices which have a built - in Bluetooth feature.

GETTING CONNECTED USING BLUETOOTH

1. Press "USB/BT" button to switch to Bluetooth mode, and the display will flash "bLUE" and 
2. Set the Bluetooth function of your external device when the apparatus is on.
3. Set to search Bluetooth device on your external device.

NOTE: The effective distance between your external device and this apparatus is 10 meters.

4. Wait for a while then find the "Wooden Music Center" on the paired devices list on your external device and press "Wooden Music Center".

If sometimes A window will ask you a password. Fill in "0000" then press "OK" on your external device.

5. A few seconds later your Bluetooth connection is success. The "bLUE" and  will stop flashing.

NOTE:

- The PAIR Button will allow you to disconnect from your external while remaining in BT mode. Simply press the PAIR button to disconnect. Press it again to reconnect the device that has been connected before.

ENJOY MUSIC FROM AN EXTERNAL DEVICE

1. Get your external device paired. (See "Getting connected")

2. Turn on the music player program on your external device and set it play.

Normally, you can control music playback with the PLAY/PAUSE,  and  button on the apparatus. However, some buttons may not work due to the variable music player program. Now enjoy the fun.

Bluetooth transmitter

In FM, PHONO, CD, AUX, TAPE mode, you can use Bluetooth transmitting function to play music from the device on an external Bluetooth speaker.

1. In FM, PHONO, CD, AUX, TAPE mode, Bluetooth will emit automatically. Bluetooth icon will flashing on display.
2. If you want use an external Bluetooth speaker to connect to the device, just turn ON the Bluetooth

function on your external Bluetooth speaker and let it in pairing mode.

NOTE: The effective distance between your external device and this apparatus is 10 meters (33ft).


3. When the pairing is successful, the device will be silent. *Bluetooth icon* remain lit.

4. If you want to disconnect the current connection the external Bluetooth speaker, long press the *PAIR/BT OUT button*.

NOTE: If you don't want to use Bluetooth transmitter function, long press the *PAIR/BT OUT button* can turn off the Bluetooth transmitter.

Listening to a Cassette Tape

1. Load an audio cassette tape into the unit (located on the left side of the unit). Playback will automatically begin.
2. Press button halfway to Fast Forward the tape.
Press button lightly and playback will resume.
3. Press button completely down to end playback and eject tape.

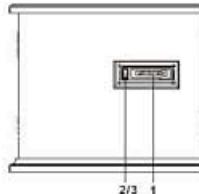

USB Memory Stick Playback

1. Press **USB/BT** button to switch to **USB** function. "USB" will appear on the display.
Note: When no USB is inserted, "NO" will appear on the display.
2. Insert the USB memory stick (not included) into the **USB** port and then it will begin playback automatically from the first track.
3. To pause playback, press the **PLAY/PAUSE** button (▶II). Press again to resume.
4. To skip tracks backward or forward, press the corresponding skip button (I◀◀ or ▶▶I).
5. To fast rewind / forward within a track, press and hold down the corresponding skip button(I◀◀ or ▶▶I) until the desired position is reached.
6. Press the button **FOLDER+** or **FOLDER-** to select your desired folder.
7. To stop playback, press the **STOP**(■) button.

Select Playback

Each time the **PLAY MODE** button is pressed, the play mode will cycle through the following options:

REPEAT 1 (Repeat one track)

The current track will be played repeatedly. If you press the (I◀◀ or ▶▶I) button to select another track, the track you select will be played repeatedly.

REPEAT ALL (Repeat the entire CD)

The entire CD will be played repeatedly.

Shuffle Playback

To play the tracks on a CD in a random sequence, press the **SHUFFLE** button during playback, "SHUFFLE" will show on the top of the display. Press **SHUFFLE** again to cancel shuffle mode.

To cancel the play mode, press **PLAY MODE** button repeatedly till the "REPEAT" or "Shuffle" icon disappears from the display.

Notes:

- If one of the following buttons is pressed, the repeat mode will be cancelled:

OPEN/CLOSE, FM, PHONO, CD/AUX, 2/USB, TAPE.

- Repeat playback works with finalized discs only.

Notes:

- Pressing (▶▶I) during shuffle playback will randomly select the next track.

- Shuffle playback does not work during programmed playback.
- Shuffle playback works with finalized discs only.

Programmed Playback

You can program up to 98 tracks for the USB.

Notes:

- Shuffle playback does not work during programmed playback.

1. Rotate to select USB function, then insert a USB memory stick into USB port.
2. While the USB is stopped, press the PROGRAM button.
3. "PROGRAM" icon will show and "P01" blinks on the display.
4. Press (◀◀ or ▶▶) to select a track number.
5. Press the PROGRAM button again to set the next program track, "P02" appears and blinks. Repeat steps 4 through 5 to program the additional tracks.
6. When the selection of track numbers has been finished, press the PLAY/PAUSE button (▶II) to start program playback.
(Note: when all 98 program tracks are finalized, press the PROGRAM button once and "FI" will appear on the display)
7. Press the STOP (■) button to cancel the program mode and then the "PROGRAM" will disappear from the display.

To check the programmed order

In the stop mode, press (◀◀ or ▶▶) repeatedly to show the track numbers that have been programmed.

Maintenance / Proper Handling

Compact Disc Handling

- Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recorded only on one side)
- To remove a disc from its storage case, press down on the center of the case and lift the disc upward, holding it carefully by its edges.
- To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
- Never use such chemicals as record spray, antistatic sprays or fluid, benzine or thinner to clean discs; they will irreparably damage the disc's plastic surface.
- Discs should be returned to their cases after use to protect from dust and scratches.
- Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods of time.
- Printable CD-R and CD-RW discs are not recommended, as the label side may become sticky and damage the unit.
- Use a soft oil-based felt-tipped pen to write information on the label side. Never use a ball-point or hard-tipped pen, as doing so may damage the recorded side.
- Do not use irregularly-shaped CDs (octagonal, heart shaped, business card size, etc.), as they will damage the unit.
- Read all precautions supplied with any CD-R or CD-RW disc
- Never handle a disc with dirty fingers.
- Never insert a disc that has a crack on the surface.

Handling Vinyl Records

- Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.
- To clean a record, use a soft anti-static cloth to gently wipe the record surface.
- Keep records in their protective sleeves when not in use.
- Always store records upright on their edges.
- Avoid placing records in direct sunlight, close to a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold or moisture.

General Care

- When removing the power plug from the wall outlet, always pull directly on the plug. Never pull the cord.

- To keep the laser pickup clean, do not touch it, and do not forget to close the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish.
- For cleaning, only use a clean, dry cloth.
- In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time.

How to Replace the Turntable Stylus

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The highest speed of 78 RPM records would wear out the stylus more quickly.

Removing the old stylus:

1. Set a screwdriver at the tip of the stylus and push downward (A).
2. Remove the stylus by pulling it simultaneously downward and forward.

Installing a new stylus:

1. Hold the front tip of the stylus and insert its rear edge (B) first.
2. Push the stylus upwards (C) until the tip locks into place.

Caution:

- Do not bend the stylus.
- Do not touch the needle to avoid injury your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.



Guide Pins (inside)

Specifications

GENERAL

Power Requirements AC 100-240 V~50/ 60 Hz
Power Consumption 19W

FM Radio

Range 88 to 108 MHz

BLUETOOTH

Bluetooth Version Bluetooth V5.0
Bluetooth Profiles HFP, A2DP, AVRCP
Bluetooth Frequency range 2.4GHz-2.480GHz
Operating Distance 10 meters

Troubleshooting Guide

	Symptom	Possible Cause	Solution
GENERAL	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug

			the power cord after one minute.
TAPE	<ul style="list-style-type: none"> The tape does not play. 	<ul style="list-style-type: none"> The cassette tape is not inserted properly. The tape has reached the end. 	<ul style="list-style-type: none"> Insert the cassette tape correctly. Flip the cassette.
FM RADIO	<ul style="list-style-type: none"> Cannot listen to any station, or signal appears weak. 	<ul style="list-style-type: none"> The station is not tuned-in properly. A TV set is being used nearby and is interfering with the radio reception. 	<ul style="list-style-type: none"> Properly tune-in the desired station. Turn-off the interfering TV set.
	<ul style="list-style-type: none"> The sound is distorted. 	<ul style="list-style-type: none"> The antenna is not oriented properly. 	<ul style="list-style-type: none"> Re-orient the antenna until reception improves.
CD PLAYER	<ul style="list-style-type: none"> CD stops immediately after starting, or unit pauses or stops during play. 	<ul style="list-style-type: none"> The CD is inserted upside down. The CD is dusty or dirty or there is condensation on the CD. 	<ul style="list-style-type: none"> Insert the CD with the printed side right-side up. Carefully clean and dry the CD.
	<ul style="list-style-type: none"> No sound. 	<ul style="list-style-type: none"> The CD player is paused. 	<ul style="list-style-type: none"> Press the PLAY/PAUSE button.
	<ul style="list-style-type: none"> CD playback is noisy, or playback stops or skips. 	<ul style="list-style-type: none"> The CD is scratched, damaged or warped. The disc is very dirty. 	<ul style="list-style-type: none"> Replace CD with an undamaged one. Carefully clean the CD.
	<ul style="list-style-type: none"> CD tray will not open. 	<ul style="list-style-type: none"> USB/BT/PHONO/AUX/FM/TAP E mode is selected. 	<ul style="list-style-type: none"> Select CD mode.
	<ul style="list-style-type: none"> Buttons are not functioning correctly. 	<ul style="list-style-type: none"> The unit is processing information ("--- Busy" is displayed) The unit needs to be restarted 	<ul style="list-style-type: none"> Wait until the unit finishes processing. Turn the unit off, then on again.
PHONO	<ul style="list-style-type: none"> Decline in turntable audio performance 	<ul style="list-style-type: none"> The turntable stylus is worn out 	<ul style="list-style-type: none"> Replace the stylus.
USB	<ul style="list-style-type: none"> The USB drive does not play 	<ul style="list-style-type: none"> The USB drive is not inserted properly. The USB drive has no MP3 file 	<ul style="list-style-type: none"> Insert the USB drive correctly.
AUX	<ul style="list-style-type: none"> No sound output with external audio device plugged into rear AUX in jack. 	<ul style="list-style-type: none"> Both AUX in jacks (front and rear) are plugged. 	<ul style="list-style-type: none"> Unplug the front AUX in Jack.
Bluetooth	<ul style="list-style-type: none"> No sound 	<ul style="list-style-type: none"> The unit is not switch to Bluetooth mode Your device's and/or the unit's volume not turn up. Your device is too far from the unit or there're some obstacle between your device and the unit 	<ul style="list-style-type: none"> Ensure the unit is switched to Aux/ BT mode. Move your Bluetooth device closer to unit Turn up the volume on your portable device and/or the unit. Turn off your Bluetooth device and unit then power them both back on

	<ul style="list-style-type: none"> • Sound is garbled 	<ul style="list-style-type: none"> • Your device's and/or the unit's volume not adjust properly. 	<ul style="list-style-type: none"> • Turn down the volume on your device/phone and the unit
	<ul style="list-style-type: none"> • Unable to pair with a Bluetooth device 	<ul style="list-style-type: none"> • Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful 	<ul style="list-style-type: none"> • Confirm that your device is Bluetooth compatible. • Repair the unit and device again.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.