



105 mm

USER MANUAL

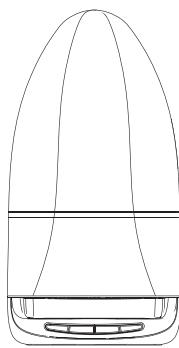

Control Buttons (Front of Speaker)

 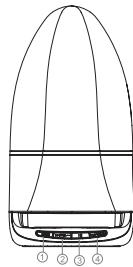


1. MODE
Press to switch between modes (Bluetooth/AUX/Micro SD)
2. **◀ / VOL-**
Bluetooth/Micro SD mode: Press once to skip to the previous song.
Press and hold to decrease the volume.
3. **▶ / VOL+**
Bluetooth/Micro SD mode: Press to Play and Pause music.
AUX mode: Press to mute/unmute the sound.
4. **▶▶ / VOL+**
Bluetooth/Micro SD mode: Press once to skip to the next song.
Press and hold to increase the volume.
- AUX mode: Press once (no function).
Press and hold to decrease the volume.

5. **指示灯 (i6)**
i6 is in Bluetooth model while turned on with an indicator sound.
Turn on your mobile phone Bluetooth function, search the device name "AS-31" and connect it. You can play your phone's music after successfully connected with another indicator sound.

148 mm

Socket Description (rear of speaker)



1. Micro SD card socket
2. AUX cable socket 3.5mm
3. USB charging socket
4. Power Switch: OFF / ON (with lights) / ON (audio only)

Features

- Dual magnet and high efficiency speaker driver unit for high quality sound
- Compatible with Smart phones, Laptops, PC, MP3, MP4
- Bluetooth wireless connection
- Micro SD card and AUX 3.5mm inputs
- Volume and track controls
- Built in rechargeable battery with 4 hour play time

Specification

- Output Power: 5W
- Power Supply: USB 5V/1A
- Rechargeable internal battery: 1200mAh
- Driver Unit: 2" 4Q
- Frequency response: 120Hz-20kHz
- S/N Ration: ≥ 80dB
- Power Input: 600±100mv
- Dimensions: W100mm x D100mm x H185mm

FCC NOTE :

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Operation Instruction

1. To switch on, locate the ON/OFF switch on the rear of the speaker. The speaker can operate with or without the water dancing lights indicated by the switch position.
2. The speaker will always start in Bluetooth mode by default and you will hear an indication sound.
3. To connect via Bluetooth, activate Bluetooth on your device (e.g. mobile phone) and search for nearby devices.
4. Select "Helium Aqua" and connect. If you have connected successfully, you will hear an indication sound and it is ready to play your music.
5. Press the mode button to change between AUX/Micro SD modes.

Micro SD mode:

Insert a Micro SD card and the music will start to play automatically (While using the speaker in this mode, the LED indicator will flash).

AUX mode:

Connect the 3.5mm cable supplied to the headphone output of your device (e.g. PC, laptop, smart phone) while the speaker is in AUX mode use your device to change the music track.

6. To re-charge the speaker connects it to a PC/Laptop or quality branded USB socket using the USB cable included. A red LED will indicate charging is in progress, and the LED will go out once fully charged.