

Mini PC

Quick Start Guide



English ~ Deutsch ~ Français ~ Italiano ~ Español

English

Dear customer,


Thank you for purchasing this product, you can enjoy parts and labor warranty service providing by our company for two years.

Please note that warranty will not apply to the following:

- Improper use and operation of product
- Manmade damage, computer viruses, moisture, improper installation or disassembly of hard- or software and so on.
- Fires, floods, storms, earthquakes and other force majeure.
- Accessories, supplies, natural wear and tear caused by use.
- Reinstallation of software or adjustment of computer settings
- Damage of warranty seal.

Please always make sure to back up your files and data before sending the product in for repair.

Product Interface Description

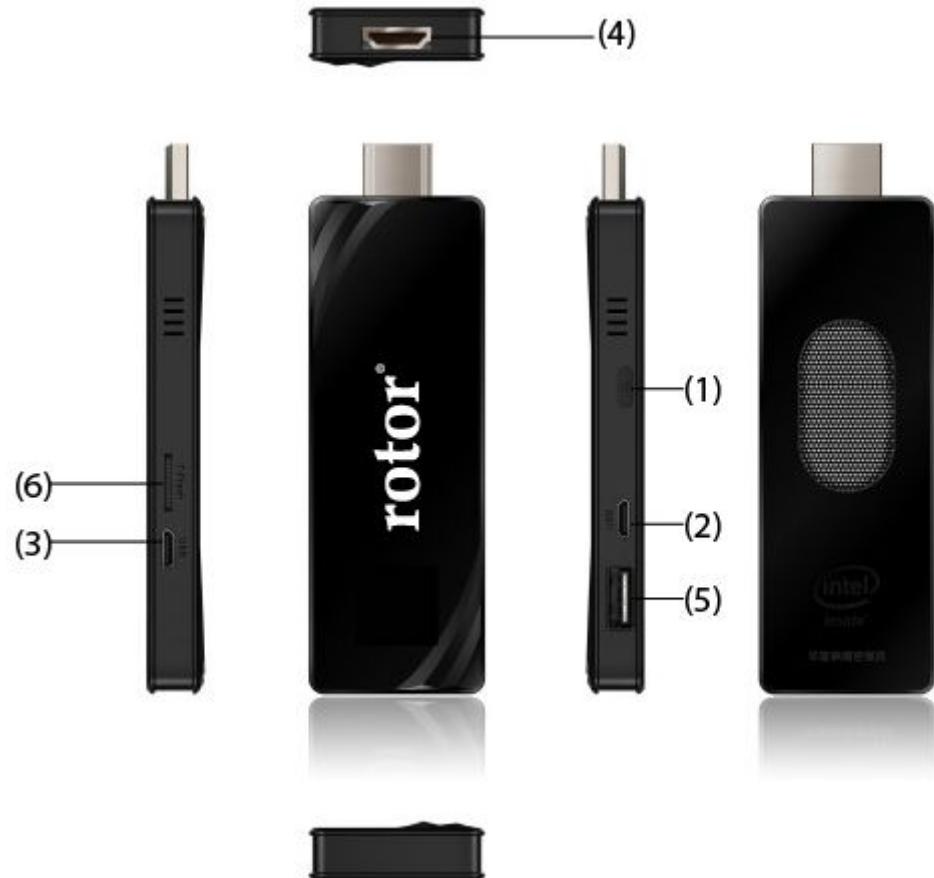

- (1) Power Botton
- (2) USB power supply
- (3) USB 2.0
- (4) HDMI (please connect to the display device)
- (5) Micro USB 2.0
- (6) Micro SD (storgae expansion interface)

Product Specifications

Processor	Intel® Baytrail-T™ Z3735F, QC
Operating system	Windows 8.1
Memory	2 GB DDR3
Storage capacity	32 GB
Expansion slots	Micro SD, max 64 GB
Display Interface	HDMI
Wireless devices	WiFi 802.11 b/g/n Bluetooth 4.0
USB interface	1x USB 2.0 1x Micro USB 2.0
Power input	Micro USB interface
Power supply	5 V/2 A


Instructions

1. Plug the device into the TV HDMI connection (if you cannot connect directly to the TV, use the accessories HDMI extension cable) and a display device (eg: TV, screen, projector) „Video Input Source”. Select to the connected HDMI input channel.
2. USB Power: Connect the power cord Micro USB accessories with this device and the other end directly into the plug.
3. Can be used with a Bluetooth keyboard and mouse, USB interface to connect wireless keyboard and mouse, or use with the OTG cable.
4. Press the power button to start the system.

1. Introduction to Desktop

1.1. Windows 8.1 start image

On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of "magnet". As long as you click them, you can easily visit them. You need to log on your Microsoft account before the application program completely runs.

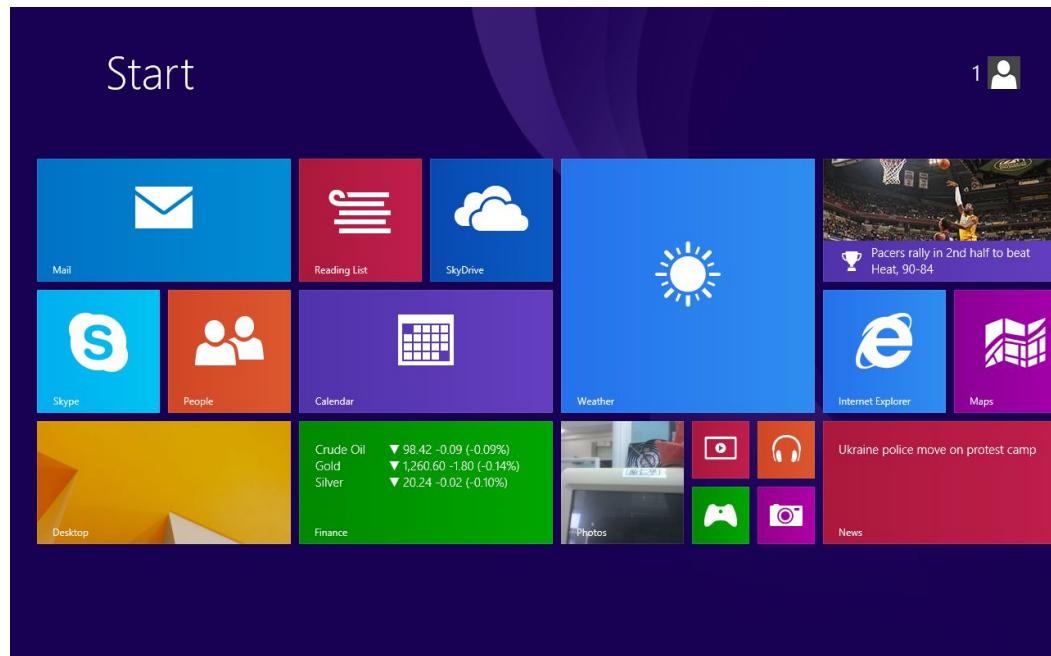

2. Image slide applications

Slide to right

Slide to left

Slide the left left to the side from the of the screen to start the application column. program in running.

Reduce



On the touch screen, fingers widen two fingers to reduce the image. On the touch screen, fingers widen two fingers to reduce the image.



right from Slide to the right side of screen to start Charm menu

Enlarge



On the touch screen, fingers widen two fingers to enlarge the image.

Slide downward



right and left to view all application programs

Slide with finger



slide
of
the
start
finger
to move the image.


Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.

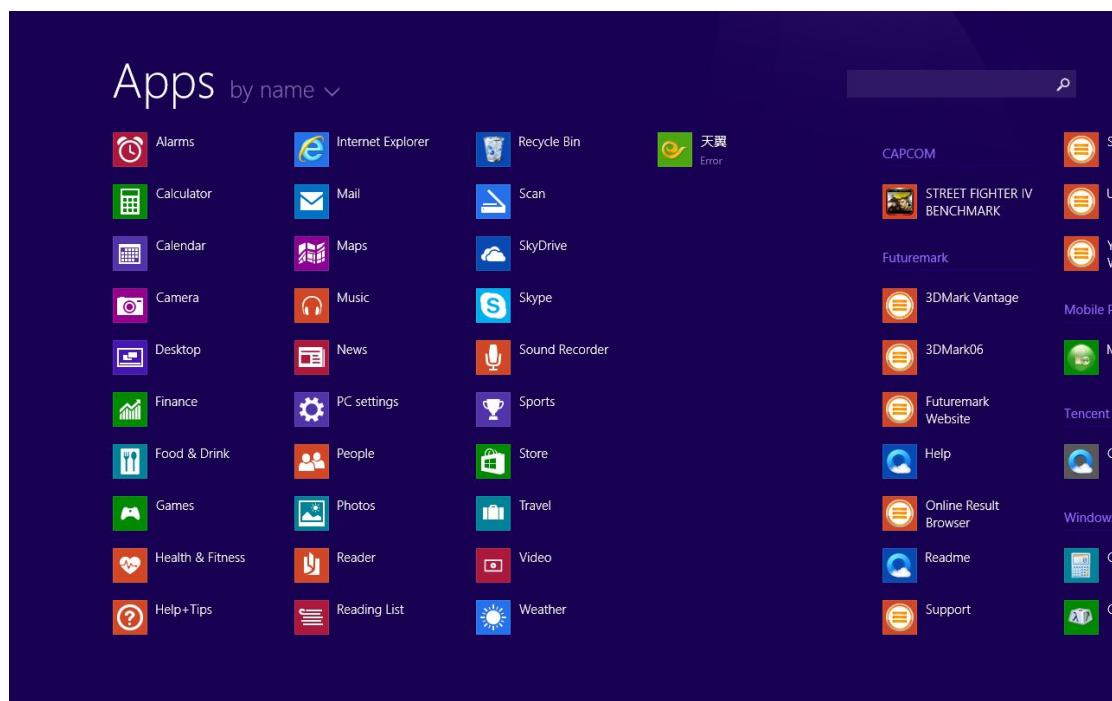

If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

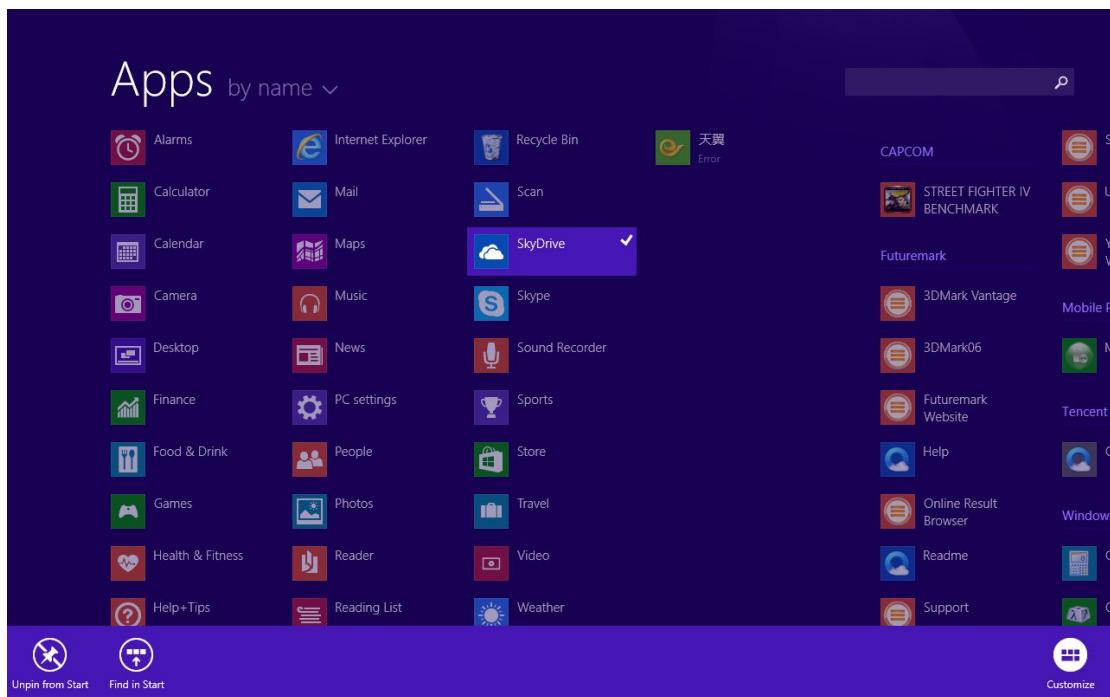


Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

4. Charm menu column

4.1.1. Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



 4.1.2. Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the Tablet PC.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.




Can let you read, write and share files, connect external screen or printer with the device connected to the Tablet PC.



Can let you set up the Table PC.

Search menu

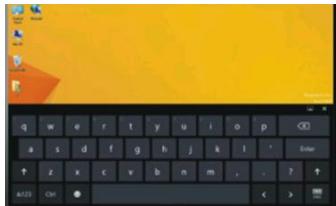

Share menu



Device Menu




Set up Menu




5. Basic Operations

5.1. Dormancy, restart and power off

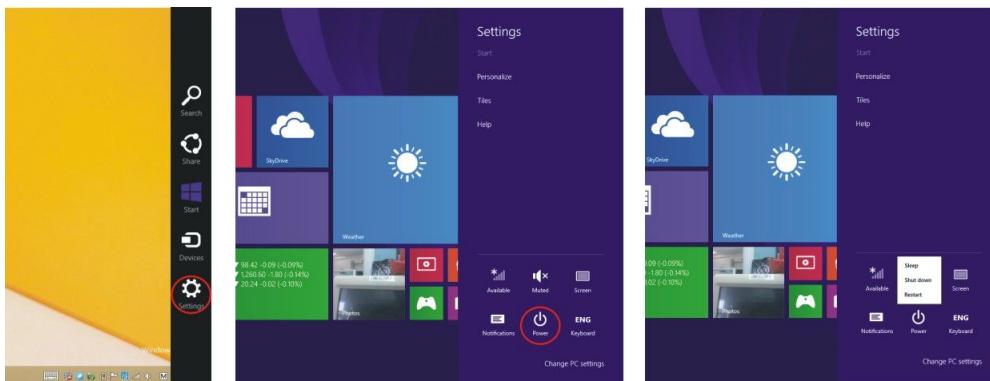

5.1.2. Security Management

User and password setup

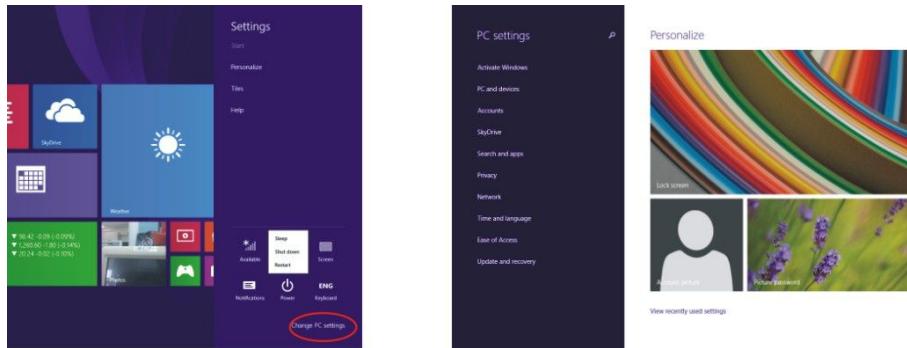

Method for quick setup:

Click the "Setup" button in "Charm" setup, and select "Change computer setup". Select "User" on the left and click "Create local account" in "Your account" on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates

uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:(1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be

used in portable exposure condition without restriction.