

# USER INSTRUCTIONS

Thank you for choosing our toy R/C car. To ensure correct and enjoyable use, please readnthrough the following user instruction for the product before use.

## ⚠ CAUTION:

### • BATTERY OPERATED PRODUCT


Suitable for ages 8+. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

#### How To Insert the Battery

1. Turn the switches located on both the car and the controller to the "OFF" position.
2. Open the battery cover using a star screwdriver.
3. Insert the batteries following the picture below.
4. Close the battery compartment.

#### How To Play

1. Turn the switches located on both the car and the controller to the "ON" position.
2. Then operate the car.
3. When your R/C model car begins to lose performance, power, or function, it may be time to charge the batteries!

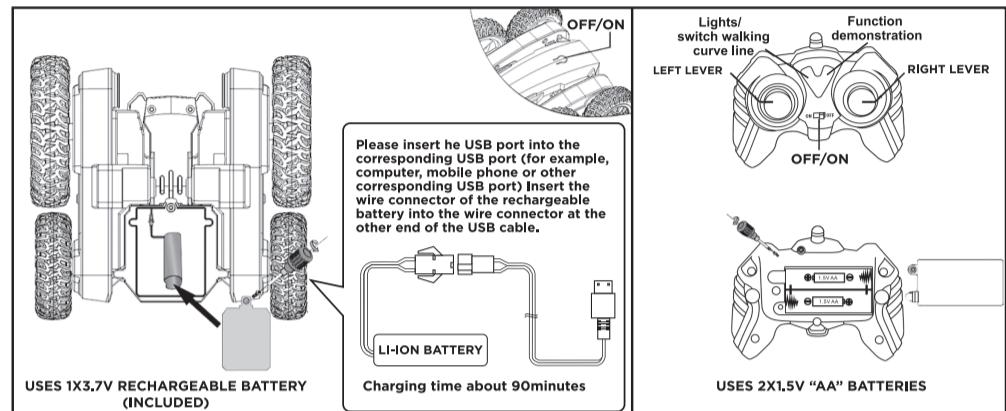

#### Charging The Battery

1. Please insert the USB charging cable into a computer or other corresponding USB port.
2. Insert the wire connector of the rechargeable battery into the wire connector at the other end of the USB cable.

The optimum charge is approximately 90 minutes.


USES 2X1.5V "AA" BATTERIES (not included)

1

size:19x14.8cm


#### Basic operation picture showing how to use this product

Picture 1

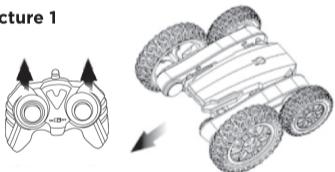


When the two rockers of remote control are pushed Upward, the car moves forward.

Picture 2

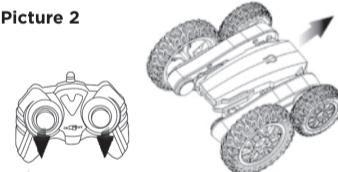


When the two rockers of the remote control are pulled down, the car moves backward.

Picture 3

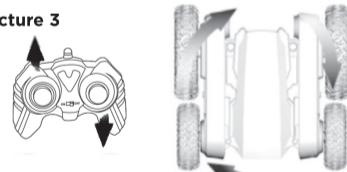


When the left rocker of the remote control is pushed upward and the right rocker is pulled down and the car stands up and spins around.

Picture 4

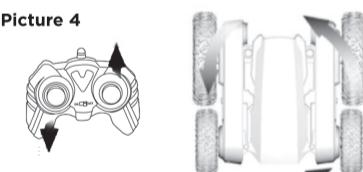


When the left rocker of the remote control is pulled down and the right rockers is pushed upward, the car stands up and spins around.

Picture 5

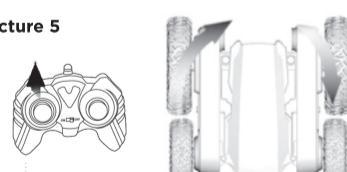

When the left rocker of the remote control is pushed upward, the left wheel moves and spins to the right.

Picture 6

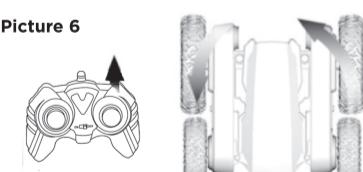

When the right rocker of the remote control is pushed upward, the right wheel moves and spins to the left.

Picture 7



When the left rocker of the remote control is pulled down, the left wheel moves and spins to the left.

Picture 8



When the right rocker of the remote control is pulled down, the right wheel moves and spins to the right.

#### Battery safety Information

1. Don't short-circuit terminals.
2. Don't recharge non-rechargeable batteries.
3. Rechargeable batteries may only be charged under the supervision of an adult.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Dispose of batteries safely. Don't dispose of batteries in a fire as they may explode.
6. The battery USB charging cable should be regularly examined for damage to the cord, enclosure, and other parts. In the event of damage, do not use it until it has been repaired.
7. Exhausted batteries are to be removed from the toy.
8. Keep these instructions for future reference as they contain important information.
9. Rechargeable batteries are to be removed from the toy before being charged.

#### Care and Maintenance

1. Always remove batteries from the toy when it is not being used for a long period of time.
2. Wipe the toy gently with a clean damp cloth.
3. Keep the toy away from direct sunlight and or direct heat.



When Inserting batteries, make sure you follow the designated + and - signs.



Don't short-circuit terminals.

#### Attention!

1. In the case of insufficient power, the flipping function will be lost during playing.
2. Please make sure the battery is fully charged before use.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3