

User manual of the controller

Model Name: **SK007-1**



Paring code: Within 10 seconds after the main control device, press the key  to the back of the remote control and release, if the code is successful, the corresponding indicator light flashes on the remote control.

Press HEADbutton: head massage until will start or stop

Press FOOT button : foot massage until will start or stop

Press TIMER/ALL OFF button: set the massage intervals with each press of the button(10,20,30min).

When the timing is over. ALL massage motors will automatically stop



Press  button : control the rise and headboard



Press  button : control the rise and footboard

Press FLAT button: under any position, the bed will return the flat position.

Press TV/PC button: under any position, the bed will return the TV/PC position.

Press ZERO G button: under any position, the bed will return the ZERO G position

Press LOUNGE button: under any position, the bed will return the LOUNGE position



Press  button: adjust the vibrating strength cyclic shift from I to VIII level



Press  button: the LED light will ON or OFF

Press Memory1 and Memory2: under any position, press the button 3 seconds, Current position will be memoried, any time, press the button, the bed will return the memory position

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help .

Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.