

TRUE WIRELESS

Bluetooth Speaker

Quick Start Manual

Model: MNS

Notice Before Using

Thank you for purchasing the Bluetooth speaker.

Please read this User's Manual completely before you use the speaker.

Xdust-X1 designed for listening the high quality music wirelessly that based on the latest Bluetooth wireless technology. Xdust-X1 can be easily connected to a mobile phone for call conversation and music listening. It is also capable to connect to the other Bluetooth enabled devices like Notebook, iPod etc.

Xdust-X1 is compliant with Bluetooth V4.1 specification, supports HSP, HFP, A2DP and AVRCP profiles. Please make sure your phone or other device supports these profiles.

Specification

Bluetooth specification: V4.1

Supported profile: HSP, HFP, A2DP, AVRCP

Operation range: Up to 10 meters

Talk time: 16 hours

Play time: 15 hours

Standby time: 350 hours

Charge time: 3 Hours

Package Contents List

Please inspect this package and refer to the package contents list below to verify all items were included in this package:


1. Xdust-X1 Bluetooth Speaker
2. USB Charging Cable
3. User's Manual

04

Bluetooth Speaker Overview

Xdust-X1 Bluetooth Speaker Overview

- 1 Pairing/Answer,Power/Play/End/Pause
- 2 Aux-in (3.5mm Line-in)
- 3 Micro USB
- 4 Indicator
- 5 Microphone

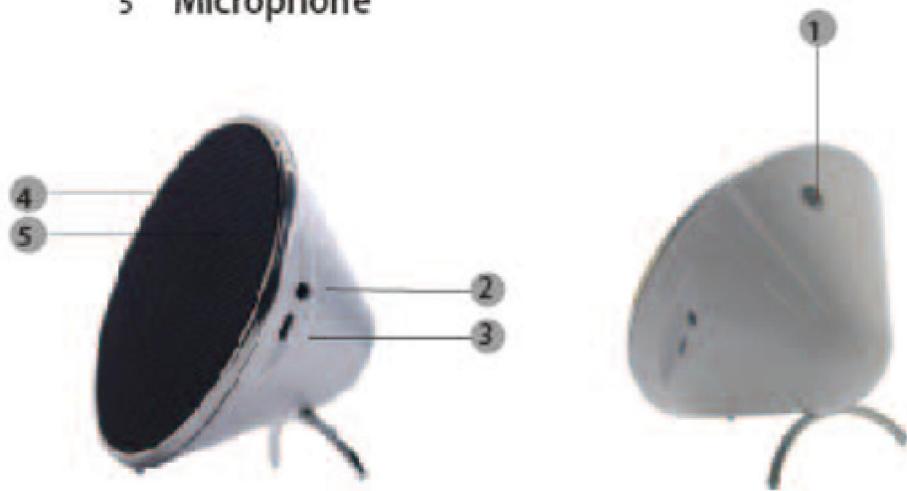

05

Charging the battery

Battery information

The device is equipped with an integrated lithium-polymer battery. The battery cannot be replaced. Do not attempt to remove the battery from the device since it would damage the device. The full performance of a new battery is not achieved until after two or three complete charging-discharging cycles. The battery can be charged and discharged several hundred times, but it loses its capacity over time.

Disconnect the Xdust-X1 from the power supply as soon as the battery is fully charged, overcharging would reduce the service life of the battery. A charged battery will lose its capacity if it is not used on a regular basis.

Important: Ensure that the battery is fully charged if you do not use the device for a long period of time. To avoid a complete discharge of the battery, the speakers should be charged at least every 3 months.

06

Charging the battery

Charging the battery

The speaker is operated with a rechargeable battery. Charge the battery completely before its first use. Read the section "Battery information"


before starting the charging process.

1. Connect USB cable to a general USB power supplier.
2. Connect the charger to the correct outlet.
3. When the charger is connected to the speaker, the red indicator light will turn on. Charging the battery fully may take up to 3 hours.

The USB port can charge the speaker only.

07

4. When the battery is fully charged, the blue indicator light will turn red. Disconnect the charger from the speaker and the outlet. The speaker is ready to use.

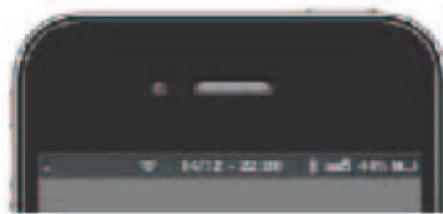

NOTE:

For first time use, please charge the speaker fully.

- The fully charged battery has power for up to 9 hours of talk-time and 8 hours music playing time, and up to 350 hours of standby time. However, the talk and standby times may vary when used with different mobile phones or other compatible Bluetooth devices, usage settings, usage styles, and environments. When the battery power is low, the speaker will remind you by sound 'battery low' every 20 seconds, and the red indicator light starts to flash.
- For using the speaker with iOS devices, an additional battery meter (■) will be activated and the remaining battery capacity will display on your devices.

Pair to your phone

Before you use your speaker the first time, you must pair the unit with a Bluetooth enabled mobile phone.

1. Keep the two speakers within 1 meter range of a Bluetooth-ready Mobile phone.
2. Press and hold the two speakers' Power/Play button for about 5s, the speakers will announce 'power on', then do not release the buttons. Keep pressing the buttons until they announces 'pairing' (release the buttons). The two devices are pairing each other. Then they will announce 'pairing successful'. One device will announce 'left channel', the other will announce 'right channel'. Then the speakers will announce 'pairing' again.
4. Find the Bluetooth setting of your Mobile phone and start the search for Bluetooth devices, select the 'Xdust-X1'. It will announce 'the second device connected'.
5. Once the pairing process was successful, the speakers will connect to Mobile phone automatically.

NOTE:

- If pairing is not completed within 10 minutes, the speaker will turn off. If this happens, please repeat the pairing steps.

09

Turning on/off

Turning speaker on /off

Turn on your speaker

Long press the Power/Play for 5s to turn on your speaker. If your speaker has completed the pairing process successfully, when the speaker is turned on, it will connect to the phone you last connected automatically. Please ensure your phone's Bluetooth function is active.

Turn off the speaker

Long press the power button for 3s to turn off the speakers. the Red Indicator will flash red.

Using for music play

Play/Pause

Press Power/Play button to get the music play or pause.

NOTE:

- To conserve power, if the headset is not connected to a device for approximately 10 minutes, the speaker will turn off automatically.

10

Using for phone call

Using for phone call

Answering a call

Press Answer shortly to answer the incoming call.

Ending a call

Press the Answer shortly to end a call.

Call-waiting

If there is an incoming call while a call is in progress, press Answer shortly to accept the waiting call and end current calling.

Safety and general information

1. Please read this User's Manual carefully and follow all Instructions.
2. To avoid any damage or malfunction of the device do not drop the device from high places.
3. Keep device away from humidity, water and any other liquid. If the device is exposed to water, moisture and other liquids do not operate it to avoid any electrical shock, explosion and damage to the device or yourself.
4. Do not place or keep this device near any heat sources, such as, direct sunlight, radiators, stoves or other apparatus that produce heat. This may cause an explosion, degrade the performance and/or reduce battery life.

5. Do not modify, repair or disassemble device (Especially the battery). Doing this will void the warranty.
6. Do not place heavy objects on the device.
7. Use only the supplied and approved chargers.
8. Unplug this device when unused for long periods of time or during lightening storms.
9. The battery used in this device may present a risk of fire or chemical burn if mistreated.

FCC & IC Statement

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for ANY interference, for example RADIO or TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Warranty

The condition of this warranty and supplier's responsibilities under this warranty are as follows:

Warranty is non-transferable and is limited to the original purchaser only.

- You must be able to prove the date of original purchase of the unit with a dated receipt.
- The warranty is not applicable if the product has been subject to physical abuse, improper installation,

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation