

Acme Power Bank

User Manual

—、Instructions Apply system: iOS7.0+ and Bluetooth 4.0

1. IOS Mobile phone users can scan QR code (Figure 1)Or download the latest software from the App Store (Figure 2) 036 Anti-lost (Figure 3)



Figure1



Figure2



Figure3

2. Short press the Multifunction button to check the battery capacity level, long press Multifunction button for 3-5 seconds, you will hear "beep" sound, while the Bluetooth status light will flash at the upper right corner, indicating the Bluetooth device is turned on and entering to the pairing mode. (FIG. 4)



Figure 4

3. Install "036Anti-lost" app on your phone, enter into device listing status, then search device, click on the "Connect", you will hear "beep" sound 3 times, the Bluetooth status light will begin flashing, indicating the device is paired with your phone successfully. (FIG. 5)

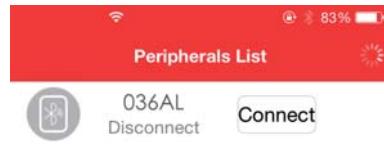


Figure5

4. Regarding the Anti-lost function, there are Near/medium/Far 3 kind of options, choose the most suitable distance according to your requirement. In the connected mode, go to search device App, you will hear warning beep for 10 seconds. In the connected mode, if you need to find your phone, long press multifunction button for 3 seconds, the device Bluetooth status lights will change from blinking to steady lighting, then release the button. If the phone is in covering range, it will answer with ten second warning sound, you can repeat this practice until you find the phone successfully. If Close anti-lost function, the phone and the device can not make warning sound anymore. Disconnect the device and phone, then device will be entering into standby mode, long press the multifunction button for six seconds till you hear "beep" 3 times to turned off the device completely (FIG. 6)

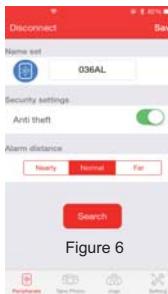


Figure 6



Figure 7

5. When the phone loses Bluetooth or APP connection, the device will give warning sound. When directly turn off the device, the phone will give warning sound. When the device or mobile goes out of the setting range, the device will give a long warning sound, meanwhile the mobile phone will also give warning sound. And the phone will appear prompt question box, click "enter" to answer whether to open DND mode, if you select "yes", APP will turn into DND mode automatically with "on" state, on this mode, mobile phones and devices will not make warning sound anymore. (Fig. 7)

6. Visit APP interface and choose camera function, select front/ rear camera and flash light according to your needs, press the multifunction button to take pictures, then pictures will be stored in the album automatically.

7. The power bank allows you to charge your mobile phone or any other digital device easily. Just connect one end of the enclosed USB cable to the output port(OUT) of the power bank and the other end to your device.

8. Connect one end of the enclosed USB cable to the input(IN)port of the power bank and the other end to the USB port or your computer or that of a 5V power adapter to charge the power bank.

9. The power indicator (consisting of 4 bars) will be on after you press the power button on the powerbank. The battery indicator light will illuminate, 4 bars indicates full power, while less than 1 bar means you need to charge the power bank.

10. When your mobile phone or power source is recharged to full, the power source will automatically launch the dormancy function and stop working to protect the mobile phone and power source.

二、Clause of warranty

The effective guarantee period lasts for one year after purchase. Within the warranty period, consumers may enjoy free repair service at the place of purchase with proof of purchase / buying record. If service is required but the warranty period has been exceeded, present product and proof purchase at your retailer for discounted repairs.

Exclusions of Limited Warranty

1. Products are not produced by my company.
2. Products are not distributed or resold by my company.
3. Damage caused by natural disaster or accident such as earthquake, fire etc...
4. Damage caused by human error such as unauthorized disassembly, modifications, incorrect setting, storage or use, improper voltage and current input etc...
5. Device and parts exceeding warranty period.

三、Safety Instructions

1. Avoid strenuous vibration, shock, exposure to sunlight or rain.
2. The product should be stored between -5°C ~ 35°C, with relative humidity below 75%, in a clean, dry, and ventilated area. Keep away from corrosive materials and fire.
3. The product cannot be discarded in household garbage. Please dispose of the product in a suitable location, specialized for equipment and battery recycling.

My company holds no liability for claims of bodily injury or damage to property resulting from consumer's lack of regard for the above warnings.

Note:

Please recharge your power bank regularly (at least once every six months) to maximize service life.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.