



FOREST
DRAPERY HARDWARE

Forest EasyTouch Quick start guide

(520108X006)

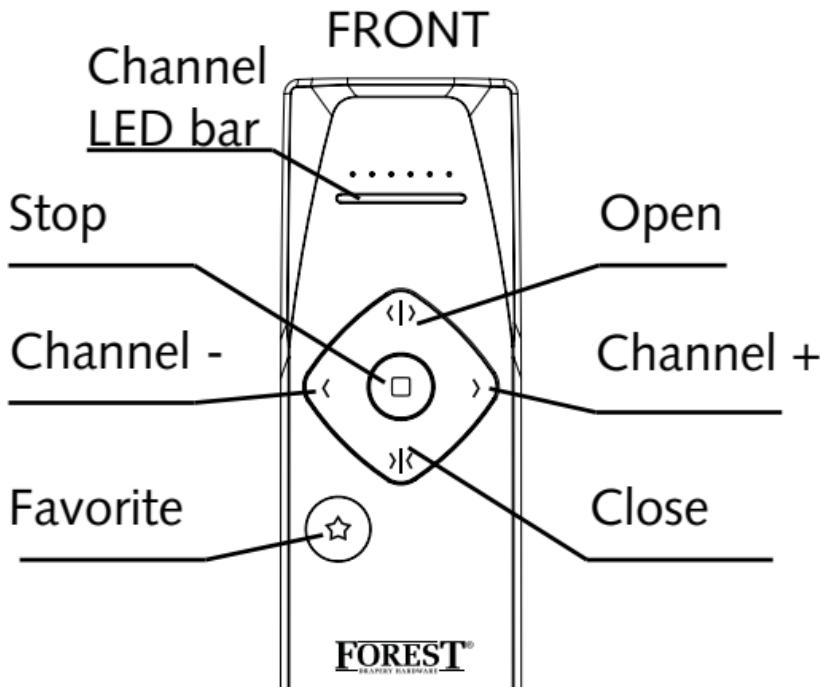

BACK

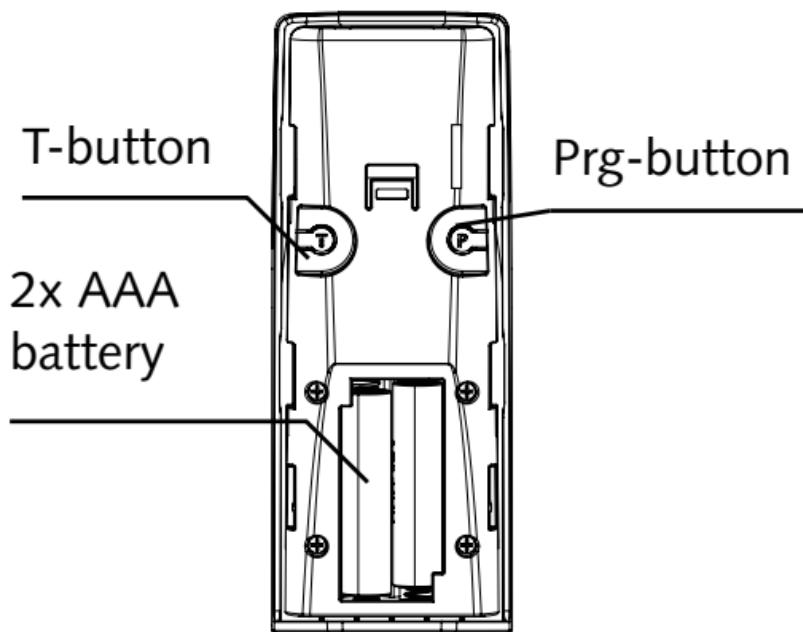

FOREST

L I N K 2 Forest Link 2 RF Protocol included

Welcome to the EasyTouch family! Thank you for purchasing the EasyTouch remote control. With this remote control you are ready to operate your Forest Shuttle™ and Forest tubular motors effortlessly. In this manual you will find all the information you need to get the most out of your EasyTouch.

General

Read this installation guide and the safety instructions carefully before you start using this Forest product. Follow the instructions given in this manual and keep this manual for the entire life of the product. This manual describes the use and commissioning of the EasyTouch. Any installation or use that falls outside the scope defined by Forest is not permitted. Ignoring the instructions in this manual will void all liability and warranty of Forest Group.

Contents

Introduction	2
Contents box	2
Features	3
Button specification	3
Change battery	4
Functionality	5
Safety & Troubleshooting	6
Motor pairing	7
Technical specification	8

Contents box

- 1x Remote
- 1x wall mount
- 2x AAA battery in seal
- 2x plastic plug
- 2x 4x 40 screw
- 1x Manual

Features & Benefits


- 6-channel Forest RF control
- low battery alert
- low power standby
- child lock function
- Configure for use as a wall-mount control or handheld control.
- Utilizes Forest Link 2 RF technology

Button	Description/ function	
	Open	Opens the curtains or blinds
	Close	Closes the curtains or blinds
	Stop	Stops the movement
	Channel +	Pressing Channel Up increments the channel or moves the LED in the bar to the next.
	Channel -	Pressing Channel Up decrements the channel or moves the LED in the bar to the previous.
	Favorite	allows users to quickly access their preferred curtain positions with a single press.*
	Prg	The Program button, accessible upon removing the back case, enables users to access programming functions


* This function applies only to Forest Link 2 motors

Place or Change battery


1. Press and slide the back cover from the remote control upward, exposing the battery compartment.

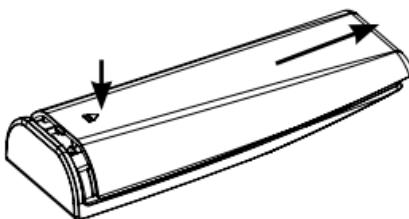

2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.

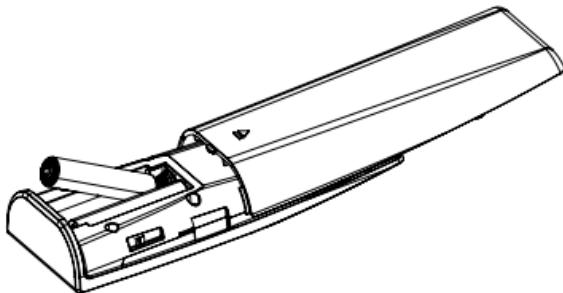


3. Slide the battery cover back into place.

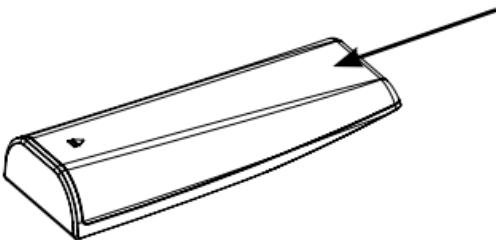

Select channel

1. Navigate with  or 
2.  LED indicate the channel number
3. Repeat the above, to activate again

 Child lock: locks all programming functions

1. Press  for 10 seconds
2.  LED flickers 1x
3. Repeat the above, to activate again

 
Set number of channels

1. Press  &  for 3 seconds
 the LED flickers
2. Set the amount of active channels with the  and  buttons
3. Press  to approve
4. The  LED flickers 3 times

Note: if all LED's are lit, that is channel 0 (all channels moving together)

Switch Protocol

Note: if you only have Forest motors without the Forest Link 2 protocol, you can switch from dual to single protocol for legacy compatibility

1. Remove the batteries
2. Press  & reinstall the batteries
3.  the LED flickers 1x

General safety instructions

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety or supervision. use of the product.

- Do not let children play with the remote control
- Never immerse the device in any liquid
- Do not drop, drill holes in or disassemble the device, otherwise the warranty will be void.
- Do not expose the device to high temperatures or place it in direct sunlight.

Troubleshooting

1. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced
2. When the battery voltage is insufficient, an orange LED will flicker upon pressing a button, signaling the need for battery replacement.

Instructions for connecting to Forest motors

To connect the remote to the Forest product, please refer to the user manual of the respective Forest motor or visit the landing page containing all manuals and videos (accessible via a QR code).



Technical Specification

- Battery: 3V (AAA battery×2) LR03
- Battery life < 3 years
- Transmit range indoor max. 30mtr
- Transmit power max. 10mW (ERP)
- Working temperature -10°C - +50°C
- Frequency 433.92MHz±100KHz
- Radiocoding: Legacy Forest Protocol followed by Forest Link 2
- Dimension: 130x50x20
- Gewicht: 78g incl. batteries (55g excl.)

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Recycling

Do not throw away the product with household waste. Make sure you hand it in at a collection point or depot so that it can be recycled.



Forest Group (Nederland) BV hereby declares that the product complies with the requirements of Directive 2014/53/EU.

The complete declaration of conformity is available on the website www.forestgroup.com/ce

The images in this document are not binding, and no rights can be derived from them.

FOREST
DRAPERY HARDWARE