


FOREST®
DRAPERY HARDWARE

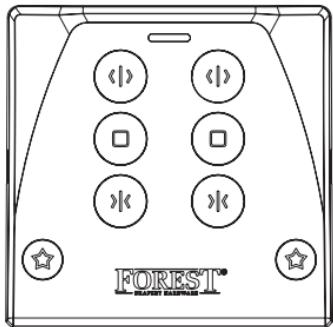

EN

NL

DE

FR

EasyTouch® Wireless Wall Switch

USER MANUAL

TABLE OF CONTENTS

1. Your EasyTouch® remote control

- Introduction	3
- Accessories	4
- Declaration Of Conformity	5
- Overview of the remote control	6
- Functionality	7

2. Get started

- Inserting the batteries	8
- Motor pairing	9

3. How to use

- Control the curtains	10
- Child lock	10
- Set up favourites function	11

4. Notice

- Safety instructions & Recycling	12
- FCC regulations	13

5. Support & Technical specifications

- FAQ	14/15
- Technical specification	15

1. Your EasyTouch® Wireless Wall Switch

INTRODUCTION

Thank you for purchasing the Forest EasyTouch® wireless wall switch. With this remote control, you can operate up to 2 Forest devices, like Forest Shuttle®, Forest tubular motors and Forest LED systems.

In this manual, you will find all the information you need to get the most out of your Forest remote.

GENERAL

Please read this manual and the safety instructions carefully before using this Forest product. Follow the instructions in this manual and keep it throughout the entire lifespan of the product. This manual describes the setup and operation of the EasyTouch® wireless wall switch.

Any use beyond the application scope defined by Forest is not permitted. Ignoring the instructions in this manual voids any liability and warranty from Forest Group.

ACCESSORIES

1x Remote control
2x AAA batteries
1x Manual
2x plastic plug
2x 3x20 stainless steel screw

FEATURES & BENEFITS

- 2-channel Forest RF control
- Low battery alert
- Utilizes Forest Link RF technology
- Backwards compatible with original Forest RF protocol
- 5 Year warranty



SUPPORTED PROTOCOLS

The EasyTouch® wireless wall switch is equipped with both the original RF protocol and the new Forest Link® protocol as standard.



Forest Link RF
Protocol inside

DECLARATION OF CONFORMITY


EN

TBD

OVERVIEW OF THE REMOTE CONTROL

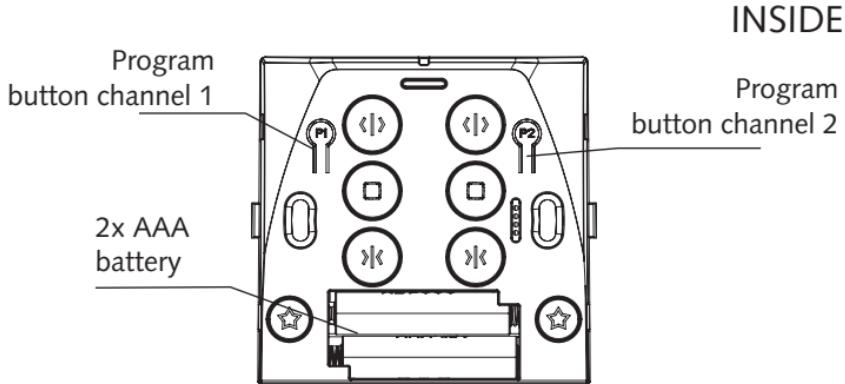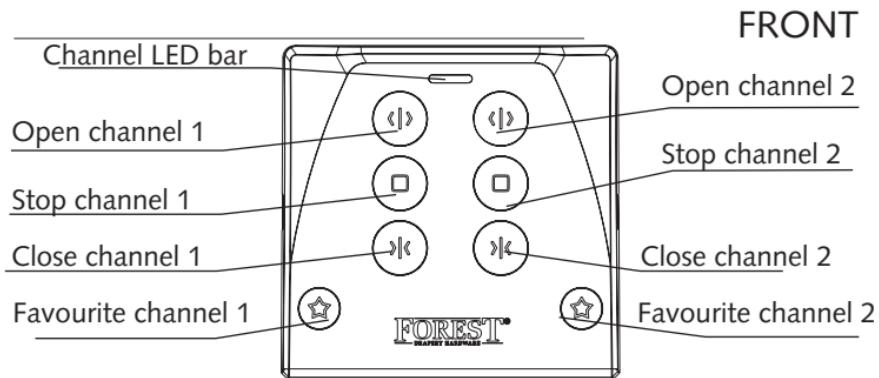

FUNCTIONALITY

 Button	Description/ function
	Open
	Close
	Stop
	Favourite
	Prg


* This function works only with motors equipped with the Forest Link protocol.

** Refer to your motor's manual for the functions of the program button.


2. Get started

INSERTING THE BATTERIES

1. remove the cover on the front of the wall switch to reveal the battery compartment.

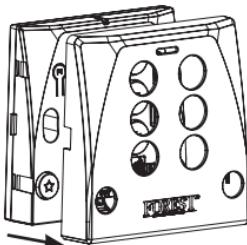

2. Place the batteries in the compartment. And click the front cover back on the wall switch.

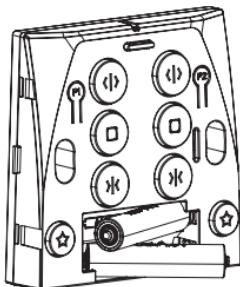

MOTOR PAIRING

The remote control needs to be paired with the Forest device before it can be operated.

To pair the remote control with the Forest motor or LED system, please refer to the user manual of the respective Forest motor or visit the webpage with all manuals and videos.

www.forestgroup.com/en/installation-guides

Or scan the QR code below



3. How to use

CONTROL THE CURTAINS

1. Press  or  to open or close the curtains on the selected channel.
2. Press  to stop the curtains from moving
3. Press  to move to the favorite position

CHILD LOCK:

LOCKS ALL DUAL KEY FUNCTIONS

1. Press  or  for 10 seconds
2.  LED flickers once
3. Repeat the above, to delete child lock

SET UP FAVOURITES FUNCTION

With the Favourites function  , you can determine the position to which the curtain should move for each channel. You can set this up as follows:

1. Move the curtain to the desired preferred position by pressing  or  .

By pressing  , you can stop the curtain at any desired position.

2. Once the curtain is in the desired position, press [2 seconds]  and  .
4. The curtain position is now set for the respective channel.
NOTE: only one favourite position per motor can be saved, regardless of which channel is being used.
5. Press  to move your curtain directly to the desired position.

REMOVE FAVOURITES POSITION


If you want to remove the preferred position, move the curtain to the current Favourites position. Then, press [2 seconds]  and . The Favourites position is now cleared.

Important: The Favourites function can only be set if the end positions are configured. This function only works with Forest motors that are equipped with the Forest Link protocol.

MOUNTING ON A WALL

EN

1. Mount the remote with the screws on to a wall

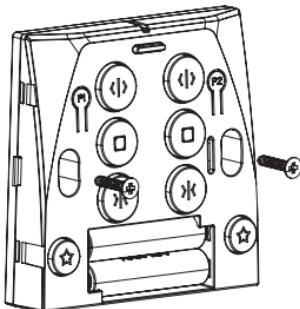

4. Notice

SAFETY INSTRUCTIONS

This product should not be used by individuals (including children) with reduced physical, sensory, or mental capabilities, or individuals without experience or knowledge, unless they are supervised by someone responsible for their safety or supervision, or who has provided instructions in advance on the use of the product.

- Do not let children play with the device.
- Never immerse the device in liquid.
- Do not drop the device, drill holes in it, or disassemble it, as this will void the warranty.
- Do not expose the device to high temperatures or place it in direct sunlight.

FCC REGULATIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



RECYCLING

Do not dispose of the product with household waste. Ensure that you return it to a collection point or depot for recycling purposes.



Forest Group (Netherlands) BV hereby declares that the product complies with the requirements of Directive 2014/53/EU.

5. Support & Technical specification

FAQ

How do I know if I need to replace the battery in my remote control?

- Check during use if the operating distance between the motor and the remote control is significantly shorter or if it responds less sensitively. This may indicate that the batteries are almost empty.
- If the batteries are almost empty, an LED light will flash orange  when a button is pressed to indicate. Replace the batteries as soon as possible.

My remote control doesn't work at all.

- Check if the remote control has been paired correctly with the Forest product.

- Check if the batteries are inserted correctly. If the batteries are almost empty, you need to replace them.
- The EasyTouch® remote control only works with Forest devices, such as Forest Shuttle®, Forest tubular motors with internal receiver and Forest LED systems with RF receiver.

I only have motors with the original protocol, and the response time is slower than I'm used to.

- Switch to the original RF protocol.
Please note that the motors will need to be re-paired with the remote control afterward.

1. Remove the batteries
2. Press  & reinstall the batteries
3.  the LED flickers 1x

- Battery: 3V (AAA battery×2) LR03
- Transmit range indoor max. 30mtr
- Transmit power max. < 0 dBm (ERP)
- Working temperature 0°C - +50°C
- Frequency 433.92MHz±100KHz
- Radiocoding: Original Forest Protocol followed by Forest Link
- Dimension: 130x50x20
- Weight: 78g incl. batteries (55g excl.)

SCAN FOR INSTRUCTION
VIDEO OR MANUAL



www.forestgroup.com/en/installation-guides