

WIRELESS MUSICAL EYE MASK



Thank you for purchasing this Wireless Musical Eye Mask. Please read these instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

Intended Use

- The Wireless Musical Eye Mask is suitable for Bluetooth compatible device like mobile phones. Users can listen to music and conduct phone calls hands free.
- The article is for personal use only and is not intended for commercial applications.
- The article may only be used in the manner described in the instructions. Any other use is deemed to be improper.

Safety Instructions

- Before using the article, please read the instructions through carefully and keep them for future reference.
- If you pass the article on to third party, it must always be accompanied by this User Manual.
- If you have any question, please contact the customer service department.

Dangers of Injury

- Keep the article and the package away from children and animals as they can swallow small parts.
- Supervise children using the article. It is not a toy.
- Always maintain a gap of at least 10 cm between the headphones and a pacemaker or an implantable cardioverter defibrillator (ICD) as the article generates magnetic fields.

Dangers of Fire and Explosion


- Caution! Do not expose the headphones to any high temperatures over 70°C (like hair dryer, heating, prolonged sunlight etc.,) The battery inside of the headphones may overheat and explode as a result.
- Only charge up the headphones in an ambient temperature of from 10°C to 40°C.

- Do not crush or pierce the battery! Do not expose the battery to high pressure, as this may cause an internal short-circuit and overheating.
- The headphones and their rechargeable battery must not be taken apart, thrown into a fire, immersed in liquids or shortcircuited.
- If the headphones are not used for a prolonged period of time, recharge it regularly (roughly every 3 months).

Material and Article Damage

- Always keep the headphones dry and do not expose them to any extreme temperatures, electrostatic interference or dust.
- Do not expose the article to any severe impacts or high pressure.
- In the event of damage/faults, switch the article off immediately. Do not use it if it is damaged.
- Never repair or modify an electrical article by yourself, but instead always visit your nearest customer service department / specialist to guarantee your own safety. In the event of damage, contact the customer service department.
- Switch the article off after use to conserve the battery.
- Only ever use the article in environments in which the wireless Bluetooth technology is permitted.
- Prolonged storage or use may impair the quality of the ear cushions.

Interface

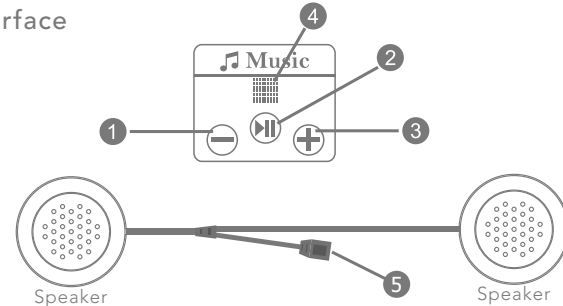

- 1 Volume Down/Previous Song
- 2 Play/Pause/Answer/Hang Off/Redial
- 3 Volume Up/Next Song/SIRI
- 4 LED Status Light/Microphone
- 5 Charging Port

Pairing a Bluetooth Device

Before you can use this article, it need to be paired to your device. To do this:

1. Long press the Play/Pause [2] button for 3 seconds until the LED Status Light [4] starts to flash alternately red and blue quickly.
2. Switch on Bluetooth on your phone or other Bluetooth enabled device.
3. Search and select “Musical Eye Mask” from the list of found devices.
4. If asked for a passcode, enter “0000”.
5. After paired successfully, only the blue light flash slowly.
6. When the article switched on next time, it will automatically search for and attempt to connect to the last paired device.

Pairing a New Bluetooth Device

If need to pair with a new Bluetooth device, follow below steps:

1. Make sure the Bluetooth is turned off on the previous paired device.
2. Follow “Pairing a Bluetooth Device” instructions from step 1.

NOTE: To preserve the battery, the article will switch off automatically if no Bluetooth connection for 3 minutes.

How to Use

Playing Music

1. Play/Pause: Short Press the Play/Pause [2] button to switch between play and pause status.
2. Adjust Volume: Long press the Volume + [3] button and Volume - [1] button

3. Music selection: Short Press the Previous [1] button or Next [3] button to select previous or next songs.

NOTE: Play/Pause and Music Selection functions will only work on devices which support Bluetooth profile AVRCP.

Call-Handling

1. Answer a call: When a call coming, it will play a ring tone. Then press the Play/Pause [2] button to answer. During the call, you can increase and decrease the volume by long press Volume +[3] or Volume - [1] buttons.
2. Reject a call: When a call coming, it will play a ring tone. Long press the Play/Pause [2] button for 2 seconds to reject it.
3. End a call: During a call, short press the Play/Pause [2] button to end a call.
4. Re-dial: Press the Play/Pause [2] button twice in quick succession to redial the last phone number you called.

Activate/Deactivate SIRI

1. Activate SIRI: Press the Volume + [3] button twice in quick succession to activate SIRI on iOS device.
2. Talk to Microphone [4] directly to communicate with SIRI, it's the same effect with talking to iOS device directly.
3. Deactivate SIRI: Short press Play/Pause [2] button to deactivate SIRI.

Charging the Battery

Make sure the article is switched off. Then:

1. Connect the micro USB end of the charging cable to the Charging Port [5] on the beanie and the standard USB end to a power source like PC USB or USB mains charger.
2. The LED Status Light [4] will be red whilst charging. It will turn to blue as soon as the battery fully charged.

NOTE: It will take approx. 2 hours to be fully charged.

- If the article is under using, it will stop working when charging.
- If the article is crashed, it will be reset when charging.

Troubleshooting

If you cannot connect the article to your device, please try the following:

1. Ensure the article is charged, switched on, paired with and connected to your device.
2. Check if the article is in the effective range (20 meters/66 feet) from your

device and there's no obstructions like walls or other electronics devices between the article and the device.

3. Only one device can be connected to the article at a time, ensure there's no other Bluetooth device already connected to the article.
4. If you receive an intermittent signal, please ensure the article is in the effective range from your device.

Washing Guidelines

Please remove the electronic components from the Eye Mask before washing. Hand wash only.

	Wash with cold water		DO NOT dry clean
	Hand wash ONLY		DO NOT bleach
	DO NOT tumble dry		DO NOT iron

Specifications

Speaker Unit: 32Ω / 10mm

Battery: 3.7v 150mAh Rechargeable Li-polymer Battery

Standby Time: Over 300 Hours

Playing Time: 13 Hours

Charge Time: 2 Hours

Package Contents

- Wireless Musical Eye Mask
- Micro USB Charging Cable
- User Manual



WARNING: Avoid excessive volumes, particularly over extended periods or in the case of frequent use. Listening to music at maximum volume for prolonged periods can lead to hearing damage. It's best to avoid extreme volume when using this product, especially for extended periods. For your own safety, please be aware of your surroundings when using this product.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help