


aiwa

BB-X100

Wireless Boombox




WHAT'S INCLUDED

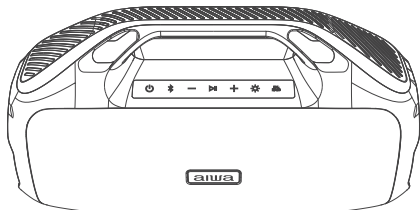

AI7016 Wireless boombox




AC Power Cord

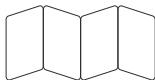


Quick Start Guide

PRODUCT OVERVIEW

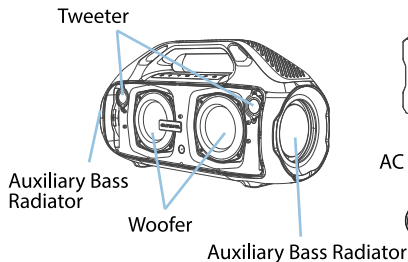

Holes for carrying strap

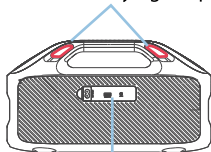


AC input

AUDIO IN
(Φ 3.5 mm/1/8")




USB port

CONTROLS AND PORTS

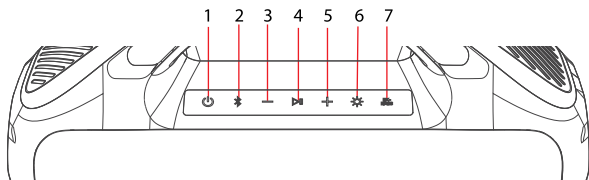

- 1. Standby/On Button
- 2. Bluetooth Button
- 3. Previous Track
- 4. Play/Pause Button


- 5. Next Track
- 6. Light Modes
- 7. Bass Boost Button

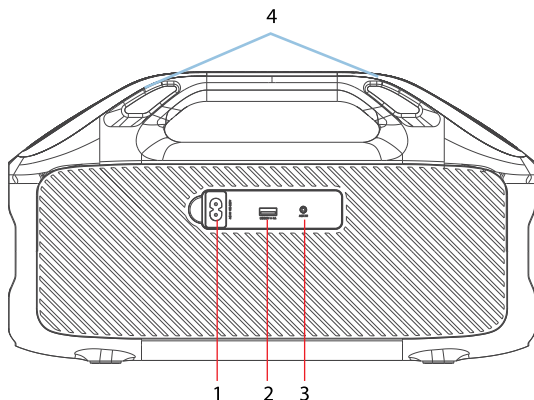

- 1. AC Input(for charging the speaker)
- 2. USB Charging Port(for charging phones/tablets)
- 3. 3.5mm/1/8" AUX-IN
- 4. Holes for Carrying Strap (not included)

CHARGING

Connect the AC input on the speaker and an AC outlet with the supplied AC power cord (mains lead). While charging, the Power button indicator shows solid red; when the battery is fully charged, the indicator goes out.

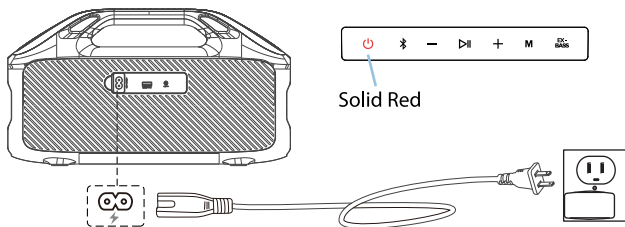

CAUTION: Always make sure the AC input is dry before connecting AC power.

Charging time

Allow up to five and a half hours to fully charge the battery. A full charge powers the speaker for up to eighteen hours, exact time varies by volume level and audio contents. After you disconnect the AC power cord (mains lead) from the speaker upon completion of battery charging, be sure to close the cap securely. The cap plays a very important role in maintenance of the water resistant performance.

Battery protection mode

When your speaker battery is depleted (0%), or your speaker is unplugged and unused for more than three days (with a remaining charge of less than 10%), it enters battery protection mode. To reactivate your speaker, connect it to a wall charger.


When not in use, store your speaker in a cool place.


CAUTION: Do not store your speaker for extended periods when fully charged or with a remaining charge of less than 10 percent.

GETTING STARTED

Charge speaker before starting it up.





To **POWER ON** press  until the power indicator turns white.


To **POWER OFF** press  until all indicators turn off.


To **PLAY MUSIC** tap .


To **PAUSE MUSIC** tap  again.

To **CHANGE TRACK** press and hold  to go to the next track.

Press and hold  to go to the previous track.

To **ADJUST VOLUME** Tap  to increase the volume.


Tap  to decrease the volume.

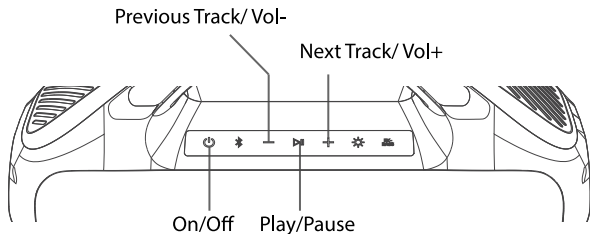


BLUETOOTH PAIRING

Once the speaker is turned on, it will enter pairing mode.

To pair with your device, turn on its Bluetooth and find the speaker listed as Aiwa BB-X100 under the Bluetooth menu in its settings. Then press connect.

The Bluetooth indicator  will light solid blue after successfully pairing with your device.

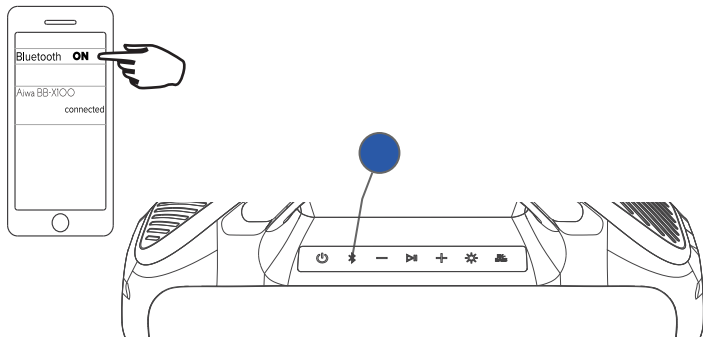

The speaker reconnects automatically to previously paired devices, if they are close by. To connect a new device, disconnect existing Bluetooth device.

To disconnect bluetooth, press and hold the Bluetooth indicator. The indicator will flash blue after successfully disconnecting and re-entering pairing mode.







CONNECT MULTIPLE SPEAKERS

Via Multi-Sync the BB-X100 can connect to up to 100 speakers from the same range (BB-X50, BB-X75, BB-X100).



When sync'd this way all speakers play the same content, each speaker playing in stereo.

To use Multi-Sync connect your device to the first speaker in the normal way. This speaker will be the Primary Speaker.

Now press its  button to enter Multi Sync mode. The indicator will turn .

Turn on a secondary speaker and make sure it is not connected to any Bluetooth device. Press its  button, the indicator will flash GREEN , it will connect to the primary speaker and be a secondary speaker.

Repeat this operation for any more speakers you wish to add as secondary speakers.

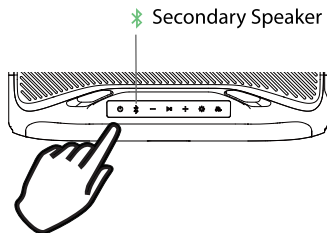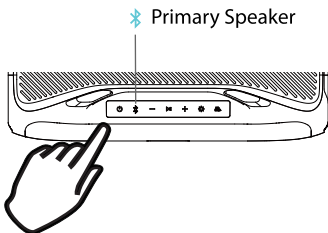


+Repeat Secondary Speaker steps to connect more speakers.

OTHER FEATURES

To turn on the lights press the Lights button.
Pressing again cycles round various lighting modes.

Double press the Lights button to turn lighting on/off.

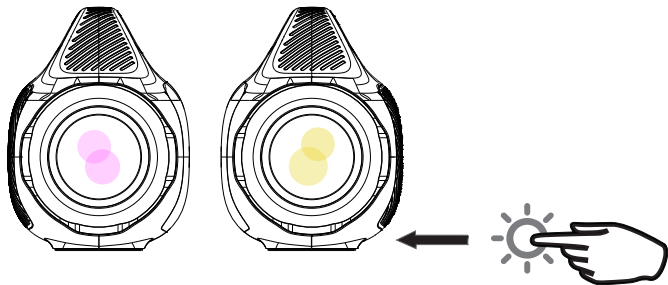

SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge speaker in water.
3. Only clean using a clean, soft cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose product to excessive heat or re.
6. Do not expose product to extreme cold or hot temperatures to avoid battery damage.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. Do not charge while product is in contact with water, as electric shock may occur.
10. Unplug charging cable when not in use or during thunderstorms.
11. This product is not intended for commercial use.

Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or reorient the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

SPECIFICATIONS

BLUETOOTH VERSION: 5.3

WORKING DISTANCE: 30 METERS

MULTI-SYNC RANGE: 20 METERS

BATTERY: 6000mAh x 3 (18000mAh total capacity)

AC POWER INPUT: 100V-250V AC

OUTPUT POWER: 2x35W RMS + 2x15W RMS

TOTAL PEAK POWER: 200W