

GETTING STARTED GUIDE

KURZANLEITUNG · COME SI COMINCIA

GUIDE DE DÉMARRAGE · VODIČ ZA HITER ZAČETEK

SKRÓCONA INSTRUKCJA OBSŁUGI

ÚVOD O POUŽÍVANÍ TELEFÓNÚ



wee PHONE

Keypad Descriptions



Insert SIM Card(s)




Step 1

Turn your phone off by pressing the power key for 3 seconds. Then select 'Power off'.

Step 2

Remove the battery to insert the SIM cards in the correct frame.

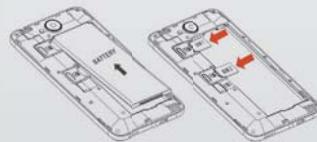

Charging the Battery

Step 1

Before charging, check the battery slot to ensure correct installation.

Step 2

Plug one end of the charger into the phone and the other end into a socket. The phone can be charged whether it is turned on or off.

After the phone is fully charged, unplug the charger from the socket and the phone.


EN

Make a Call




Step 1

Press the dial icon to enter the call screen.
Press numbers on the screen to enter a phone number.

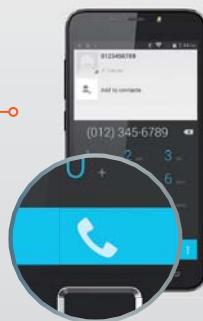

Step 2

Press the dial icon at the bottom of the screen and select a SIM card to dial the number.

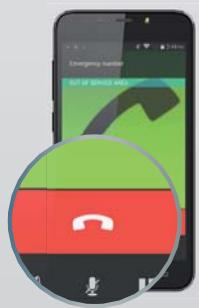

Step 3

Press the hang up icon to cancel the call.

Answer a Call

Swipe right to answer the call. To reject the call, swipe left. If you want to reject the call and send the caller an SMS, swipe upwards.



Messaging

Step 1

Select the message icon to start the application.




Step 2

Select the new message icon in the bottom left corner to create a new text or an MMS.



EN

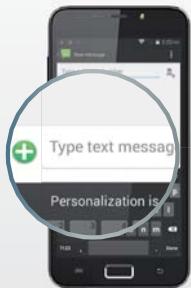

Step 3

Press 'Type text message' to input message content. If you want to send a picture or video file, press +.



Step 4

Press the send icon and select a SIM card to send the message.

Browser



Step 1


Select the browser icon. Subscribe to the data service from your service provider and configure your phone's relevant settings.

Step 2

To browse, select the website list on the screen or enter a URL in the address bar. Press enter on the keypad to open a website.

**Step 3**

Select the favourites icon at the bottom right to show and organise your favourite websites.

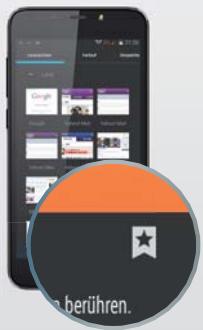**Email****Install email account**

To set up your email account, enter your email address and password. Press 'next'. Press manual setup to set up server information manually.




EN




Check inbox

Select the email you want to check. Press the icons at the bottom to delete, reply or add to favourites.

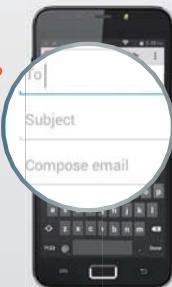

Compose and send emails

Press the new mail icon in your inbox to create a new email. Enter the recipient's email address, subject and content, then press the send icon to send the email.

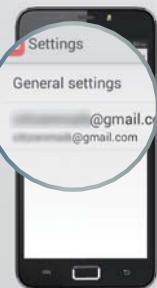

Delete email account

Press the option key to select Settings. Select the account you want to delete and then select 'Remove Account'. Press OK to confirm and delete the account.

Settings

Step 1

Switch the phone on and enter the 4-digit PIN from the SIM Card.



Step 2

The settings of the network provider will be identified. Press 'close'.

WLAN/ WiFi

Step 1

Select your settings icon.
Then press the menu item WLAN.



EN



Step 2

Select a WiFi network and enter the password. After confirming, you will be connected to the internet.

Labelling requirements

1. This device complies with part 15 of the FCC guidelines. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Information for the user
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. Information for the user
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC guidelines. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and radiates radio frequency energy and, if not setup and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur with a particular device. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reposition or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment with a socket on a different circuit different to the receiver.
 - Consult the dealer or an experienced radio/TV technician for help.

Body worn operation

The device complies with RF specifications when used near your ear or at a distance of 1.0 cm from your body.

Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

Certification information (SAR)

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit.

The highest SAR value reported to the FCC for this device type when using at the ear is 0.369 W/kg, and when properly worn on the body is 1.164 /kg.



KURZANLEITUNG

