



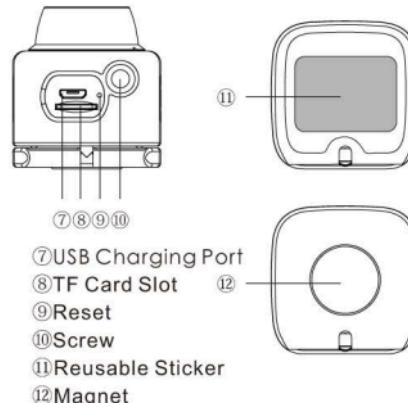

WIFI SELFIE CAMERA MANUAL

HH-1303

I. Structure

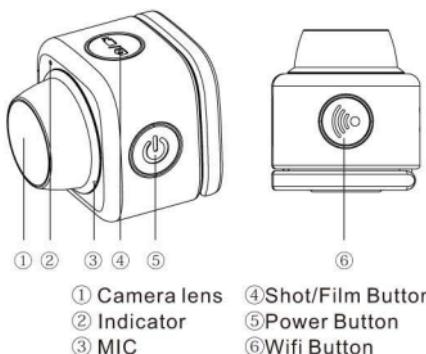

II. Back cover



1. Sticker

- 1) Spin out the sticker surface, camera can be stucked on plane of different material.
- 2) When the sticker gets dirty, it can be washed and good for use again.

2. Magnet

Spin out the magnet surface, it can absorb on any metal objects.

3. Rotatable

The cover can be adapted to an arbitrary direction.

III. Functions



1. Power Button

Hold power button for 3 secs to turn on/off. Once turned on, the indicator flashed slowly in green.

2. WiFi button

Hold WiFi button for 2 secs to turn on/off device's WiFi. Once turned on, the indicator quick-flashes 3 times in every 2 seconds in green.

3. Shot/Film Button

1) Picture mode is the default when device's turned on. Hold this button for 2 secs to go to video mode.

2) Picture mode: Press this button once to take a picture. Hold it for 2 secs to go to video mode.

3) Video mode: Press this button once to start recording, press it again to stop. The indicator keeps in green while recording. When recording is done, hold it 2 secs to go to picture mode.

4. Reset Button

When no reaction with any buttons, press reset button to reboot system.

IV. Installing the APP on mobile phone

Scan the QR codes below to download and install the APP on smart phone.



Android



iOS

V. Connecting Mobile APP with Camera

1. Insert TF card: Please use branded TF card (CLASS 10 only) 32G max.
2. Power on: Hold power button till the indicator keeps flashing slowly in green.
3. WiFi on: Hold WiFi button till indicator flashes 3 times every 2 seconds.
4. Phone connection: Go to WiFi settings on mobile phone. Turn on WLAN and find the WiFi hotspot named "wifi_camera_HH1303" to connect with.
5. Launch APP: Preview at main interface. Use the device to take photos/videos and download them just by operating on the APP. Users can also do the parameter and system settings on it.

VI. Charging and indicator

1. Charging: Connecting to adapter or PC can both charge for the device. Please charge at 5V/1A.
2. Check power status on APP. The indicator keeps in red while charging, off when charge's done.
3. Please charge for the device and try again if failed to power on or low power(keep flashing in green quickly).
4. Please charge for the device in time when low power.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.