

1

LAUNCH APP

Our app will guide you through the complete install, step by step.

Use your mobile device.
Search for "Ecovent"



Use the included tablet.
It comes pre-loaded with the Ecovent app.



5 min

2

CONNECT HUB

Connect the smart hub to your home's WiFi router using the included ethernet cable. Then plug in the power cord and you're good to go.



2 min

3

 
SETUP THERMOSTAT

If you already have a Nest thermostat installed.



5 min

If you purchased a Sensi™ thermostat through Ecovent and need to install it



20-45 min

4

ROOM-BY-ROOM INSTALL

Installing vents and sensors happens one room at a time.



Included



15 min per room

Changes or modifications not expressly approved by Ecovent could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help."

WARNING! This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment under the following conditions: This equipment should be installed and operated such that a minimum separation distance of 20cm is maintained between the radiator (antenna) & user's/nearby person's body at all times. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

THIS ECOVENT PRODUCT CONTAINS OPEN SOURCE SOFTWARE. FOR LICENSING, COMPLIANCE, AND OTHER IMPORTANT INFORMATION, PLEASE VISIT [HTTPS://WWW.ECOVENTSYSTEMS.COM/PRODUCT-INFO](https://www.ecoventsystems.com/product-info).