

Wireless Portable Disk  
Model : A7



Quick Start Guide

1. Packing List




2. Overview



3. Quick Start Guide

① Charging



Connect the airdisk to USB AC adapter to charge. 4white LEDs shine steadily when fully charged.

② App download and install



(App download-DM airdisk)


Scan the QR code to download and install "DM airdisk"  
You can also obtain the App by searching "DM airdisk" in the application markets as below :  
**Android users** : Google Play  
**iOS users** : AppStore

③ Turn on the airdisk

Press until the blue LED lights up to turn on Wi-Fi. A typical start-up can take up to 20 seconds.

④ Connect to airdisk

1, Go to the "Setting" of the phone and turn on Wi-Fi.  
2, Look for hotspot SSID "airdisk\_\*\*\*\*\*" from the Wi-Fi list and tap it.  
3, Key in the initial password : **88888888** to connect , blue LED will blink during connection.  
4, Check airdisk\_\*\*\*\*\* status as "connected"



⑤ Operate DM airdisk App

Note :  
1、 If you haven't install DM airdisk App , you can visit <http://192.168.222.254> through your web browser.  
2、 Please refer to App user guide for App operation.

⑥ USB Flash Drive Function

Connect the airdisk to PC USB port with USB cable , then you can drag and drop your files to airdisk. ( You will be not able to access the content of airdisk wirelessly when it is connected to a PC USB port )

4. App User Guide

4.1 Home page



Setting menu : Network connection and other setting items  
**Backup status: Rotating icon** indicates backup is in process  
**Phone backup** : Phone backup setting menus  
**airdisk power level**  
**Storage volume bar**

正面

4.2 Connect airdisk to the Internet

①



Swipe to right or tap the upper left icon on home page to enter the sidebar , tap "Connect to Internet" .

②



Choose a network , input password. The airdisk will restart after connection.

4.3 Auto Data Backup

①



Tap "Phone Backup" in the homepage.

②



Activate the "Enable Auto Backup" and choose the auto backup items.

③



Tap Pictures and Videos then select albums to auto backup.

④



Select the picture albums you want to auto backup.

5. Specifications

Wi-Fi protocol:IEEE802.11b/g/n  
Wi-Fi data rate:150Mbps  
Battery:4000mAh rechargeable Li-Polymer  
Power input:5V/1.5A  
Power output:5V/1.5A  
Memory capacity:16/32/64/128GB  
Wi-Fi coverage:8 meters radius  
Dimensions:140\*65\*11mm

6. Cautions

①Keep airdisk away from high temperature.  
②Keep the airdisk dry. Water or other liquids will damage it.  
③Do not disassemble the equipment in any kinds of circumstances.  
④Keep airdisk away from obstacles especially metal objects.

7. OTA FW upgrade

Swipe to right , you can find "Settings" , then click "Check for FW upgrade" and follow the instruction to upgrade. (Blue LED will slowly blinks and airdisk will reboot after upgrade is completed).

※ Make sure the battery is fully charged before upgrading.

8. Factory Reset

Press the button until the Wi-Fi LED lights up to turn on the airdisk.  
Press for 30s until the Wi-Fi LED flash rapidly,then release the button to restore to factory setting. Resetting will not delete any content from the wireless portable disk

9. FCC Declaration

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.  
End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.  
The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).  
  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

反面

尺寸:109\*54mm ,  
材质 : 105g双铜 ,  
双面彩色印刷  
公差±1mm

G032101A

深圳市大迈科技有限公司