



BLUETOOTH® SPEAKER

Thank you for purchasing the Bluetooth® Speaker. Before using your speaker, please read the instruction manual carefully and keep for future reference.

CONTENTS

- Bauble Bar Bluetooth® Speaker
- Instruction Manual
- Audio Cable
- USB Charge Cable

SAFETY/CARE NOTES

When used for the first time, please ensure that the volume is on a low setting as excessive volume may cause damage to the unit and potentially impair your hearing. Please keep your speaker away from liquids, excessive moisture, rainwater,

sand, dust, dirt and heat sources. To clean your speaker, please use a dry dust cloth.

OPERATING YOUR SPEAKER

- Turning the speaker on: slide the power button to the left to turn on. The speaker will sound a short beep to confirm that it is on.
- Turning the speaker off: slide the power button to the right to turn off.
- Bluetooth® pairing: with the speaker turned ON, the speaker will automatically start searching for devices to pair with. (The LED flashes Blue to indicate searching) Select 'BAUBLE BAR' from the list of Bluetooth® devices in the menu on your phone/tablet/PC etc. The speaker will 'beep' twice when your device is connected.
- To disconnect: select 'Forget Device' from the menu on your phone/tablet/PC etc. Then turn the speaker off.

HANDS FREE VOICE CALLING

The speaker is equipped with a microphone that enables hands free voice calling. Your device must be connected to the speaker via Bluetooth® to enable hands free calling; when you answer the call on your device the sound will automatically be transmitted from the speaker. (Please note that some devices will require you to manually select the Bluetooth device for hands free).

GENERAL OPERATION

All volume and track control is managed by your phone/tablet/PC etc.

CONNECT TO A NON-BLUETOOTH DEVICE

You may also use your speaker by connecting the supplied audio cable to the audio input socket on the side of your speaker by connecting to the

headphone port on your device. Turn off your speaker before connecting or disconnecting your device using the audio cable.

TROUBLE SHOOTING

1. Speaker will not turn on: check your speaker is charged by following the charging instructions.
2. Unable to connect to speaker via Bluetooth®: ensure your speaker is turned on. Ensure your Bluetooth device is within range of your speaker (16 feet without obstruction). Check that your device is paired with BAUBLEBAR Speaker.
3. No output for speaker: ensure that the volume is turned up on your device.

SPECIFICATIONS

Battery

Operating voltage: 3.7vDC
Capacity: 3000mAH
Type: Lithium polymer
Playback duration: Up to 3 hours

charged the speaker will last up to 3 hours.

Charging

USB Voltage: 5vDC
Current: 100mA
Charging time: 2 hours if not in use

Audio input - Analogue 3.5mm stereo jack plug
Bluetooth: Versions 2.1+
Bluetooth range: Up to 5m (without obstruction)

Amplifier

Power: 2W (L + R)
THD: 10%
Analogue input sensitivity: 70mV ± 50mV 1 kHz
SNR: > 60dB

**WARNING:**

Do not place the Bluetooth® Speaker near fire. Do not expose the product to an excessively hot environment. Do not expose the Bluetooth® Speaker to water or high humidity. Do not place the Bluetooth® Speaker on flammable materials while charging. Do not leave the Bluetooth® Speaker charging once it is fully charged. Do not use the Bluetooth® Speaker in temperatures below freezing or over 100°F. Do not drop or shake. Do not disassemble the Bluetooth® Speaker or attempt to repair or modify it any way. The Bluetooth® Speaker is not a toy. It is not intended for use by children without supervision. If heat, discolouration or warping appears when charging, immediately disconnect the device and discontinue use as this may cause leakage or ignition. If battery leakage does occur, avoid contact with eyes. If liquid does come into contact

with eyes or skin, do not rub. Rinse the affected area with clean water and consult a physician immediately. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

ONE YEAR LIMITED WARRANTY:

Established Brands, Inc. ("EB") warrants the product against defects in material and

workmanship under normal use for a period of

one year from the original date of purchase. EB

will repair or replace the defective product, at our

option, at no additional charge.

This warranty is applicable to the original purchaser only and is applicable only when presented with proof of purchase.

LIMITATIONS: This limited warranty does not cover normal wear and tear of the products. This warranty does not apply to damage resulting from:

improper or unreasonable use or maintenance, abuse, negligence, failure to follow instructions contained in any written materials that accompany

the product, deterioration by reason of excess

moisture, corrosive atmosphere, lightning, power

surges, connections to improper voltage supply,

unauthorized alteration, or other external causes

such as extremes in temperature or humidity,

modifications, scratches or discoloration,

accidents, misuse, or acts of God.

To make a warranty claim, email EB at

service@ebimail.com. Be sure to include a copy of the sales

receipt to demonstrate proof of purchase.

Made in China.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks is under licence.

BAUBLEBAR

BLUETOOTH® SPEAKER INSTRUCTION MANUAL