




## User Manual

Please read this user manual before using this speaker

Button Function:

1. Bluetooth switch
2. Next /volume up
3. Previous/ volume down
4. Pause answer/ hang up
5. Mic
6. TF card slot
7. USB micro jack
8. AUX audio jack

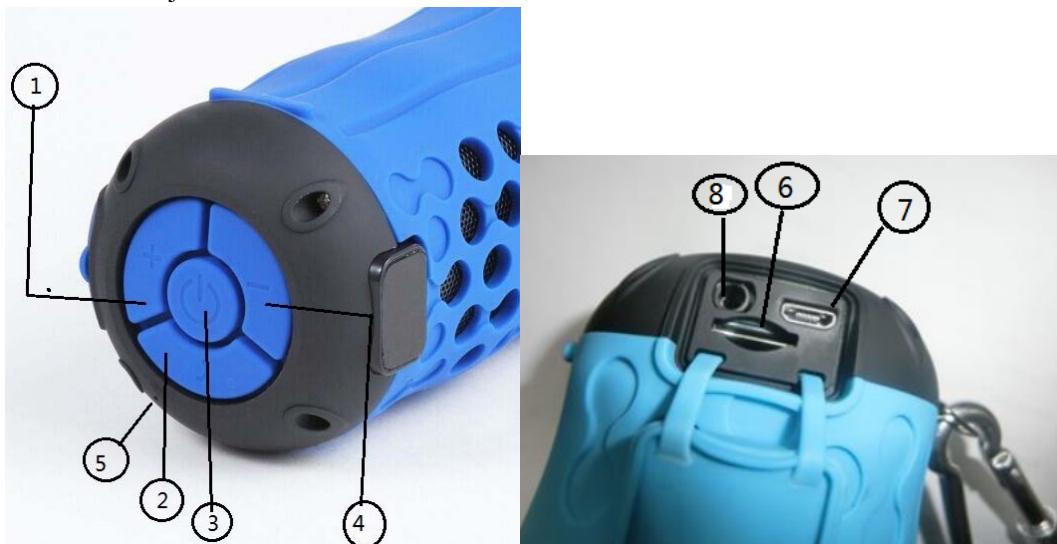

## Specification:

- 1.Name: waterproof Bluetooth speaker.
- 2.Bluetooth: RDA 2.1+EDR
- 3.Waterproof: Ipx6
- 4.Charging Input: DC5V---1000mA
- 5.Battery capacity: Ployer Lithium Battery. 3.7V/2200mAh
- 6.Charging time: 3~4hours
- 7.Speaker specification:5W×2
- 8.Frequency Range:2. 4~2. 48GHz
- 9.Distortion:<0.5%
- 10.Whole signal to noise Radio: >65dB
- 11.Main material: ABS+Silicone
- 12.Size: L170 x Ø6cm
- 13.Weight: 170g
- 14.Playing time: 8hours

## Speaker Function:

### Bluetooth mode:

First Press and hold the Bluetooth switch button  for 3 seconds to enter Bluetooth detect mode. Then you can connect the Bluetooth speaker to your Bluetooth enabled device.

### Bluetooth connection

Step 1: open the Bluetooth setting on your phone or tablet and click “ search device ” . Iphones will search for Bluetooth devices automatically.

Step 2: You have found the Bluetooth speaker when the screen displays the character “WYT-S01” , click on it your device to pair the connection.

Step 3: The phone or tablet will indicate when the pairing is successful.

### Music playing

Open the player device when the connection is successful. Click to lay music, and the Bluetooth speaker will play music.

You can operate the player with buttons on the Bluetooth Speaker.

Short press  to play/pause.

Short press “+” to play next, Long press “+” to volume up.

Short press “-” to play previous, Long press “-” to volume down.

## Bluetooth Hands free call

Answer and hang up the phone:

There will be an alert sound from the speaker when there is a phone call. Click  to answer the call. And click  again to hang up.

In Bluetooth mode, when you shorty press  , it will be switched to the TF card mode.

## TF Card mode

Insert the TF card when the speaker is turned on. The speaker will enter itself into the TF card mode. It can play the music (MP3/WMA/APE FORMAT) from your CARD. You can operate with the buttons on the Bluetooth speaker:

Short press  to play/pause.

Short press “+” to play next, Long press “+” to volume up.

Short press “-” to play previous, Long press “-” to volume down.

## Bluetooth pairing and connection

1. If the speaker has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on.
2. Other phones or tablets cant be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet.
3. The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker again.

## Frequently Asked Questions

Question	Solution
Unsuccessful pairing and connection	<ol style="list-style-type: none"><li>1. Check the speaker and make sure it is the searching state or reboot the speaker.</li><li>2. Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices. Turn off the Bluetooth device that was connected with the Bluetooth speaker last time, and</li></ol>

	reconnect the speaker.
Muted or distorted sound	<ol style="list-style-type: none"> <li>1. Click the volume of your phone or the speaker, and adjust the volume.</li> <li>2. The battery is low. Please charge it.</li> </ol>
Choppy music play	<ol style="list-style-type: none"> <li>1. Check if the device is beyond the effective connection distance.</li> <li>2. Check if there is any obstacle between the speaker and your device.</li> </ol>
The indicator not shinning in Bluetooth mode	<ol style="list-style-type: none"> <li>1. The battery is low. Please charge it.</li> <li>2. Please reboot the speaker.</li> </ol>

## Charging

Please make sure the speaker is fully charged in first use. The light and display will flash, indicating that the speaker needs to be recharged.

Charge the speaker with the provided USB cable which is compatible with any computer or cell phone charger.

The charge indicator light will be red while charging, then when the battery is fully charged it will turn off.

The USB port is only used for Charging.

## Precautions

1. Please store and use the product in room temperature environment.
2. Do not disassemble, repair, or modify the product.
3. Plz use the power charge with rated voltage for the speaker.
4. It may cause hearing damage if playing music in high volume for a long time. Consider avoiding excessively high volume when playing music for a long time.
5. Disassemble this product will invalidate the warranty.