



User's Guide

## TABLE OF CONTENTS

<b>SECTION 1: SAFETY INSTRUCTIONS</b>	2
<b>SECTION 2: GET STARTED</b>	3
Hardware Buttons and Ports	3
Switch the Tablet On or Off	3
Use the Lock Screen	4
Charge the Battery	4
<b>SECTION 3: MAIN USER INTERFACE</b>	5
Change the Wallpaper	5
Arrange and Work with Apps	5
Use Folders	6
<b>SECTION 4: MEMORY STORAGE</b>	6
Use a Micro SD Card	6
Use USB Storage	6
Transfer Files from PC	7
<b>SECTION 5: INTERNET CONNECTION</b>	7
Connect to a Wi-Fi Network	7
Use a USB 3G Dongle	7

## SECTION 1: SAFETY INSTRUCTIONS

**CAUTION:** TO PREVENT AN ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS. THERE ARE NO USER SERVICEABLE PARTS INSIDE. REQUEST AN AUTHORIZED SERVICE PERSON TO PERFORM SERVICING. WARRANTY BECOMES VOID IF YOU TAMPER WITH THE TABLET AND/OR BREAK THE WARRANTY STICKER.

Please read all safety instructions before you use this tablet.

- Do not use this tablet near water. Do NOT use in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools. Do not use this tablet when condensation may occur.
- To clean the tablet, use a soft dry cloth. Do NOT use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with diluted detergent.
- Do not cover or block any ventilation opening. When placing the tablet on a shelf, leave 5 cm (2") free space around the whole tablet.
- Don't step on or pinch the power cable. Be very careful, particularly near the plugs and the cable's ends. Do not place heavy items on the power cable, which may damage it. Keep the tablet out of children's reach when attached to the power cable. Playing with the power cable can cause serious injury.
- Unplug this tablet during lightning storms or when unused for a long period.
- Keep the tablet away from heat sources such as radiators, heaters, stoves, candles, and other heat-generating products.
- Avoid using the tablet near strong magnetic fields.
- Avoid placing the tablet on any surfaces that may be subject to vibrations or shocks.
- If the tablet will not be used for extended period, please charge the battery at least once a month to maintain battery life.
- Do not interrupt the connection when the tablet is formatting or transferring files. Otherwise, data may be corrupted or lost.

BEFORE SENDING YOUR TABLET TO OUR SERVICE CENTER, DO NOT FORGET TO BACK UP YOUR DATA. THE SUPPLIER IS NOT LIABLE FOR ANY DATA LOSS OR DAMAGE CAUSED BY MALFUNCTION, MISUSE, AND MODIFICATION OF THE TABLET OR BATTERY REPLACEMENT.

### Disclaimer:

Actual product and packaging may not be exactly like in the manual. The screenshots shown as an example in this manual may differ from actual screen display.

## SECTION 2: GET STARTED

### Hardware Buttons and Ports



1. Power Button	Turn the tablet on or off
2. Mini HDMI Port	Connect HDMI cable to high resolution screen
3. USB Interface/Charging Port	Connect to PC to transfer files or charge the battery with power adapter
4. TF Card Slot	Increase memory with Micro SD card
5. Reset Button	Reboot the system
6. Earphone Port	Connect 3.5 mm earphone for audio
7. Camera Lens (Rear)	Capture photos and videos
8. Camera Lens (Front)	Capture photos and videos
9. Built-in Microphone and Speaker	Receive and transmit sound

### Switch the Tablet On or Off

- To turn on the tablet, press and hold the Power button for three (3) seconds.
- To turn off the tablet, press and hold the Power button for three (3) seconds, and tap OK from the Power Off menu.
- To go on standby mode or screensaver, press the Power button once. This will also put your device into screen lock mode.
- To resume use of tablet, press the Power button again and unlock the screen.
- To force shutdown, press and hold the Power button for twelve (12) seconds.

## Use the Lock Screen

To unlock the default lock screen, touch the lock icon and slide your finger to the right over the unlock icon as shown below.



Besides the slide option above, you can choose to use a pattern, PIN, or password to unlock the screen to protect your tablet data from unauthorized access.

From the Home or All Apps screen, touch the Settings icon . Scroll down and tap Security > Screen Lock > Type of lock you'd like to use. After you set your lock, the next time you turn on your tablet or wake up the screen, you must draw the pattern, or type the password or PIN to unlock it.

Screen lock options are listed in the order of their security's strength. If your tablet is playing music, video, etc. this operation continues even when the screen is locked. Pause or stop the operation to save battery life before you unlock the screen.

## Charge the Battery

There are two ways to charge the battery: via Power Adapter and PC/Notebook.

### Charge Via Power Adapter

1. Make sure that the power adapter is in good condition. The power cable should be intact and does not have any physical damage to it.
2. Connect the cable and power adapter and plug the adapter in 220v outlet.
3. Insert the other end of the cable into the charging port of the tablet.

### Charge Via PC/Notebook

1. Ensure that the PC/Notebook is running.
2. Attach the cable to the USB port of the PC/Notebook.
3. Insert the other end of the cable securely into the charging port of the tablet.

When the tablet has low battery, it will continuously give a warning. If not charged, it will automatically turn off. If you can't turn on the tablet, please check for battery/power status by trying to turn it on after 5-10 minutes of charging.

Do not use any other power adapter to avoid damaging the battery. When using the tablet for the first time, charge the battery for eight (8) hours or until 100% full. Drain the battery fully before charging again. Regular charging may take four to six (4-6) hours. Charger should not be unplugged until tablet is fully charged. Do not play music or video while connected to PC. Be aware that we claim no responsibility for any damage caused by this improper action.

A battery icon with a lightning symbol indicates that the battery is charging. A full-charged battery displays a solid white battery icon .

## SECTION 3: MAIN USER INTERFACE



Icon	Name	Description / Function
	Back	Returns to previous screen. Once you return up to the home screen, you can't go back any further in your history.
	Recent Apps	Opens a list of thumbnail images of apps you've recently used.
	Time	Shows the current time set on the tablet.
	All Apps	Displays all apps in the tablet.
	Home	Opens the central home screen.
	USB Connected	Detects USB. Tap to copy files to/from computer.
	Battery Indicator	Shows battery status: low, charging, or fully charged.
	Volume Adjustment	Decreases or increases the volume of the tablet.

### Change the Wallpaper

1. Touch and hold a blank spot on the Home screen. A setting screen will appear with two options: Wallpaper and Widget. Tap Wallpaper.
2. Select from a spectrum of wallpapers or Pick Image to choose from uploaded or captured image. Tap Set Wallpaper to confirm.

### Arrange and work with Apps

To see all your apps, touch the All Apps icon. Swipe left or right to move between screens. You can open an app by simply touching its icon.

## To add an application or widget on the Home screen:

1. From All Apps, touch and hold the desired application until the icon magnifies.
2. Drag and drop the icon to your desired location on the screen.

## To remove an application or widget from the Home screen:

1. Touch and hold the app icon or widget until the icon magnifies and drag to Remove.
2. Release your finger when the app turns red.

## To view or close recently used apps:

1. To view an app, tap Recent Apps and select the application you wish to view.
2. To close an app, tap Recent Apps and swipe the app you wish to close. Swipe up or down for landscape orientation: left or right for portrait orientation.

## Use Folders

### To create folder:

1. Touch and drop one icon over another application.
2. Name the folder using the on-screen keyboard.

### To delete folder:

1. Touch and hold the app icon or widget until the icon magnifies and drag to Remove.
2. Release your finger when the app turns red.

## SECTION 4: MEMORY STORAGE


### Use a Micro SD Card

1. To install, gently insert the SD card on the TF Card Slot. When the notification saying "Preparing mass storage" is gone, the SD card is ready for use.
2. To eject, go to Settings > Storage > Unmount storage (Under SD Card) > OK. When the indicator "Storage safe to remove" appears, gently press the SD Card from the TF Card Slot to remove from the tablet.

### Use USB Storage

1. To install, connect the USB adapter to the tablet and the other end to the USB flash drive. When the notification "Preparing mass storage" is gone, the USB storage is ready to use.
2. To remove, go to Settings > Storage > Unmount storage (Under USB) > OK. When the indicator "Storage safe to remove" appears, you may remove the USB.

To view the contents of your SD card or USB, tap the Explorer icon in All Apps. Tap SD card or USB storage to see the sub file list.

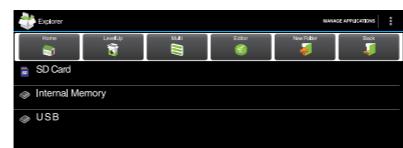

To copy, delete, move, paste, rename, send, or create shortcut for files or folders from your SD card or USB, touch and hold the file or folder until a list of options appear.


## Transfer Files from PC

1. Make sure the PC is running and attach the cable securely to its USB port and the other end into the charging port of the tablet.
2. Tap USB Connected notification in the Status Bar. Select Turn on USB storage then tap OK.
3. Once your PC detects the device, go to "Computer" for Windows and "Finder" for Mac, and copy or move files and folders from your PC to the tablet.

## SECTION 5: INTERNET CONNECTION

### Connect to a Wi-Fi Network

1. To connect, go to Settings > Wireless & Networks > slide the Wi-Fi tab to ON. Choose from a list of hotspots where you want to connect as shown below.

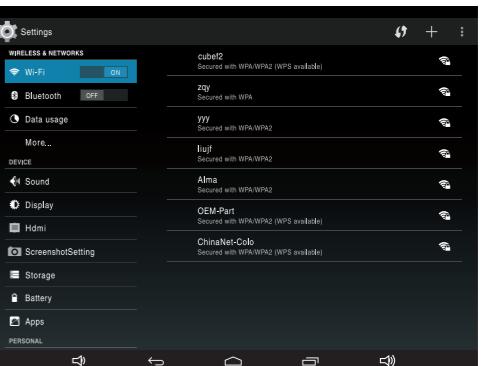

If you select an open network, you will be automatically connected. If you select a network that is secured with WEP, a password will be required to connect.

2. To disconnect, slide the Wi-Fi tab to OFF.

### Use a USB 3G Dongle

Insert the USB Dongle through the OTG cable into the USB host port. Wait a few minutes until a 3G icon appears to connect to the Internet.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

**FCC RF Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.