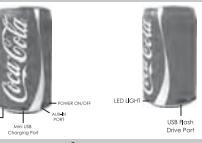


 <p>BLUETOOTH CAN SPEAKER</p>  <p>CC-BCS-DRB</p> <p>Operation manual</p> <p>Please read the manual before operating this product.</p> <p>M&S Accessory Network declares that radio equipment CC-BCS-DRB is in compliance with Directive 2014/53/EU.</p> <p>The EU Declaration of Conformity is available at https://gabagoods.com/pages/compliance-documents</p>	<p>Contents</p> <table border="0"> <tr><td>1</td><td>1 Introduction</td></tr> <tr><td>2</td><td>2 Package Contents</td></tr> <tr><td>3</td><td>3 Product Diagram</td></tr> <tr><td>4</td><td>4 How to Use</td></tr> <tr><td>4.1</td><td>4.1 General Functions</td></tr> <tr><td>4.2</td><td>4.2 Pairing to a mobile phone</td></tr> <tr><td>4.3</td><td>4.3 Charging your speaker</td></tr> <tr><td>4.4</td><td>4.4 Playing music from a USB flash drive</td></tr> <tr><td>4.5</td><td>4.5 Playing music from an SD card</td></tr> <tr><td>4.6</td><td>4.6 Playing music from a Bluetooth device</td></tr> <tr><td>4.7</td><td>4.7 Playing music from a PC or Laptop</td></tr> <tr><td>5</td><td>5 Product Specifications</td></tr> <tr><td>6</td><td>6 FAQ</td></tr> <tr><td>7</td><td>7 Including a 3.5mm audio cable</td></tr> </table> <p>Compatible with all Bluetooth® enabled devices</p> <p>The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.</p> <p>COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and its affiliates. © 2014 The Coca-Cola Company. All rights reserved. Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.</p>	1	1 Introduction	2	2 Package Contents	3	3 Product Diagram	4	4 How to Use	4.1	4.1 General Functions	4.2	4.2 Pairing to a mobile phone	4.3	4.3 Charging your speaker	4.4	4.4 Playing music from a USB flash drive	4.5	4.5 Playing music from an SD card	4.6	4.6 Playing music from a Bluetooth device	4.7	4.7 Playing music from a PC or Laptop	5	5 Product Specifications	6	6 FAQ	7	7 Including a 3.5mm audio cable	<p>1. Introduction</p> <p>Thank you for purchasing the Coca-Cola Bluetooth Can Speaker! In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!</p> <p>Safety Rules</p> <table border="0"> <tr><td>1</td><td>Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.</td></tr> <tr><td>2</td><td>Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.</td></tr> <tr><td>3</td><td>Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.</td></tr> <tr><td>4</td><td>Do not use any diluent or volatile liquid to clean the product.</td></tr> <tr><td>5</td><td>Do not use the product in a hazardous location.</td></tr> </table> <p>1. Introduction</p> <p>Thank you for purchasing the Coca-Cola Bluetooth Can Speaker! In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!</p> <p>Safety Rules</p> <table border="0"> <tr><td>1</td><td>Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.</td></tr> <tr><td>2</td><td>Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.</td></tr> <tr><td>3</td><td>Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.</td></tr> <tr><td>4</td><td>Do not use any diluent or volatile liquid to clean the product.</td></tr> <tr><td>5</td><td>Do not use the product in a hazardous location.</td></tr> </table>	1	Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.	2	Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.	3	Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.	4	Do not use any diluent or volatile liquid to clean the product.	5	Do not use the product in a hazardous location.	1	Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.	2	Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.	3	Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.	4	Do not use any diluent or volatile liquid to clean the product.	5	Do not use the product in a hazardous location.	<p>2. Package Contents</p>  <p>3. Product Diagram</p> 	<p>4. How To Use</p> <p>4.1 General Functions</p> <p>Desired Result</p> <p>Required Action</p> <table border="0"> <tr><td>Turn on/off</td><td>Turn on/off the speaker by using the on/off position to the right</td></tr> <tr><td>Charging port</td><td>Plug in the end of the USB charging cable into a PC or Laptop. Ensure an AC power source is connected to the speaker. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly.</td></tr> <tr><td>Bluetooth</td><td>Pair the speaker to a Bluetooth device. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly. Turn on the device and set the device to search for a Bluetooth device. Once the device is found, select "Coca-Cola Speaker" from the list. If the device is paired, a voice prompt will tell you if the pairing is successful.</td></tr> <tr><td>Play/Pause (Center of the wheel)</td><td>Short Press in the center of the wheel to play/pause the music. While playing music, press in the Play/Pause button or double press the center of the wheel to stop the music.</td></tr> <tr><td>Micro SD card slot</td><td>Twist the wheel to the right to skip to the right to lower the volume of the speaker. Turn the wheel to the left to skip to the previous track. Slide and hold the wheel to the right to increase the volume of the speaker.</td></tr> <tr><td>USB Flash Drive</td><td>Insert your Micro SD card. Make sure that it contains MP3 music. This speaker will play music from the SD card. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a Micro SD card inserted, it will switch to that mode automatically.</td></tr> <tr><td>AUX port</td><td>Insert your USB Flash Drive. Be sure that it contains MP3 music. This speaker will play music from your USB Flash Drive. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a USB Flash Drive already inserted, it will switch to that mode automatically.</td></tr> </table>	Turn on/off	Turn on/off the speaker by using the on/off position to the right	Charging port	Plug in the end of the USB charging cable into a PC or Laptop. Ensure an AC power source is connected to the speaker. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly.	Bluetooth	Pair the speaker to a Bluetooth device. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly. Turn on the device and set the device to search for a Bluetooth device. Once the device is found, select "Coca-Cola Speaker" from the list. If the device is paired, a voice prompt will tell you if the pairing is successful.	Play/Pause (Center of the wheel)	Short Press in the center of the wheel to play/pause the music. While playing music, press in the Play/Pause button or double press the center of the wheel to stop the music.	Micro SD card slot	Twist the wheel to the right to skip to the right to lower the volume of the speaker. Turn the wheel to the left to skip to the previous track. Slide and hold the wheel to the right to increase the volume of the speaker.	USB Flash Drive	Insert your Micro SD card. Make sure that it contains MP3 music. This speaker will play music from the SD card. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a Micro SD card inserted, it will switch to that mode automatically.	AUX port	Insert your USB Flash Drive. Be sure that it contains MP3 music. This speaker will play music from your USB Flash Drive. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a USB Flash Drive already inserted, it will switch to that mode automatically.	<p>4.2 Pairing to a Smart Device:</p> <p>To use your Bluetooth Can Speaker you must first pair your speaker with a smart device. Once your Bluetooth speaker is paired with a smart device, they will remain paired and automatically recognize each other whenever they are in range.</p> <p>Pairing to a Bluetooth® Enabled Smart Device</p> <ul style="list-style-type: none"> On your smartphone/device be sure that the Bluetooth is powered on. Power on the speaker and you will hear the following voice prompt "Bluetooth pairing mode"; the LED light will begin to flash blue rapidly. Open the Bluetooth connection settings on your device be sure that the Bluetooth is turned on, and your device will start to search for the speaker. Once you see the "Coca-Cola speaker" in your device list, click on it to connect. Once connected successfully you will hear a voice prompt, "The Bluetooth device is connected successfully".
1	1 Introduction																																																																		
2	2 Package Contents																																																																		
3	3 Product Diagram																																																																		
4	4 How to Use																																																																		
4.1	4.1 General Functions																																																																		
4.2	4.2 Pairing to a mobile phone																																																																		
4.3	4.3 Charging your speaker																																																																		
4.4	4.4 Playing music from a USB flash drive																																																																		
4.5	4.5 Playing music from an SD card																																																																		
4.6	4.6 Playing music from a Bluetooth device																																																																		
4.7	4.7 Playing music from a PC or Laptop																																																																		
5	5 Product Specifications																																																																		
6	6 FAQ																																																																		
7	7 Including a 3.5mm audio cable																																																																		
1	Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.																																																																		
2	Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.																																																																		
3	Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.																																																																		
4	Do not use any diluent or volatile liquid to clean the product.																																																																		
5	Do not use the product in a hazardous location.																																																																		
1	Please follow the rules depicted in this manual. Please read the entire manual. Before using the product we would strongly encourage you to read through the entire manual.																																																																		
2	Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging which can prevent any injury or damage.																																																																		
3	Do not modify, alter or tamper with the product. Doing so may result in fire, electric shock, complete breakdown of the product and/or personal injury which are not covered under warranty.																																																																		
4	Do not use any diluent or volatile liquid to clean the product.																																																																		
5	Do not use the product in a hazardous location.																																																																		
Turn on/off	Turn on/off the speaker by using the on/off position to the right																																																																		
Charging port	Plug in the end of the USB charging cable into a PC or Laptop. Ensure an AC power source is connected to the speaker. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly.																																																																		
Bluetooth	Pair the speaker to a Bluetooth device. Turn on the speaker by using the on/off position to the right. The LED light will begin to flash blue rapidly. Turn on the device and set the device to search for a Bluetooth device. Once the device is found, select "Coca-Cola Speaker" from the list. If the device is paired, a voice prompt will tell you if the pairing is successful.																																																																		
Play/Pause (Center of the wheel)	Short Press in the center of the wheel to play/pause the music. While playing music, press in the Play/Pause button or double press the center of the wheel to stop the music.																																																																		
Micro SD card slot	Twist the wheel to the right to skip to the right to lower the volume of the speaker. Turn the wheel to the left to skip to the previous track. Slide and hold the wheel to the right to increase the volume of the speaker.																																																																		
USB Flash Drive	Insert your Micro SD card. Make sure that it contains MP3 music. This speaker will play music from the SD card. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a Micro SD card inserted, it will switch to that mode automatically.																																																																		
AUX port	Insert your USB Flash Drive. Be sure that it contains MP3 music. This speaker will play music from your USB Flash Drive. Turn the wheel to the right to increase the volume of the speaker. If you power on the speaker with a USB Flash Drive already inserted, it will switch to that mode automatically.																																																																		

<p>4.3 Charging your Speaker</p> <p>Use the Mini USB cable provided with this speaker. Connect the Mini USB end of the cable into the Mini USB charging port on the Coca-Cola Speaker. Connect the USB end of the cable to a USB port on a PC/Laptop or wall adapter to activate charging. The LED light will turn Red indicating that the speaker is being charged, and turn off once the speaker is fully charged.</p> <p>*Make sure to charge the speaker for a minimum of 3 hours before initial use.</p> 	<p>Hands free Function:</p> <p>1. Enjoy hands free calling with the Speaker when connected to the Bluetooth on your smart device. When you receive an incoming calls, it will voice prompt the incoming phone number.</p> <p>2. Short click PLAY/PAUSE to answer the phone call</p> <p>3. Short click PLAY/PAUSE to end the phone call</p> <p>4. If you want to reject the call double click the PLAY/PAUSE</p> <p>5. Product Specifications</p> <table border="0"> <tr><td>Material:</td><td>ABS</td></tr> <tr><td>Speaker Power Output:</td><td>3 watts</td></tr> <tr><td>Impedance:</td><td>4 ohms</td></tr> <tr><td>Frequency Response:</td><td>180Hz-18KHz</td></tr> <tr><td>Bluetooth® Version:</td><td>V5.3</td></tr> <tr><td>Battery Capacity:</td><td>Lithium Ion: 300mAh</td></tr> <tr><td>Charge Type:</td><td>3.7-volts: Via Mini USB Cable</td></tr> <tr><td>Net weight:</td><td>130g S/N: >65db</td></tr> </table>	Material:	ABS	Speaker Power Output:	3 watts	Impedance:	4 ohms	Frequency Response:	180Hz-18KHz	Bluetooth® Version:	V5.3	Battery Capacity:	Lithium Ion: 300mAh	Charge Type:	3.7-volts: Via Mini USB Cable	Net weight:	130g S/N: >65db	<p>6.FAQ</p> <p>1. Why is there no power even when the Speaker is turned on?</p> <p>Ans: Ensure the battery has been charged up to 3-4 hours for initial use.</p> <p>2. There is no sound during playback.</p> <p>Ans: Check the connection between the speaker and the phone or computer, if the connection is not established, please connect again. Make sure the speaker is paired with your Bluetooth enabled device.</p> <p>UP TO 3-4 HRS PLAYTIME</p> <p>7</p>	<p>Support</p> <p>If you have problems with your device, please consult the instructions in this manual.</p> <p>Manufacturer Warranty</p> <p>We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com</p> <p>CC-BCS-DRB</p>  <p>Designed in the U.S.A. Made In China Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001 Designed in the U.S.A. Made in China. For support call: (877) 995-8505 or Email: info@mnsbrands.com</p> <p>www.mnsbrands.com</p> <p>8</p>	<p>FCC Compliance Statements</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>5</p> <p>6</p> <p>7</p> <p>8</p> <p>9</p> <p>10</p>
Material:	ABS																			
Speaker Power Output:	3 watts																			
Impedance:	4 ohms																			
Frequency Response:	180Hz-18KHz																			
Bluetooth® Version:	V5.3																			
Battery Capacity:	Lithium Ion: 300mAh																			
Charge Type:	3.7-volts: Via Mini USB Cable																			
Net weight:	130g S/N: >65db																			