

Truebuds - INSTRUCTION MANUAL

11.8" W



True Wireless Earbuds



CC-BTWS
Operation Manual

Please read the manual before operating this product

M&S Accessory Network declares that radio equipment CC-BTWS is in compliance with Directive 2014/53/EU.

The EU Declaration of conformity is available at <https://gabbagoods.com/pages/compliance-documents>

Introduction

Thank you for purchasing these Coca-Cola True Wireless Earbuds (TrueBuds). To get the best use of this item, please read the user manual to make yourself familiar with the features and functions.

Safety Rules

- 1 Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
- 2 Be wary of any edges, uneven surfaces, metal parts, accessories, and its packaging to prevent any possible injury or damage.
- 3 Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
- 4 Do not use any diluent or volatile liquid to clean the product.
- 5 Do not use the product in a hazardous location.

TrueBud Touch Functions

Function	Command
Play/Pause	Short Press
Increase Volume	Triple press RIGHT earbuds
Decrease Volume	Triple press LEFT earbuds
Next Song	Double press RIGHT earbuds
Last Song	Double press LEFT earbuds
Receive Incoming Call	Short Press
Hang Up	Short Press
Reject a call	Long Press for 2 Seconds

You can also use your smart device to control the volume of your TrueBuds

Package Contents



Turning ON/OFF & Pairing

To turn ON

The TrueBuds will be turn on when they are removed from the charging case. If not press and touch both TrueBuds for 3 seconds.

To turn OFF

Place TrueBuds back into the charging case and close the top. You can also press and touch the TrueBuds for 5 seconds to power them off.

To Pair TrueBuds

When you remove the TrueBuds from the charging case they will automatically pair to each other and you will hear a voice prompt "Connected". Now they are ready to be paired with your device.

Charging

Place the TrueBuds into the charging case and use the supplied charging cable in order to start charging. Plug the Type-C end into the charging port on the case and plug the USB into a PC or wall adapter to start charging.

While charging the charging case's LED light will flash red. Once it is fully charged the LED light will turn red.

When charging the TrueBuds the LED light will turn red and the LED will power off once fully charged.

*Before initial use it is recommended to charge TrueBuds for a minimum of 3 hours.

Low Battery

When battery level is low you will hear a prompt through the earbuds every 30 seconds and the indicator light will flash red every 5 seconds.

TrueBud Touch Functions

Function	Command
Play/Pause	Short Press
Increase Volume	Triple press RIGHT earbuds
Decrease Volume	Triple press LEFT earbuds
Next Song	Double press RIGHT earbuds
Last Song	Double press LEFT earbuds
Receive Incoming Call	Short Press
Hang Up	Short Press
Reject a call	Long Press for 2 Seconds

You can also use your smart device to control the volume of your TrueBuds

Specifications

Model: TrueBuds
Bluetooth Version: 5.3
Bluetooth Range: 10 meters
Playback Time: 3 Hours
Charging Time: 1 Hour
Standby Time: 100 Hours



COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved. Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.

Compatible with all Bluetooth enabled devices.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Support

If you have problems with your device, please consult the instructions in this manual.

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com

CC-BTWS

Manufactured, marketed, and distributed Under License by M&S Accessory Network Corp, 10 W. 33rd St, New York, NY 10001

Designed in the U.S.A | Made in China.

For support call: (877) 995-8505 or Email: info@mnsbrands.com







www.mnsbrands.com



6.7" H