

7" Dual SIM Tablet

Model Number: HQ Neptune 7.0

INSTRUCTION MANUAL

Contents

Welcome	3
General Safety Instructions	4
Product Overview	5
Getting Started	
• Before first use, Micro SD Card, Inserting the SIM card(s) and battery	8
• Charging, Buttons, Switch on/off, Turn on/off the screen	9
• Linking with your Google account	10
• SIM management	11
Operation	12
• Screen operation	12
• Phone calls	16
• Applications and widgets	20
• Add and manage desktop icons	21
• Connect with computer	23
• Get and install applications	23
• Uninstall applications, Play Store and calendar error messages	24
Settings	25
• Wireless and networks	25
• Bluetooth	27
• Device	28
• Personalisation	30
• System, Camera, Downloaded files management	34
• Radio	35
Specifications	36

Welcome

Congratulations on choosing to buy a product.

All products brought to you by are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service. We hope you will enjoy using your purchase for many years to come.

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Handling and maintenance

- **Water:** Ensure that this product does not get wet, protect it from water splashes, rain, excessive humidity and sweat. Contact with water will cause the tablet to short-circuit, corrode or cause electric shock. Do not use it where it can fall into water (such as near a pool, pond, bath etc.). Do not use it with wet hands. Do not immerse it in water. Do not turn it on if it is wet. Do not try to dry it in a microwave oven.
- **Handling:** To avoid damaging the tablet, battery or charger, do not drop it or shake it vigorously as this may cause device or battery failure, fire or explosion.
- **Repair:** This device is a high precision electronic product. It contains no user-serviceable parts inside. Do not try to dismantle, modify or repair the device or charger yourself. Any modifications could void your warranty.

Usage environment

- **Environment:** Do not use this product where it is excessively hot, cold, dusty or humid, or where it is exposed to strong magnetic fields or long periods of sunshine. Exposure to very low or very high temperatures may cause device or battery failure, fire or explosion.
- **Heat sources:** Do not leave the product near any heat sources, stoves, ovens or other appliances (including amplifiers) that produce heat.
- **Interference:** Do not use the Tablet near other electronic devices that use radio frequency signals. Avoid using it within a 15cm range of a pacemaker (if you have a pacemaker, do not carry the Tablet in a breast pocket).

Safety

- **Road safety:** Obey all local laws and regulations on the use of mobile devices in the area where you drive. Give full attention to driving and the road. Keep your hands free to operate the vehicle at all times; use hands-free operation or an earpiece if Tablet usage is required.
- **Health facilities:** Observe relevant rules or regulations regarding tablet use in health facilities. Turn off the tablet in the vicinity of medical devices and wherever directed to do so by posted signs. Mobile phone radiation may interfere with pacemakers, hearing aids and other medical equipment.
- **Aircraft:** Turn off the MID when boarding an airplane in order to avoid interference with aircraft radio signals.
- **Magnetic equipment:** Stay away from magnetic equipment to avoid the risk of interfering with or erasing the information stored on the device.
- **Volume:** Always select the appropriate volume when using the music or video function. The volume should not be too loud when using earphones.
- **Explosive environments:** Turn off the tablet in blasting areas and in any potentially explosive environment (such as at a petrol station or other refuelling points).
- **Back-up:** To avoid loss of data, we recommend always backing up any important information, especially before upgrading the hardware. We assume no liability for any damage and/or data loss due to lack of back-up.
- **Flashlight:** Do not use the flashlight close to the eyes of people or pets.

Accessories

- **Accessories:** Only use the device with the Micro USB cable and battery charger supplied. Use of other accessories not recommended in this manual may cause damage to the unit and void your warranty.
- **Battery charger:** Only use the charger provided. Do not use the tablet while it is charging. Do not drop or cause an impact to the charger.

General Safety Instructions (Cont.)

- **Battery handling:** Do not expose the battery to high temperatures. Take care when handling a charged battery, particularly when placing it inside your pocket, purse or other container with metal objects.
- **Power cord:** Do not bend or damage the cable of the battery charger.
- **Damage:** Do not use the charger if the cable or plug are damaged. In case of damage, contact the after sales support line for advice.
- **Disconnect:** Grip the plug when disconnecting the charger; do not pull on the cord.
- **Memory card:** Always handle the tablet's memory card(s) with care. Protect the card(s) from static electricity and strong shocks.

Usage conditions and restrictions

- **Packaging:** Plastic packaging materials can present a suffocation hazard for young children and babies. Keep all packaging materials out of children's reach to ensure they do not play with these.
- **Personal usage:** Do not use this product for anything other than its intended purpose, and only use it as described in this manual.
- **Restricted usage:** The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety.
- **Children:** This tablet is not a toy. Keep the tablet, battery and charger away from young children. Supervise young children when the tablet is going to be used by or near young children.
- **Cleaning:** Clean the housing of the device lightly with a dry cotton cloth. Do not use alcohol, thinners, benzene or any other chemical cleaning solutions.
- **Disposal:** When discarding this device, observe local regulations and dispose of it appropriately for recycling. Never dispose of the battery in a fire. Contact your local authorities for advice on facilities.
- **Noncompliance:** We accept no liability for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

Abbreviations / Terminology


Wi-Fi	Wireless Fidelity
BT	Bluetooth
SD card	Secure Digital Flash Memory Card
SIM card	Subscriber Identity Module (Mobile Service Card)

Product Overview



- 1 **Power Button**
- 2 **Volume Up / Down**
- 3 **Earpiece**
- 4 **Front Camera**
- 5 **Back/Return**
- 6 **Home**
- 7 **Recent Apps/Options Menu**

Product Overview (Cont.)

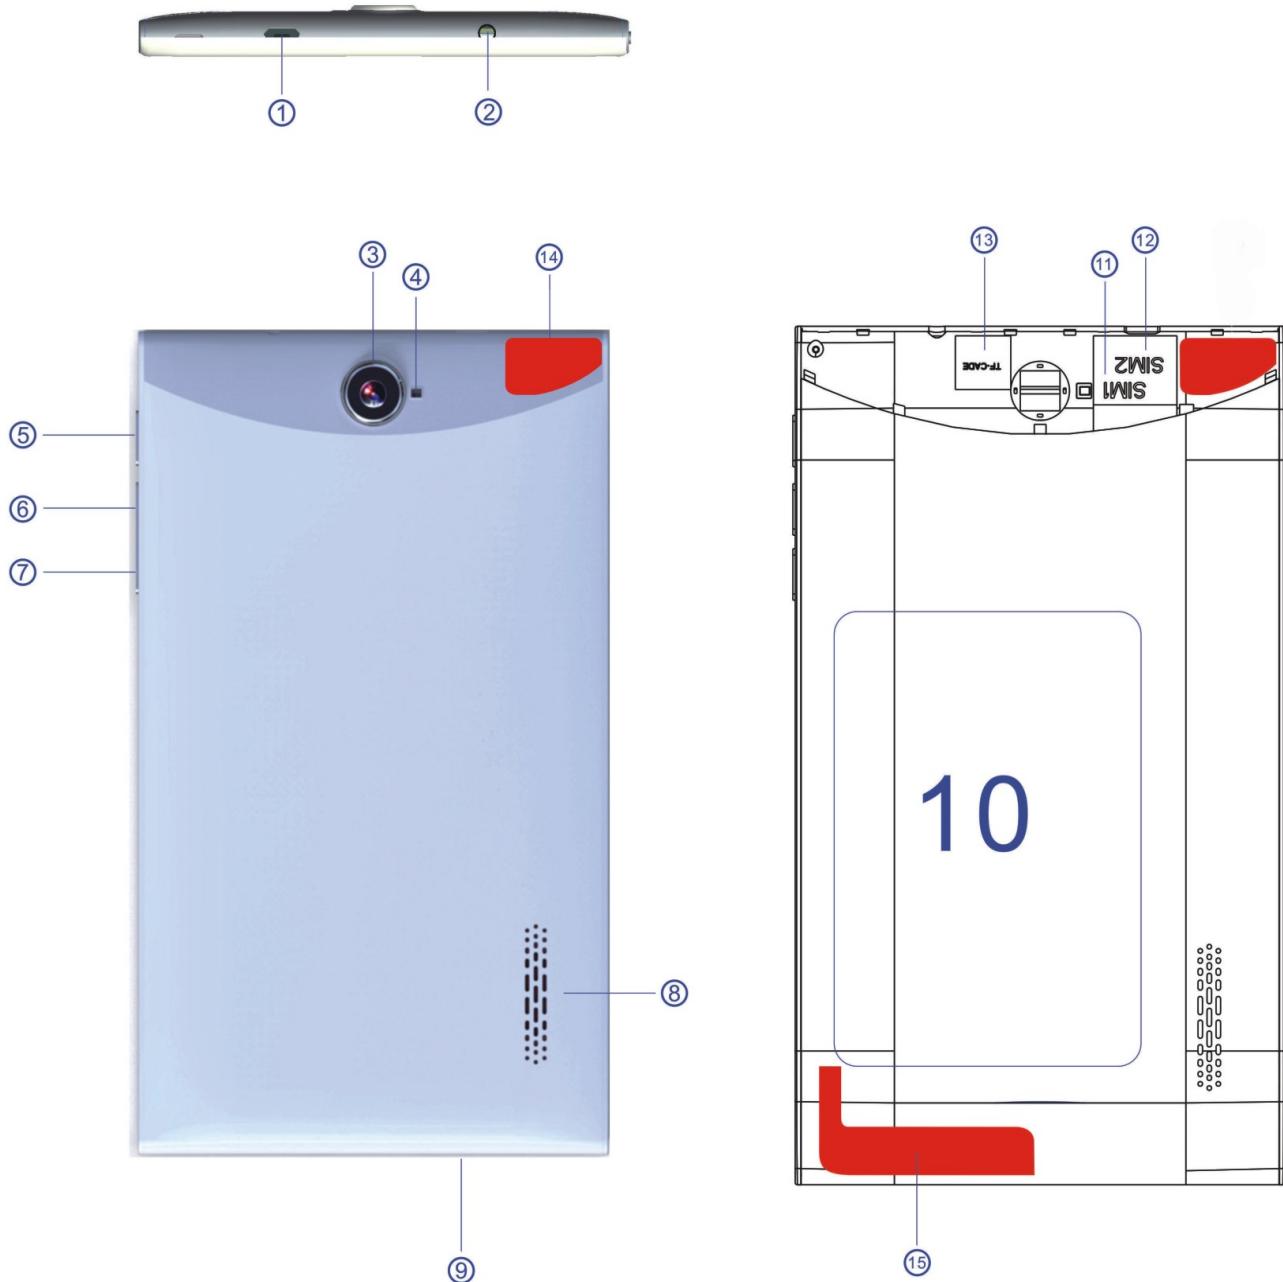

- | | |
|---------------------------|------------------------------------|
| 1 3.5mm Hands Free Socket | 8 Loud Speaker |
| 2 USB Slot | 9 Microphone |
| 3 Rear Camera | 10 Battery Bay |
| 4 Camera Flash | 11 Supports 2G (Micro SIM Card) |
| 5 Power Key | 12 Supports 2G/3G (Micro SIM Card) |
| 6 Volume + | 13 SD Card Slot |
| 7 Volume - | 14 Wi-Fi / Bluetooth Antenna |
| | 15 GSM Antenna |

Getting Started

Before first use

- Unpack the product but keep all packaging materials until you have made sure your new MID is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Unwind the USB cable and battery charging adaptor and inspect them for damage. Do not use the cables or the charger if any part is damaged. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product
- Read this manual to familiarise yourself with all the features and operating principles of your new MID. Pay particular attention to the safety instructions on the previous pages.


Micro SD Card

- Your MID is compatible with Class 10 Micro SD cards, up to 32GB in capacity.
- Power off your MID, then insert your Micro SD card into the SD slot on the rear of the tablet, making sure the gold contacts are facing to the front of the tablet.
- To remove the SD card, power off and remove the battery, then gently pull the SD card out.

SIM Card (2G/3G)

- Your new tablet is compatible with 'Micro' sized SIM cards.

Note: SIM card size adaptors should not be used as they may cause damage or become stuck.

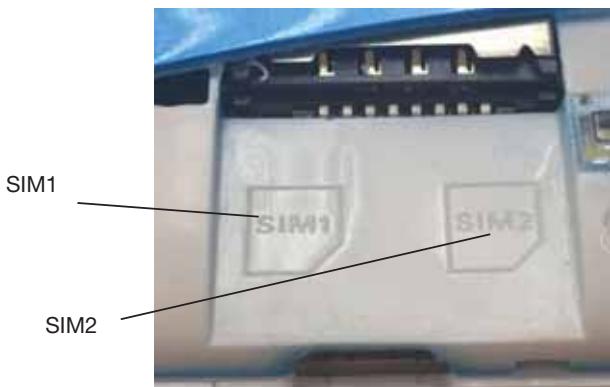

Inserting the SIM card(s)

- Insert your SIM card(s) into the dedicated bays. Bay number (2) supports 3G and 2G; bay number (1) supports 2G only. If required, insert a micro SD card into its dedicated space.
- Reinstall the back cover. It will lock into place.

NOTE: Some SIM cards require a PIN number to be entered before use (see page 14 for details). This PIN may be printed on the SIM card packaging, or you may have to contact your service provider for the number.

Getting Started (Cont.)

Charging

The battery has been partially charged at the factory. To perform all functions, we recommend you fully recharge it as follows:

- **To charge the device with the battery charger**, plug the large end of the USB cable into the charging adaptor and the smaller end into the micro USB port on the MID. Plug the charger into your mains power supply.
- **To charge the device using the USB cable and computer**, plug the large end of the USB cable into a USB port on your computer and the smaller end into the micro USB port on the MID. Ensure your computer is turned on.
- When the tablet indicates a full charge (the battery status icon is located in the top right corner of the display), disconnect the charger or USB cable.
- Follow one of these charging procedures whenever your MID indicates a low battery charge.

Switch on/off

Power button

- Long press to turn on.
- When in power-on state, press to turn on or off the screen.
- When in power-on state, long press to display the power off menu.

NOTE: If tablet becomes unresponsive, press the reset key, and power on the tablet

Switch on

- While in power-off state, press and hold the power button for 2 seconds and the device will start up.

Switch off

- Press and hold the power button for 2 seconds: an options list will appear on the screen.
- Choose to switch off the device.

Turn on/off the screen

The screen will automatically turn off when in idle time

- After a period of inactivity the screen will automatically turn off to save battery power. This can be set using the “Sleep” setting from the display menu in the device settings menu.

Turn on the screen

- If the screen is off, press the power button to turn it back on.

Volume

- To adjust the ringer volume, press the Volume Up or Volume Down buttons on the right side of the MID to the desired level. While adjusting the ringer volume, a window will appear on the screen displaying the volume levels.

Getting Started (Cont.)

Linking with your Google account

When you turn on the tablet for the first time, you can sign in to your Google Account so you can synchronise Gmail/Google Mail, Calendar and Contacts between your tablet and the web. You also need to sign into a Google Account to use Google Apps such as Google Talk™ and Play Store.

- On your tablet go to “Settings” and tap ‘Add Account’>’Google’>’Existing’.
- Tap “Sign in”, enter your user name and password and then tap “Sign in”. After signing in, all emails, contacts, and calendar events on your Google Account will automatically synchronise with your tablet.

NOTE: Tap “Create” if you do not have a Google Account yet.

Google Account password

If you cannot remember your Google Account password, follow the steps below to retrieve it:

- On your computer, open your browser and go to <http://google.com/accounts>.
- On the right side of the page, tap “I cannot access my account”.
- In the “Please select your issue” section, select “I forgot my password”.
- Tap “Reset your password now”, and then follow the procedure on how to recover your password.

Getting Started (Cont.)

SIM management

This MID can be used with two SIM cards: When you have two SIM cards inserted, you can choose to use either SIM1 or SIM2, or both of them. Unless you have determined use of one particular SIM card as your default card in the settings, you will be prompted to choose an appropriate SIM card every time you want to make a call or send a message.

NOTE: Only SIM card bay number 1 supports 3G data connection.

SIM Information

Tap the check box to choose enable or disable a SIM card, or tap a SIM card to change its information.

Default SIM

You could choose the default SIM card for your voice calls, video calls, messages or connection.

General settings

You could change roaming settings or associate contacts with a specific SIM.



Operation

Screen operation

Click / Short Press	When using the on-screen keyboard, opening an application or selecting items
Long Press	Press and hold for several seconds on an item (such as a text box or web page link) to display the action or submenu for an item, if available.
Slide or Rapid Slide	Sliding or fast sliding means vertical or horizontal drag action.
Drag	When dragging, you must hold the icon with your finger and keep pressure until it reaches destination.
Display Rotation	For most of the screens, the content will change between landscape and portrait mode, according to the device orientation.

Unlocking the main screen

- Drag the lock to the right side to unlock the screen.
- After unlocking the screen, you will see the last item you had open or the main screen, which has five windows or pages. You can view the pages by dragging your finger left and right across the screen.
- To return quickly to the main screen, press the Home button.

Operation (Cont.)

Screen buttons

There are three buttons at the bottom of the screen. No matter what functions you are using, you can return to the last page or main screen by using these buttons.

Button	Name	Description
	Back	Go to the last page (even in another application). When returned to the main screen, you cannot go to the last page again.
	Home	<ul style="list-style-type: none">One key to return to the main page (the middle page among the five pages)
	Recent applications (Options menu)	<ul style="list-style-type: none">Display a list of recently used applications/background applicationsLong press to display options/settings menu when in apps

Icons	Description
	From left to right: Wi-Fi Signal Status, SIM Signal Status, Battery Status, current time (depends on current applications).
	Click to display a list of all applications and widgets.
	Click to search for a file or application on the MID, or to search the internet.

Operation (Cont.)

Notifications

The notification bar shows you at a quick glance the status of your tablet. It can be expanded to show more information and quick access to settings.

Notification icons inform you of the receipt of new messages, calendar events, set alarms and ongoing settings for things such as active call forwarding or the current call status. Below is a description of their meanings. Click on the column box to open the notification list.

Expanding and closing the notifications panel

- To expand the notifications bar to see all the options, place your finger on the notification bar then swipe/drag in a downward motion.
- To hide the notification bar, press the back button.

	File being downloaded		Bluetooth
	Connected with PC		Wi-Fi connected
	GSM signal		Common notification
	Alarm clock on		Charging
	Uploading/downloading		To-do events
	Data Synchronisation		3G

Operation (Cont.)



Phone calls

Making a call

You can make a phone call a number of different ways.

Calling using the dialler



- Tap  (call/phone) at the bottom of the screen to enter the dialler screen.
- In dialler mode, when you input a number, you have two options to make a call.
 1. Directly tap "Call" on the keyboard and then choose which SIM card you want to use (if you have two SIM cards inserted).
 2. Slide to the right to choose the number in your call history.

NOTE: * If you have only one SIM card inserted, you cannot use another SIM card to make a call. When one SIM card is used for a call, the other is temporarily unavailable.

Calling a phone number in a text message

While viewing a text message, you can place a call to a number that is in the body of the message.

- Tap the message with the phone number.
- Tap the number you want to call on the "Select action" screen. The dialler screen then opens with the phone number automatically filled in and ready to be dialled.
- To place the call, tap "Call" (and select the SIM card you want to use, if appropriate).

Calling a phone number in contacts

- To call a number from your contacts, enter the contacts list and select the contact, then tap the "Call" icon behind the number you want to call.

Making an emergency call

- Dial the appropriate emergency number (e.g. 911 in America), and then tap "Call".
- If your phone is locked with a pass code, you may still be able to make an emergency call. On the "Enter pass code" screen, tap "Emergency call", then enter the emergency number and tap the call button.

Operation (Cont.)

Incoming phone calls

- **Receiving a phone call from a contact:** When you receive a phone call from a contact, the incoming call screen appears, displaying the caller ID icon, name and phone number of the calling party.
- **When you receive a phone call from someone else** (whose contact details are not stored in your contacts), only the default caller ID icon and phone number will appear on the incoming call screen.

Answering a call

Slide the “Call” icon across the screen to answer an incoming call.

Rejecting a call

Slide to the “End call” icon to reject.


Muting the ring sound

To mute the ring sound without rejecting the call, press the Volume Down button or Power button. You can also mute the ring sound by first tapping “Menu”, then “Mute”.

In-call options

When a call is in progress, you can still operate key options. Tap the available buttons to put a call on hold, dial another contact for a phone conference, mute the phone microphone, and more.

NOTE: When the phone is dialling, only the “End call” and “Speaker on” icons are available.

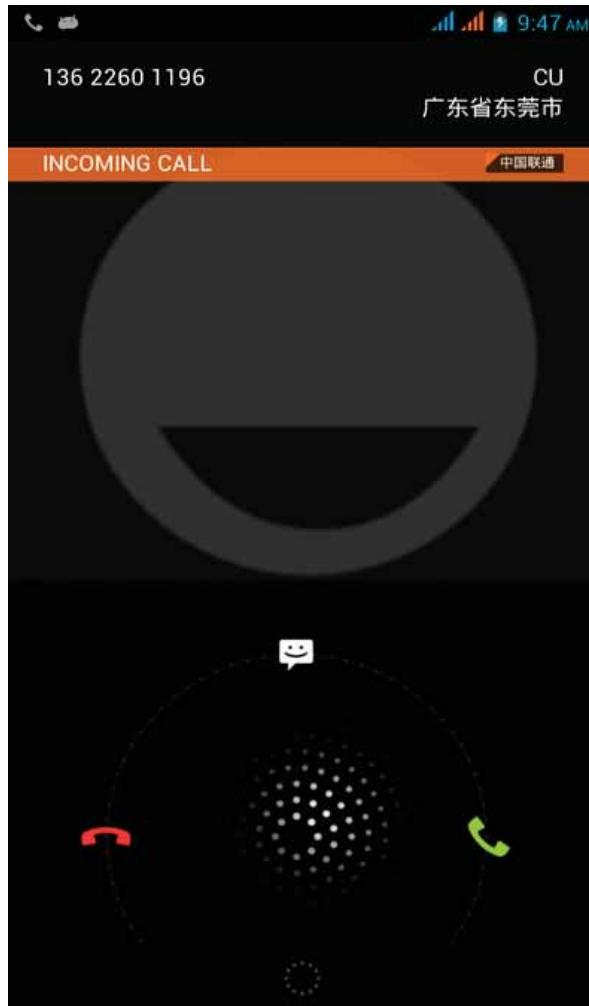

Operation (Cont.)

Muting the microphone

- Tap “Mute” to turn the microphone on or off. When the microphone is turned off, the “Mute” icon appears in the status bar.

Putting a call on hold

- Tap “Hold” to put the call on hold. When you put a call on hold, the “Hold call” icon appears in the status bar. Tap “Unhold” to resume the call.

Turning the speakerphone on/off

- When you are on a call, tap “Speaker” to toggle between turning the speakerphone on or off. The “Speakerphone” icon appears in the status bar when the speakerphone is on.
- **WARNING!** Protect your hearing! Do not hold the phone against your ear when the loudspeaker is turned on.

Ending a call


You have two options to end a call:

- Tap “End call”.
- If you are using a wired headset, press and hold the button to end the call.

Video calls

Use this function when you want to see as well as hear the person you are phoning, if that person's mobile phone supports this function.

NOTE: Not all mobile phones and networks support video calling. Contact your service provider for details. Video calling may incur extra charges.

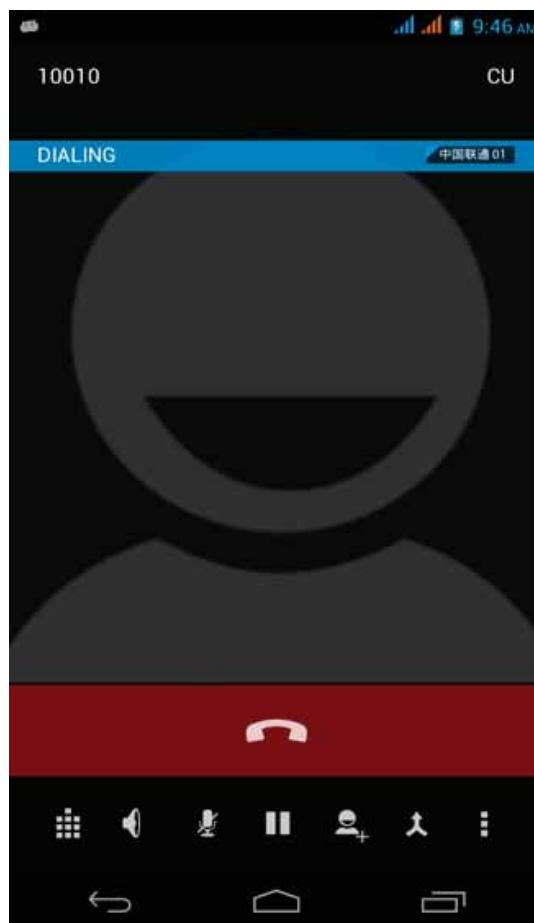


Operation (Cont.)

Call log tab

Enter the dial number and slide to the right to the call log. Then select to:

- Tap the name or number in the list to phone the contact.
- Tap the contact icon of a name or number in the list to display the options menu where you can choose from the following options: “View contact information” (if the number is stored in your contacts list), “Edit number before call”, “Send text message”, or “Remove from call log”.

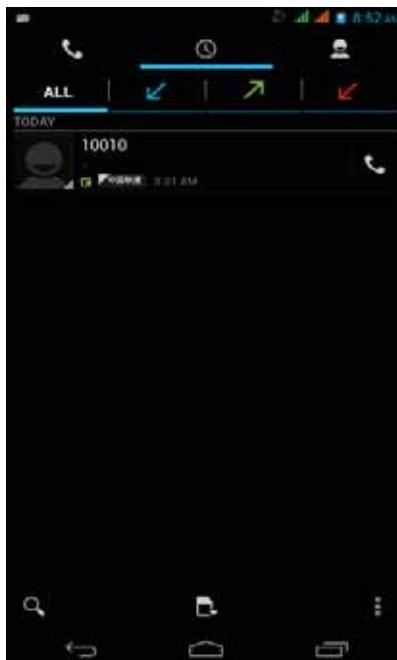

Airplane mode

To enable/disable airplane mode, choose one of the following options:

- Press “Home” > “Menu”, then tap “Settings” > “Wireless controls”.
- Press and hold the Power button and then tap “Airplane mode”.
- In the notification bar, tap the “Airplane mode” shortcut to turn airplane mode on or off.

NOTE: When you disable airplane mode, the phone function is turned back on and the previous Bluetooth and Wi-Fi states are restored.

Operation (Cont.)

Applications and widgets

Enter applications



Click to enter the list of all applications and widgets.
Click on the APPS tab in the top left corner.

- This window will display a list of the applications.
- As you install more applications, the first page will fill up and the application icons will automatically spread onto other pages.
- Swipe left and right to see the other pages.

Operation (Cont.)

Add and manage desktop icons


Add desktop icons

At the application list or widget list, long press any application or widget and the device will shift into desktop, then drag the icon to any place on the desktop.



Desktop shortcuts management

To create a folder on the main screens, just drag and overlay any icon onto another icon, then release. A new folder will be created containing the two applications. It will appear as a black circle with small icons of your apps on top.

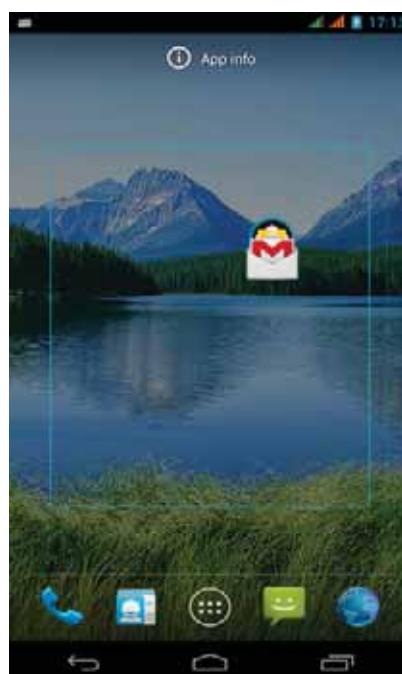

Operation (Cont.)


Then you can view the folder contents by clicking on the folder icon and it will display as pictured below.



You can change the icon positions inside the folder by long pressing them, then dragging to the new position.


If you want to remove an icon from the folder, long press the icon and drag to outside the folder.

To change the folder name, click on the folder, then tap "Unnamed folder". A keyboard will appear. Type the new name, then tap "Enter" to apply it.

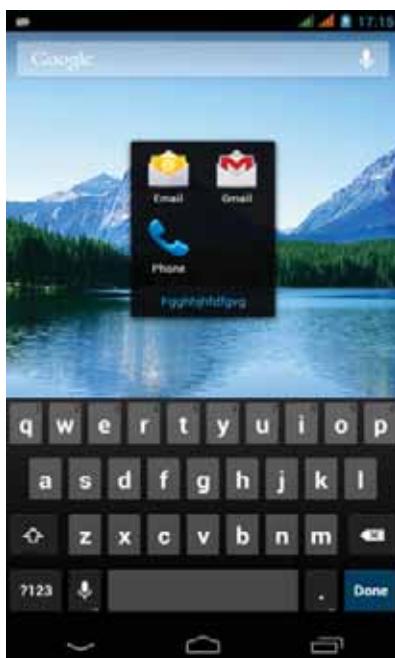

Operation (Cont.)

Gallery	Choose from the pictures stored on your MID camera gallery or any pictures downloaded onto the device.
Wallpaper	Choose from the default wallpapers.
Live Wallpaper	Choose a moving wallpaper
Video Wallpaper	Choose a video to as your wallpaper

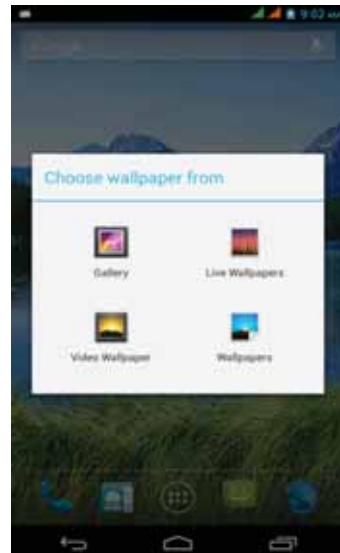

Connect with computer

Connect the device to a computer with a USB cable. When connected with a computer, a message will appear in the notification bar which will describe which USB mode the MID is in.



There are 4 options available to choose from.

- USB Storage
- Media Device (MTP)
- Camera (PTP)
- Charge only
- Built-in-CD-ROM

Some devices or computers may only be able to detect the tablet if 'USB Storage' is selected. After choosing an option, you may need to disconnect the USB cable, then reconnect it. When 'USB Storage' mode is selected, you will need to click on "Turn on USB storage" when the message appears.

NOTE: USB Storage mode will only show the contents of the Micro SD card (if inserted).

If the message does not appear when you connect the tablet to your computer with a USB cable, or if the device does not appear on your computer, try the following.

- Check and ensure that you have turned the tablet on. Check and ensure that your computer is turned on.
- Unplug the USB cable, then reconnect it to the same USB port.
- If your computer has USB ports on the rear, try connecting to one.
- Try a different USB cable.


Operations (Cont.)

Get and install applications

There are two ways to get applications software: download through this device or copy from a computer.

Option 1: Download using a “Market” or “Store” application

Download applications software using applications such as Google’s “Play Store”. Below are photos showing the process of downloading “Angry birds” from “Play Store”.

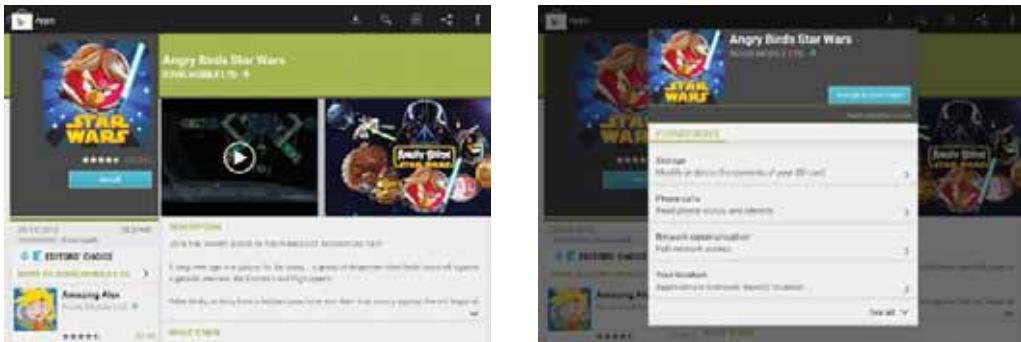

After downloading, the application will automatically install the software.

NOTE: Some applications may not be compatible due to hardware requirements or geographic location limitations of the application.

Option 2: Copy installation file from computer

Copy an application install file (APK) from a computer to the storage of the MID, then find and install them using “File manager”. Tap on the file to install it.

Operations (Cont.)

Uninstall applications



- Open the applications window and tap , then tap on “Apps” from the menu on the left.
- Use the tabs at the top and scroll up and down through the list of applications until you find the application you wish to uninstall.
- Click on the application, then an App info page will appear.
- Click on the Uninstall button and the application will be removed.

Play Store and Calendar error messages

Occasionally when linking a new Google account to your Tablet, you may receive various error messages such as “...error (-101)...” in the Play Store, or your Calendar appointments and events may not appear.


To fix this issue and re-synchronise the Tablet with your Google account, please follow the steps below.



1. Open the applications window and tap , then tap on “Apps” from the menu on the left.
2. In the window on the right-hand side, tap the “All” tab at the top.
3. Scroll up and down through the list of applications until you find “Google. Services. Framework” and click on it.
4. Tap the “Clear data” icon.
5. Click on “Yes”.
6. Press and hold the Power button for 2 seconds.
7. Tap “Yes” to agree to turn off the Tablet.
8. Once the Tablet has finished shutting down, turn the Tablet back on.
9. Open the “Play Store” app and wait for the images to load. Once they have finished loading, press the Back button.
10. Wait for 30 seconds then reopen ‘Play Store’ app.
11. You may now open “Calendar” and check your entries are there, or open “Play Store” and download the application you that was giving the error message.


Settings

The setting function on this Tablet is like that on a computer control panel. You can access the settings page from the notifications bar or “Setting” icon in the applications list.

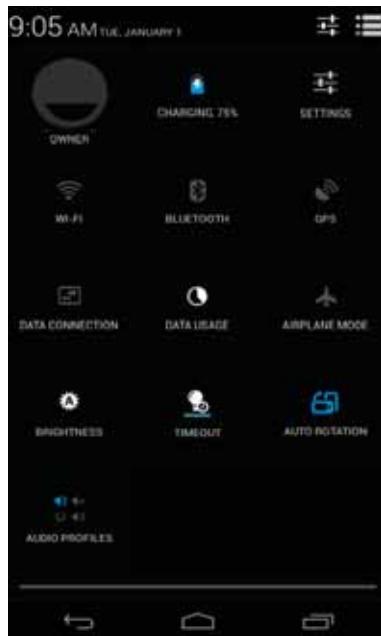

Wireless and networks


The “Mobile Networks” section is located under the “More” option.

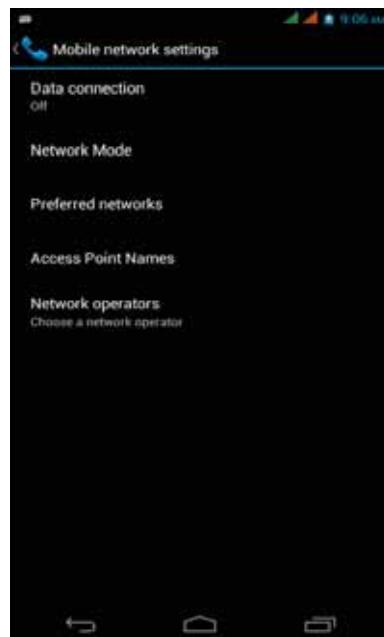

- To activate data using your SIM card select “Data connection”.
- The remaining settings should be left with default values unless your local service provider advises you otherwise.

Settings (Cont.)

- Tap “Wi-Fi” to open the Wi-Fi function.
- To the right of the “Wi-Fi” label is the button to enable and disable Wi-Fi.
- Press the On/Off button to turn the Wi-Fi function on or off
- Click on the network you wish to connect to.

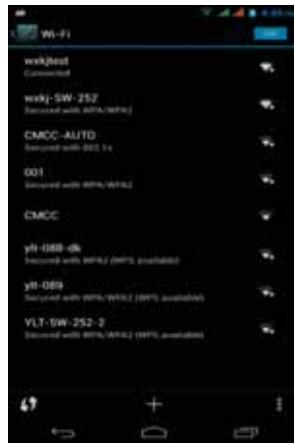

Connecting Wi-Fi

When the Wi-Fi network is not protected, it will connect with the device automatically. For information security reasons, be careful using unprotected Wi-Fi sources. When you click on a protected Wi-Fi, a window will pop up to input a password.



There are more useful advanced Wi-Fi settings when you choose to “Show advanced options”.



Settings (Cont.)

Bluetooth

Enable or disable bluetooth



1. Tap “Settings” at the main menu or applications list.
2. In the “Wireless & networks” menu, tap “Bluetooth”.
3. Tap the On/Off button in the menu on the left to turn Bluetooth on or off.

Change Bluetooth device name

By default, the Bluetooth device will have a name. To make your devices more easily identifiable, you can rename it as follows.

1. Go to “Settings” > “Wireless & networks” and make sure Bluetooth is on.
2. Choose “Bluetooth”.
3. Input the new name.

Pair with other Bluetooth device

1. Tap “Search for devices”, the device will scan for all available Bluetooth devices. If it cannot find the one you want, check if the other device Bluetooth is on.
2. Tap a Bluetooth ID to pair. If it is password protected, input the password at both devices.

Settings (Cont.)

Device

Audio profiles

Set all sound options here.

Click on “Volumes” to change the volume levels for multimedia players and applications, and also for notifications and alarms.



Display

You can set brightness, wallpaper, auto-rotate, and font size options.




Settings (Cont.)

Storage

Internal storage: space for installation of applications (APK software)

External SD: storage space on the removable SD card (if inserted)

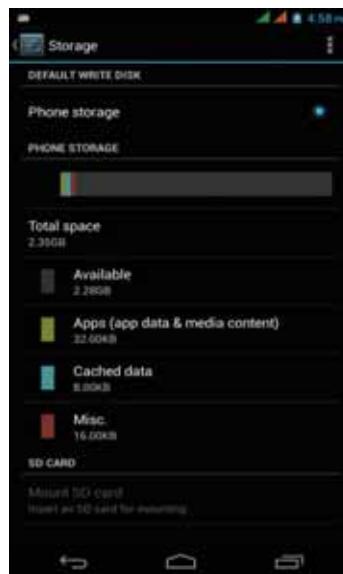


Battery

Show battery balance and consumption.



Applications

Here you can manage applications, such as uninstall them or clear application data.

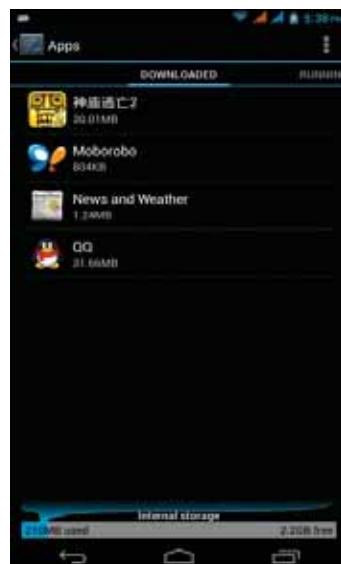


Settings (Cont.)

Personalisation

Location access

Allows you to enable or disable the various location services such as GPS.

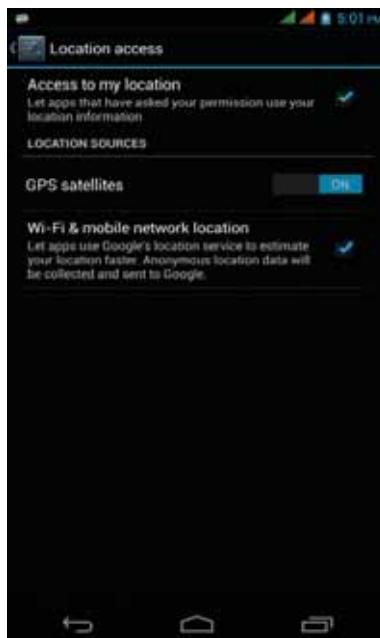

Settings (Cont.)

Security

The security menu contains many useful options for securing your Tablet and data.

Screen lock: Change or set a protection method for locking the screen.

Owner info: Enter text that will be displayed on the lock screen. This is a message that others can see without having to unlock the phone.



Encrypt phone:

Apply encryption to all data on the Tablet. Also requires you to enter a PIN or password to use your Tablet each time you turn it on.

WARNING: Data cannot be recovered if you forget the PIN or password you set!

Unknown sources: Enable this if you wish to install applications (APK files) that are not from the "Play Store".

Settings (Cont.)

Language and input


In this area you can change the system language and change settings for the keyboard.



Keyboard

Some applications can open the keyboard automatically; others require you to click in an input field/area first.

You can hide the keyboard by holding down the Back button.

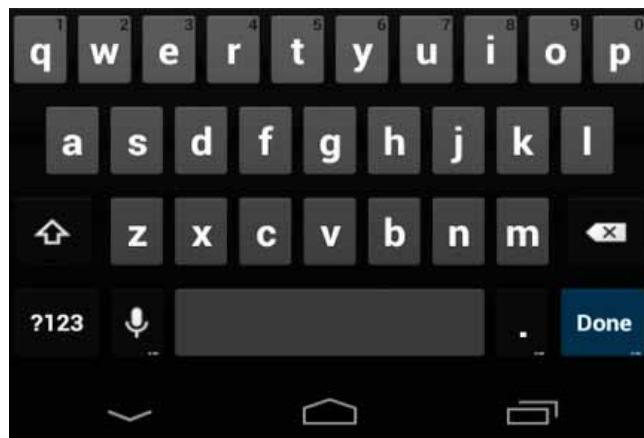

Settings (Cont.)

Text selection - Copy, Share, Find

- Press and hold on one of the words you wish to select. The word will highlight in blue and a blue tab will appear at both ends.
- Press and drag the blue tabs to highlight the text you wish to select.
- Choose the task you wish to perform from the menu that appears at the top of the screen.

Text selection - Paste

- Once you have used the above method to copy text to the clipboard, press and hold on a field in an application or area of a document where you wish to input the copied text.
- A blue tab will appear, drag it to the position you want the text inserted, then click 'Paste'.

Other operations

To input capital letters:

- Press the Shift  button or keep pressing on Shift  while inputting letters.
 - To switch to capital letters:
 - Press and hold the shift  button while in lower case mode, the icon will change into . Press again to switch back to lower case mode.
 - Figures and numbers:
 - Press the "?123" button. You can then press the "~\{" button for more choices.
- Frequently used symbols:
- Press and hold a symbol button to enter the alternate symbol displayed in grey above it.
 - Press Shift  and click the special symbol which is shown in grey at the corner of any letters to input the symbol.

Mouse/trackpad

This allows you to adjust the pointer speed of any attached mouse or trackpad device, such as a Bluetooth mouse.

Settings (Cont.)

Backup and reset

Reset to factory settings: When some applications or the MID itself do not work properly, you can use this function to return the MID to factory default settings. But you will lose all user installed applications and data. It is therefore important that you back up important data first.

System

Date and time

Contains options for setting the time zone, date and time.

Accessibility

Contains settings for easy use of applications and services (if installed).

About

Displays some information about the device.

Camera

The camera has photo-taking and video-recording functions. There are two cameras on the device.

You can find your camera photos and video footage at > Applications > Gallery, or see camera videos and all other video files at > Applications > Video Player



Click  to take photos.

- The first time you open the Camera application a short animation will play showing you how to use the camera options..

Downloaded files management

When downloading files, you can check download status, view, reopen or delete them using “Download management”.

Manage downloaded files

- Applications > Downloaded files
- Tap any one to open it.



- Choose any file you want to share with others, then tap “Sharing”  , then choose a way to share.
- Choose any file you want to delete by tapping  .
- Click “By size” or “By date” to array the files.



Settings (Cont.)

Radio

To use your Tablet to listen to the radio, first inset the earphones, then tap “FM Radio”.

Selectable channel



- Tap “OK” to select the or icon to scan through the frequency band or fine-tune a channel.

Adjust the volume

- Tap “Menu”, then select “Mute” to mute the sound; select “Mute” again to restore the sound.
- With the earphones disconnected, tap “Menu”, then select “Speaker” to listen to the radio volume through the external speaker.

Scan and save

- Press the Setting button and select “Scan & save”.
- If you tap “OK”, all presets will be removed and the radio will scan for available channels.

Specifications

CPU	MTK6572 Dual Core 1.2GHz Cortex A7
OS	Android 4.4.2
Display	7.0" WSVGA
Resolution	1024 x 600 resolution
Internal memory	Built-in 4GB
RAM	512MB
Touchscreen	Capacitive screen (5 points)
Battery	Built-in 2500mAh
WiFi	IEEE 802.11 b/g/n
Bluetooth	Version 2.1 + EDR
SIM	Dual SIM / Standby
2G / 3G module	2G: GPRS/EDGE, 3G: WCDMA/HSDPA
Frequency	GSM (850/900/1800/2100) MHz
GPS	Built-in GPS module
G sensor	Screen Rotation sensor
Cameras	Front: 0.3MP, rear: 2.0MP Auto Focus
2XMicro SD Card	Supports up to 32GB
Microphone	Built-in microphone
I/O Ports	1 x 3.5mm Handsfree Headphone socket 1 x Micro USB 1 x Micro SD Card 1 x Mini SIM Card 1 x Micro SIM Card

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types TABLET PC / (FCC ID: 2AFYQ-HQNEPTUNE70)

has also been tested against this SAR limit. SAR information on this and other pad can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.